



Wi-Fi Solar outdoor infrared Audible and Visual alarm

Introductions for Installation and Use

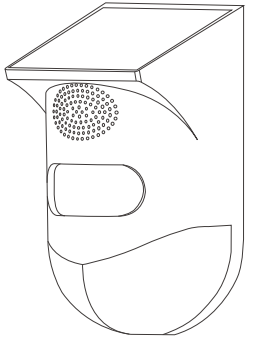

I. Product structure

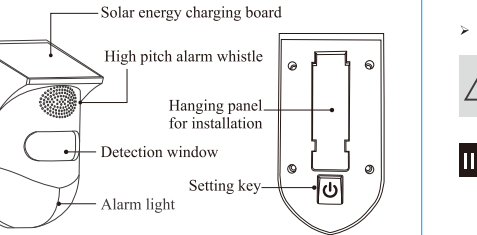

II. Alarm mode setting of the function key (8 types)

➢ Long press and two quick beeps: entering network pair state

One short press

➢ Give out beep once: learn the detector and the remote control, flash for 0.8 seconds/time, trigger the detector to learn, and automatically exit to gear three after 20 seconds timeout (40 detectors can be learned)

➢ Give out two beeps: delete the detector and the remote control, flash slowly for 2 seconds/time, trigger the detector to delete, and automatically exit to gear three after 20 seconds timeout

➢ Give out three sound: 24-hour audible and visual alarm mode


➢ Give out four sounds: Mode of 24-hour flashing without audible and visual alarm

➢ Give out five sounds: the mode of smart recognition of audible and visual alarm in daytime or at night (it does not alarm due to induction in daytime and enter alarm state

- automatically at night).
- Give out six sounds: The mode of flashing at night without audible alarm (without audible alarm and only flashing).
- No sound and always on: Shut down

It enters the third type alarm mode of 24-hour alarm. Please leave the warning region. If the system is kept triggered, detection alarm will not be performed.

III. Remote control functions

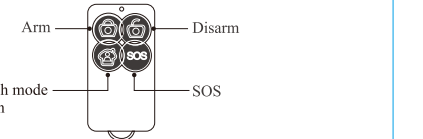

	Enter the 24-hour alarm mode, the detector works
	Cancel the alert, the detector does not work
	Switch the alarm mode
	Sound and light alarm


IV.Tuya Smart

1.Download APP




- Scan the two-dimensional code and download “Tuya Smart or (Smart Life)”.
- IOS: please download the “Tuya Smart or (Smart Life)” at apple application market.
- Android: please download the “Tuya Smart or (Smart Life)” at application market.


2.Register/login Tuya Smart

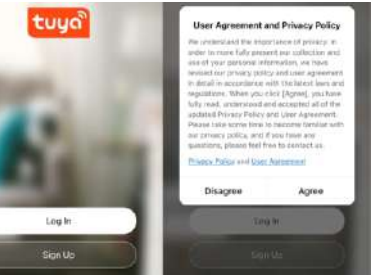


3.APP and Wifi Solar outdoor infrared Audible and Visual alarm connect each other as below.

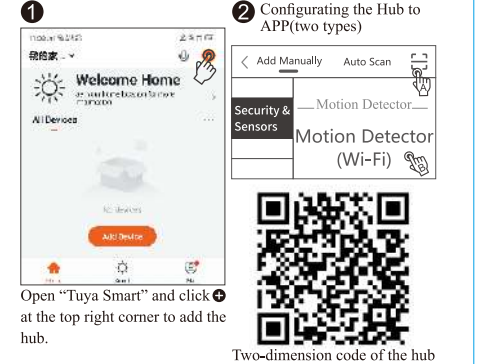

Open “Tuya Smart” and click at the top right corner to add the hub.

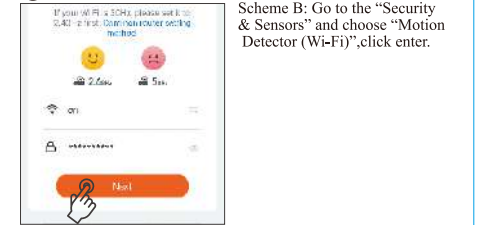

Input WIFI password and click next step.

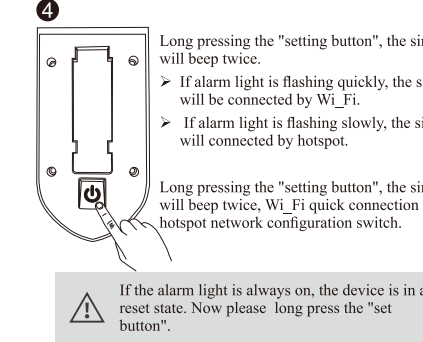

If the alarm light is always on, the device is in a reset state. Now please long press the "set button".

Two network solutions


Scheme One: Wi-Fi quick connection

Scheme A: click on the top left corner to scan the hub code.

Scheme B: Go to the “Security & Sensors” and choose “Motion Detector (Wi-Fi)”,click enter.




Scheme Two: hotspot connection

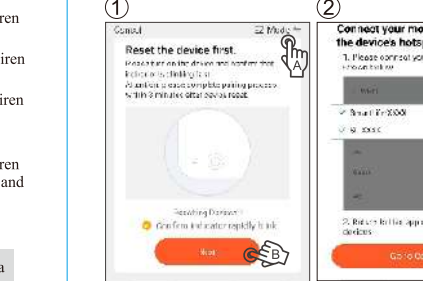

A: Click on the upper right corner Switch AP Mode

B: Click Next

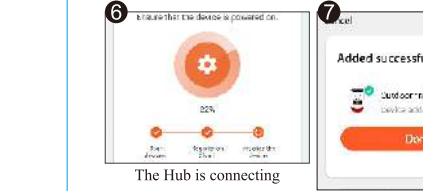

After the network pairing successful, please shut down and power on the device again. Or please be patient to wait for the device to exit the network pairing state automatically.

V. Installation guide

General Installation principle

Although the detector has powerful performance, the following improper installation manner should be avoided as possible during the installation process to ensure that the detector can play better and more stable detection performance!





Don't install it beside road.

Far away from high voltage

Don't install it at an insecure place.

Ensure to install at a place with sunlight to charge.


About the installation height

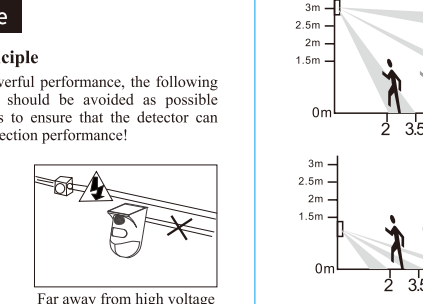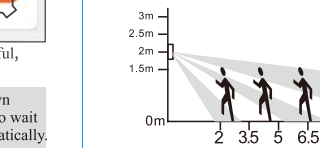


Low height Insufficient distance

VI. Installation steps

 ① Draw a line on the installation position to make the positioning hole. Then hammer it into the expansion pipe as the figure below:



② Screw in the screws with a cross screwdriver in clockwise direction as the figure below:

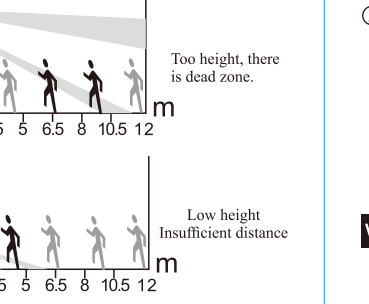


Low height Insufficient distance

VI. Installation steps




① Draw a line on the installation position to make the positioning hole. Then hammer it into the expansion pipe as the figure below:



② Screw in the screws with a cross screwdriver in clockwise direction as the figure below:

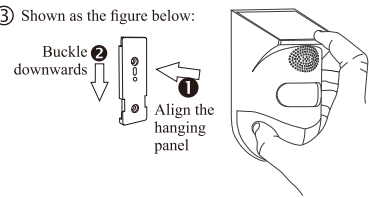

VII. Test alarm

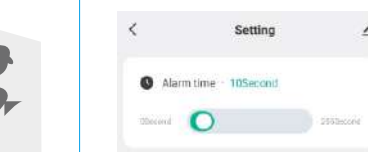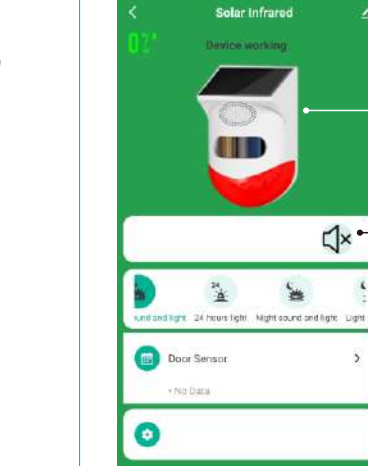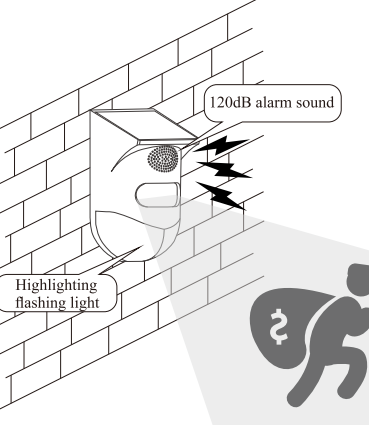

When the solar infrared power is less than 20%, the APP will push the low-voltage alarm

When the alarm duration is over, the device goes to sleep

Muffer alarm: stop the alarm

Alarm duration is set during equipment operation; The alarm duration cannot be modified during device hibernation