 


4G

User Manual 4G Router

 
Please read the manual carefully
before using the product.

1.product description

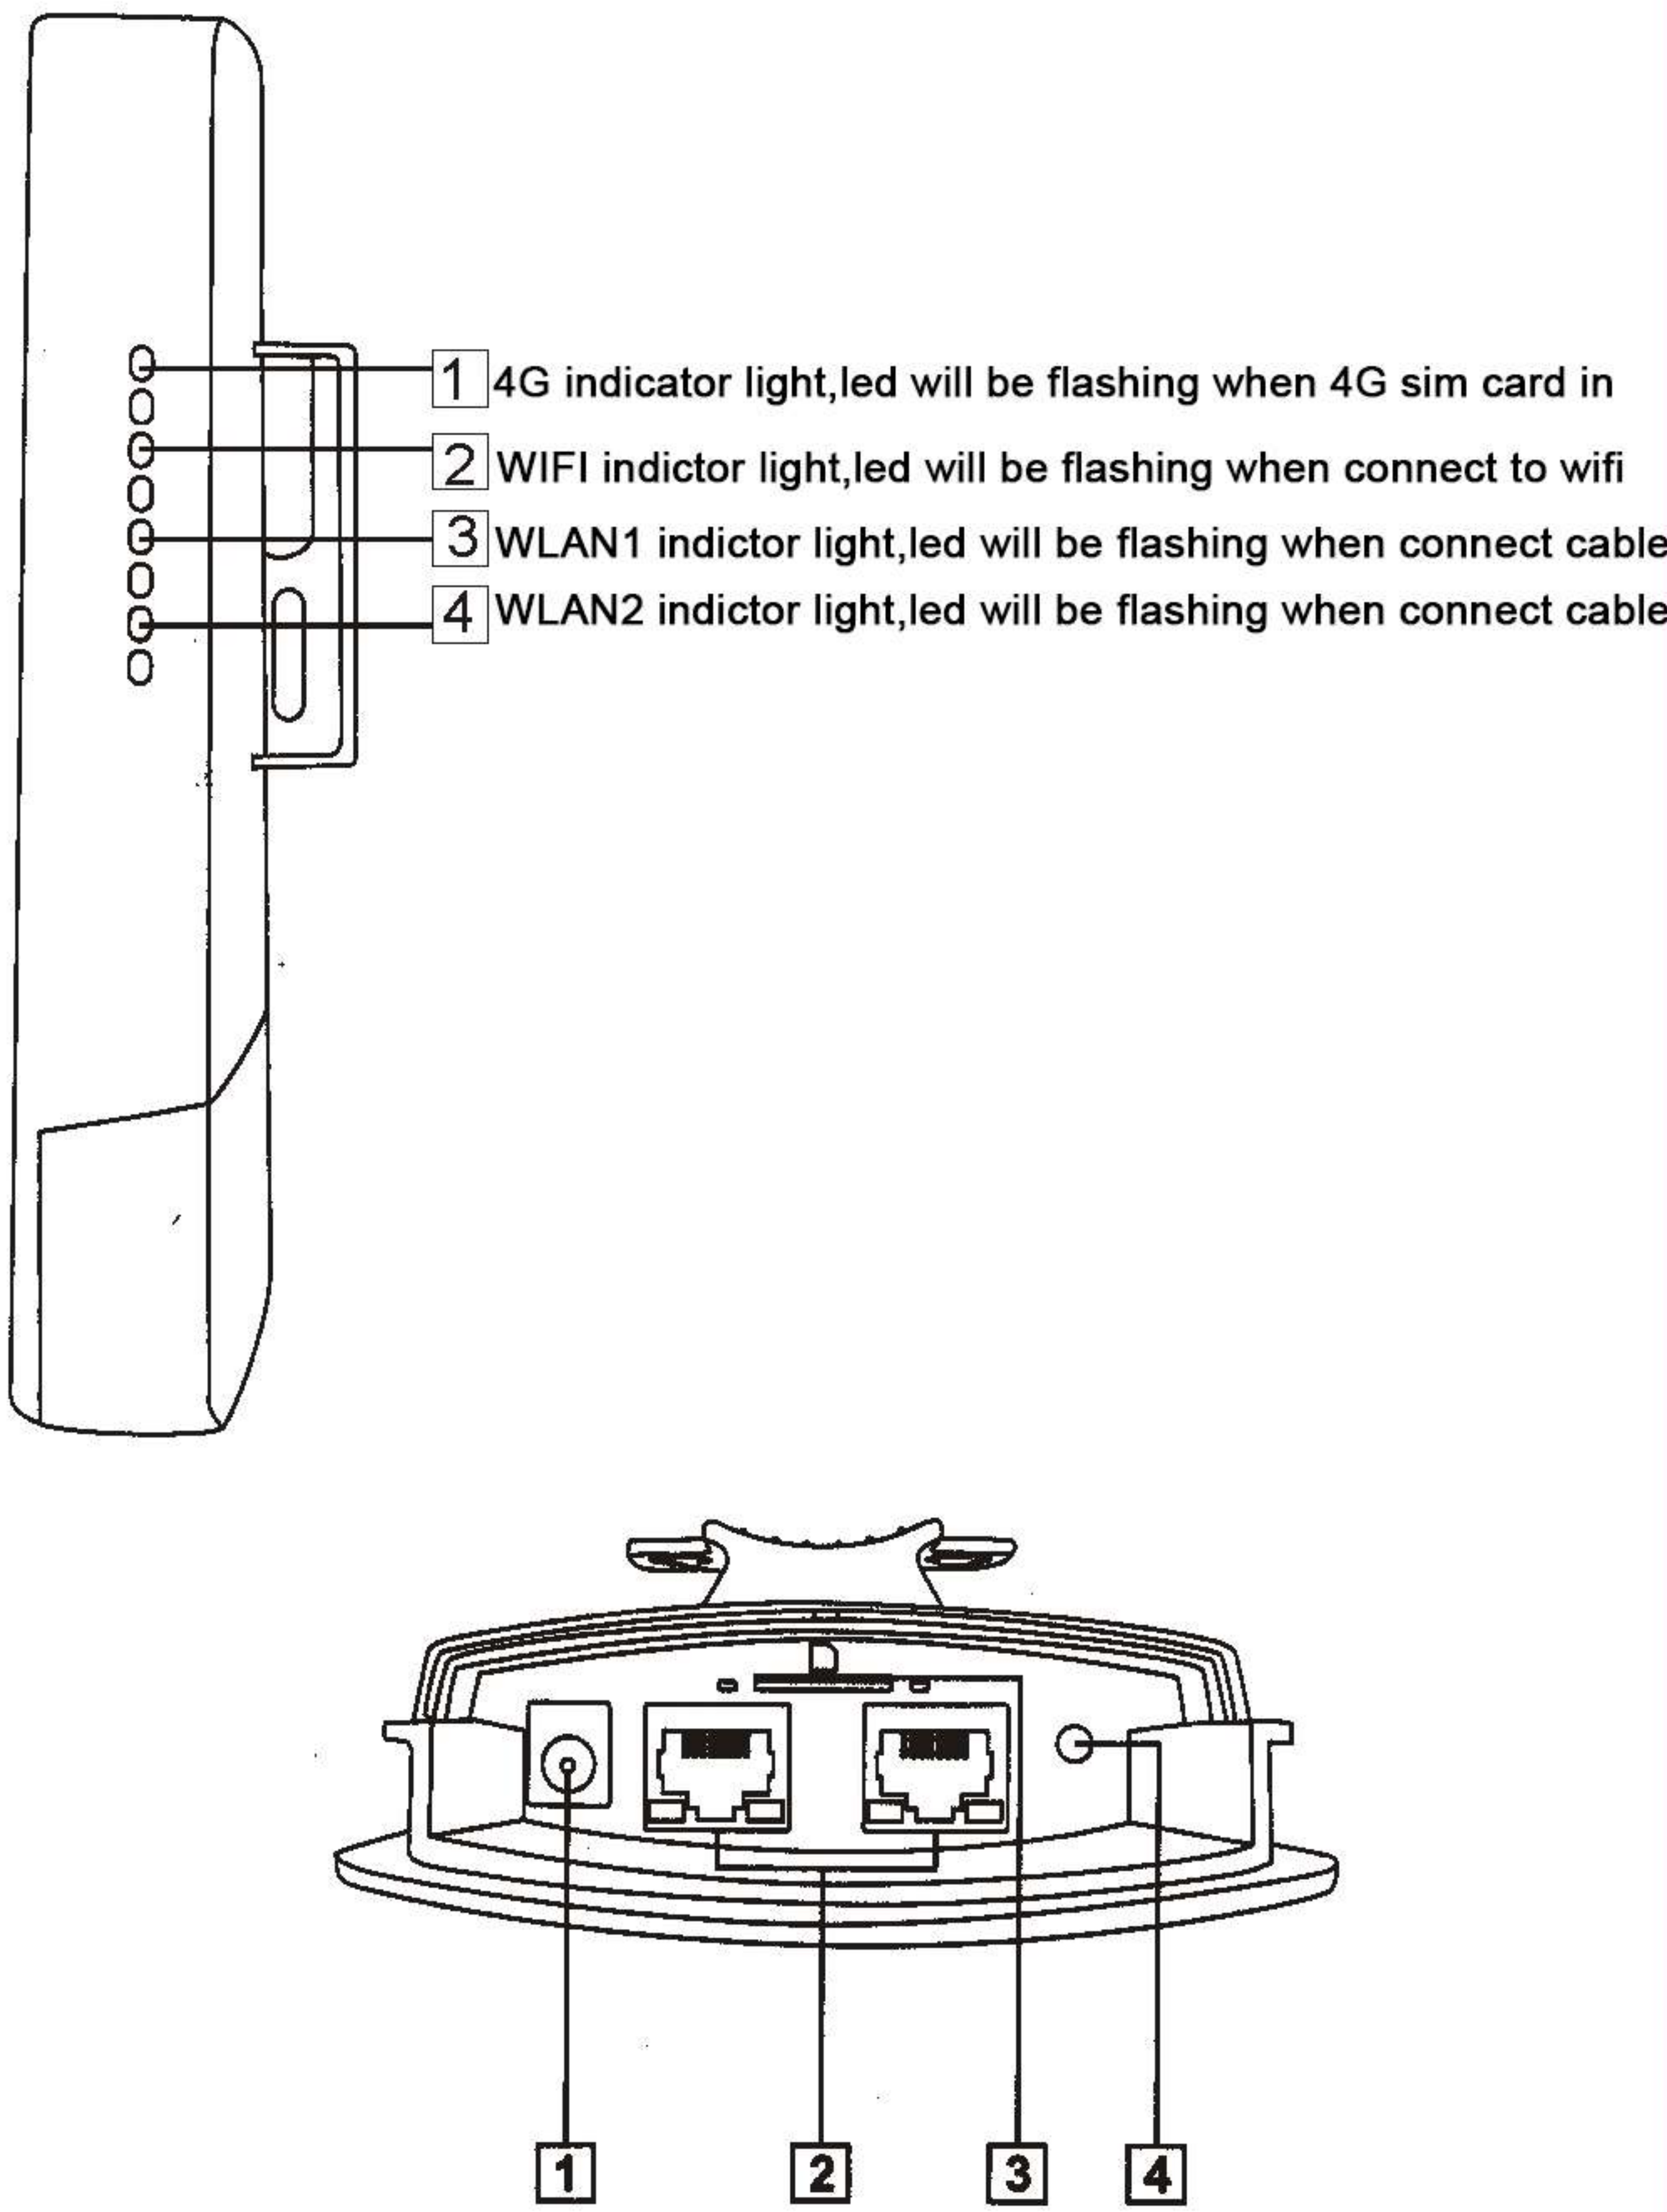


- 1 Power interface, Power:12V 1A
- 2 Ethernet interface,Near DC port is Wan&Lan port, Another is Lan port only.
- 3 SIM Card Slot: Card side: Nano SIM only
- 4 Reset Button:Long Press 5S,Device Will be restored to factory settings

2.Working diagram

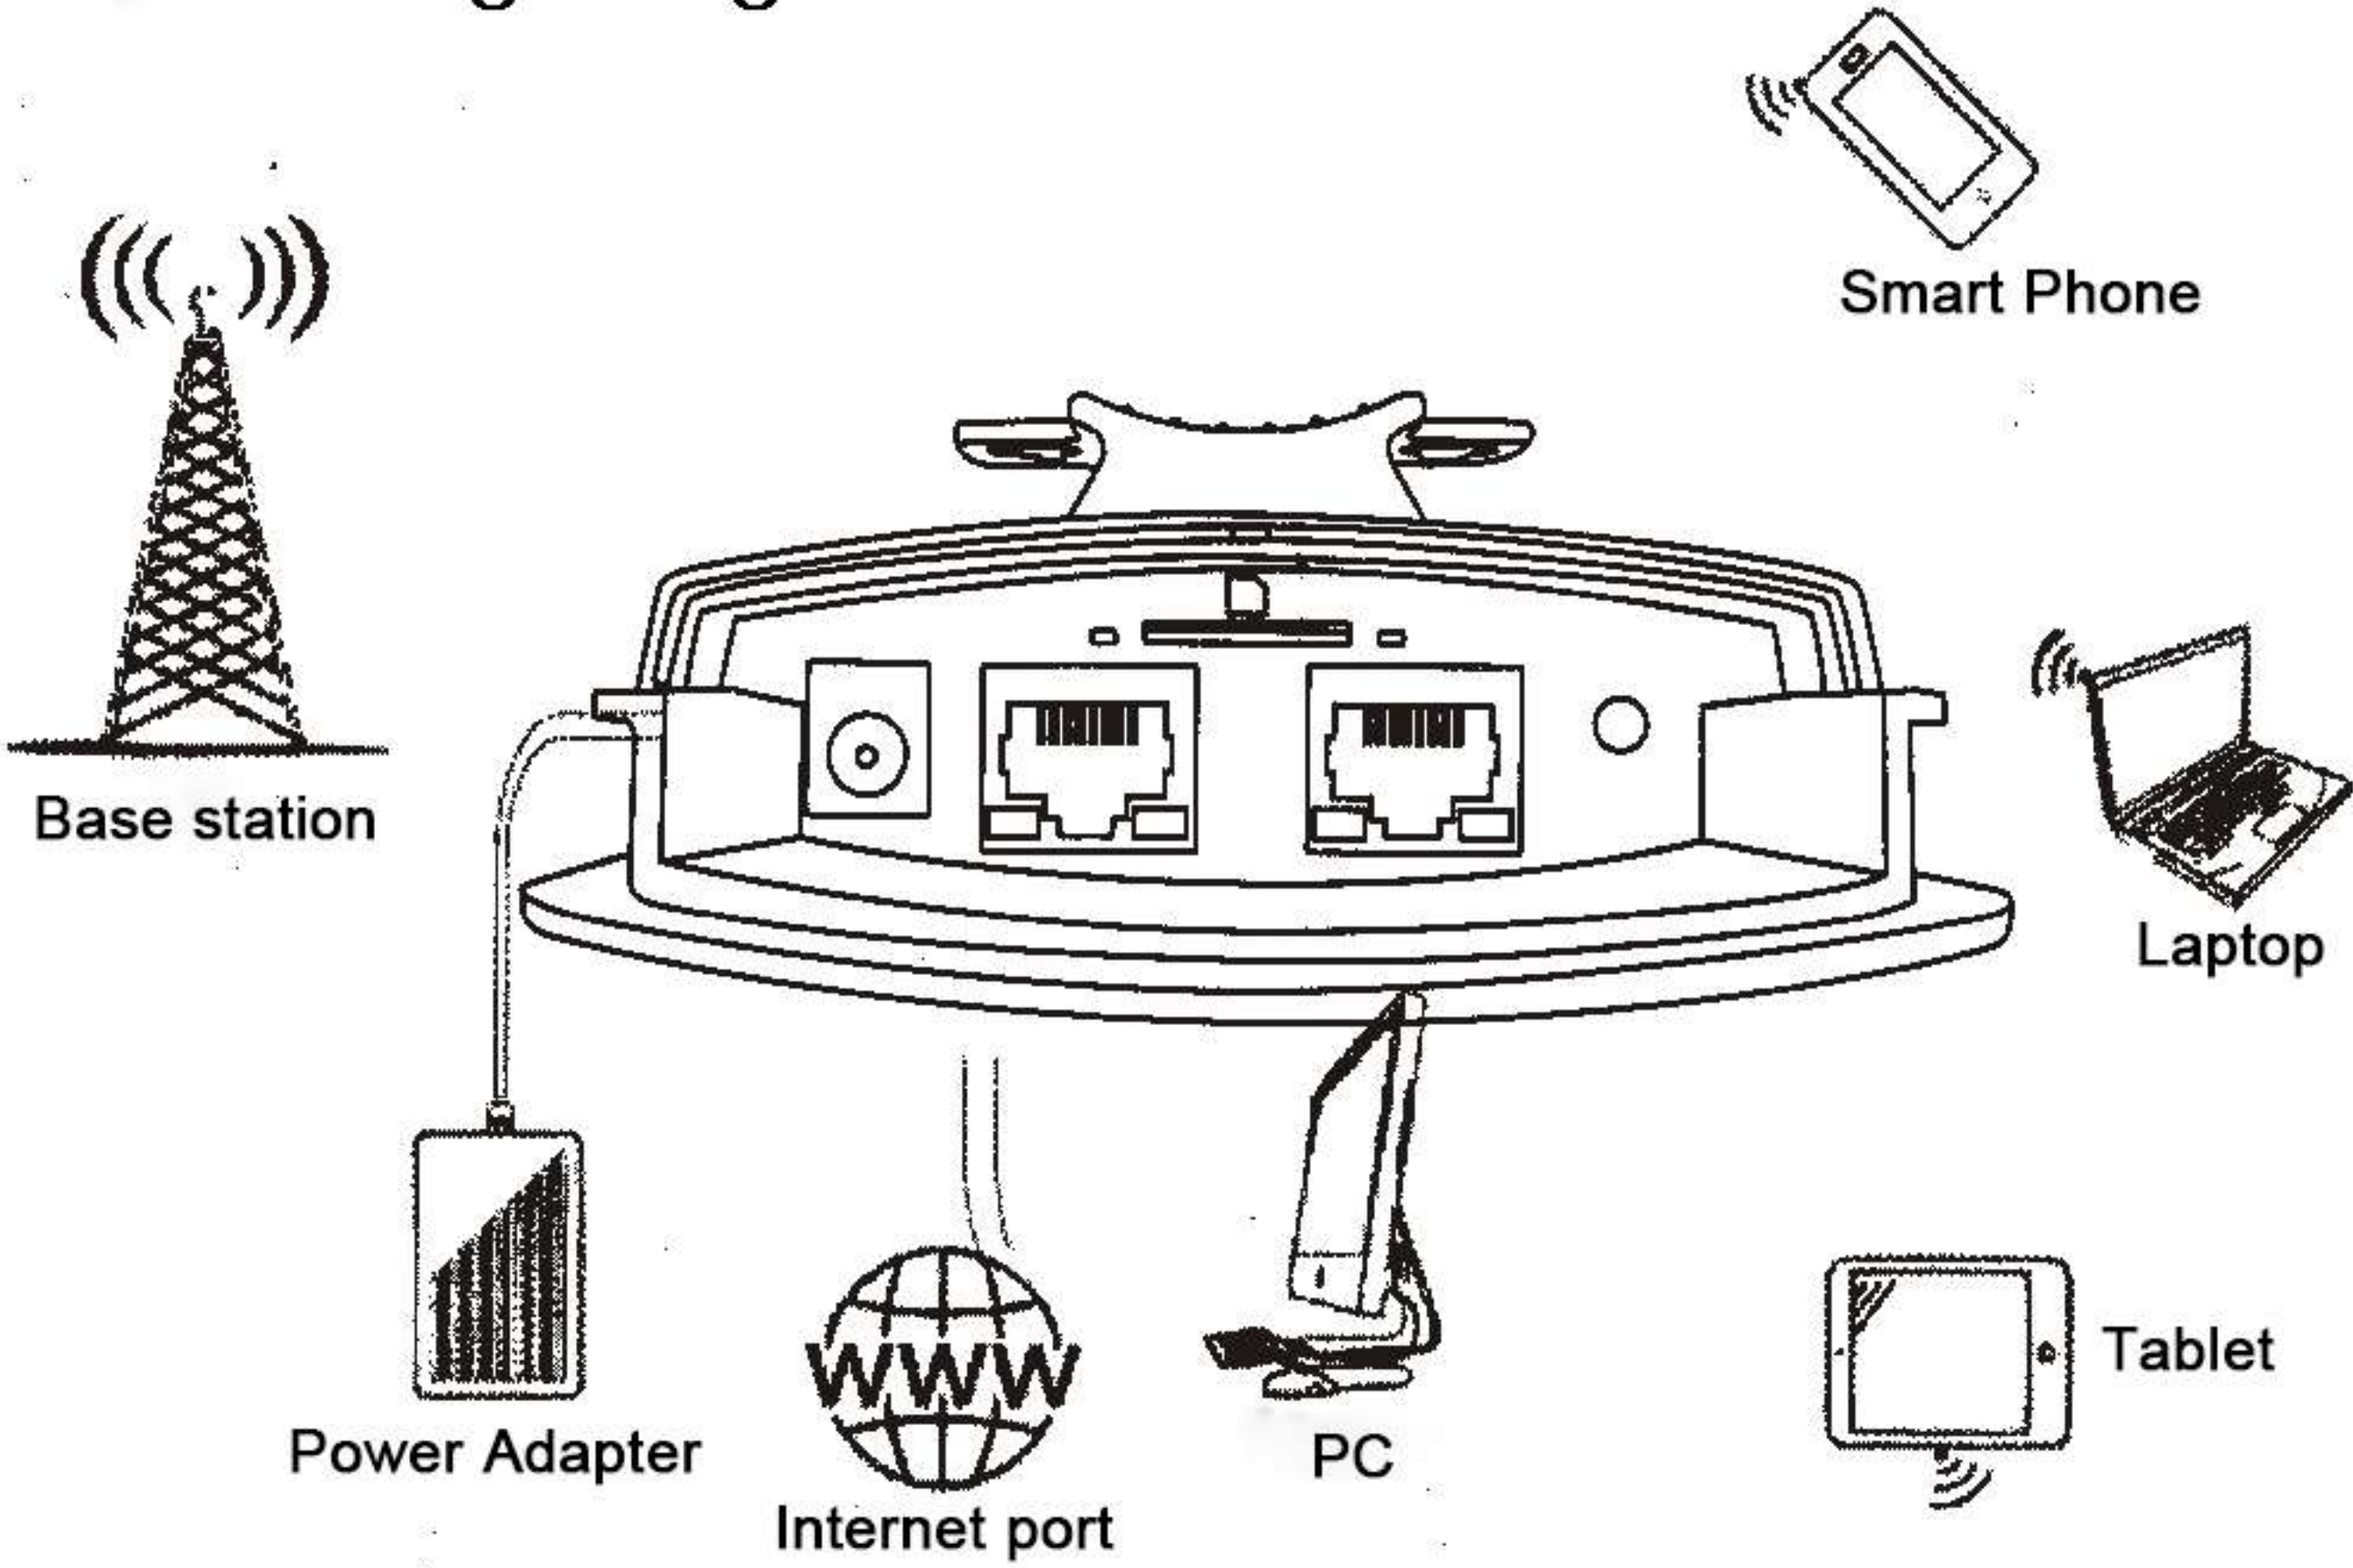



3. Ethernet connection settings.

 - 1.Open device package,connect power adapter,power on device.
- 2.Connect the network cable to the Wan port.LAN port indirctor on.
- 3.Connect your device to Lan port or MIFI**** hot point, you can start internet use.

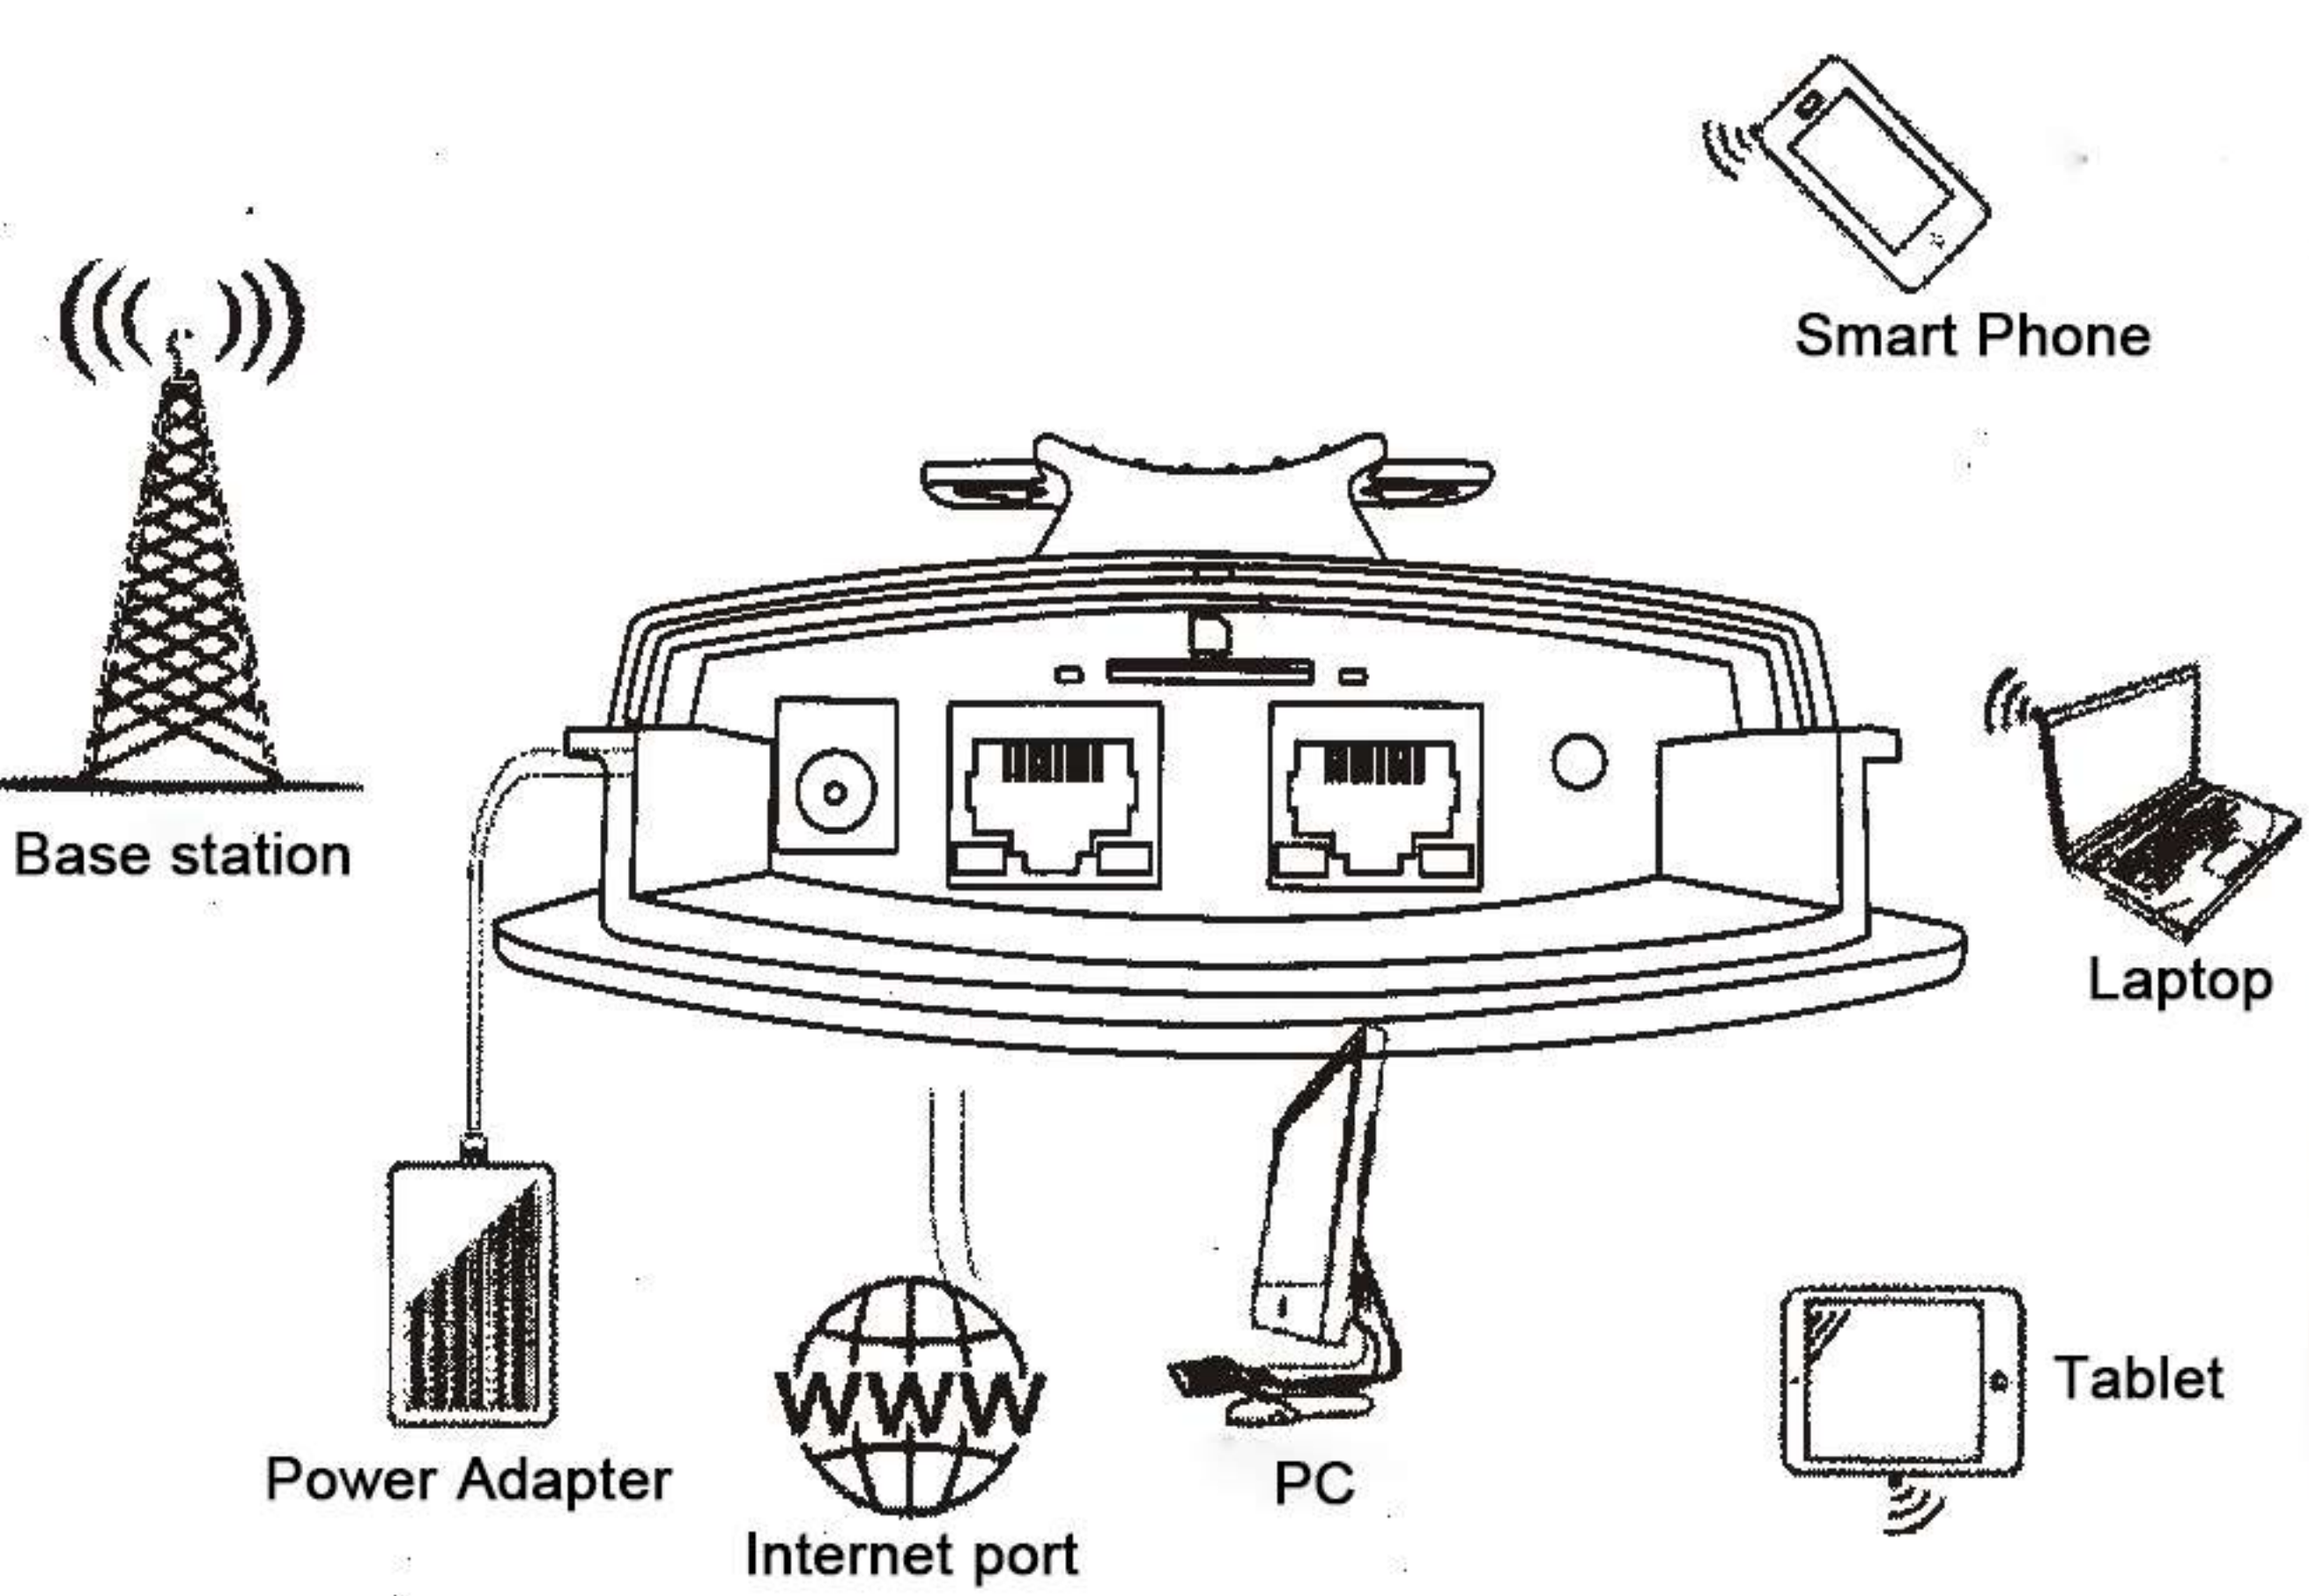

4.Use 4G/3G sim card connections Instructions

  - 1.Put NANO SIM Card into Device,Careful the card direction
- 2.Connect power adapter.
- 3.Device will be power on, indicator will be on,device is working.
- 4.Connect your Phone or PC to LAN port or MIFI***** hotpoint,you can use the 3G 4G Web surfing.

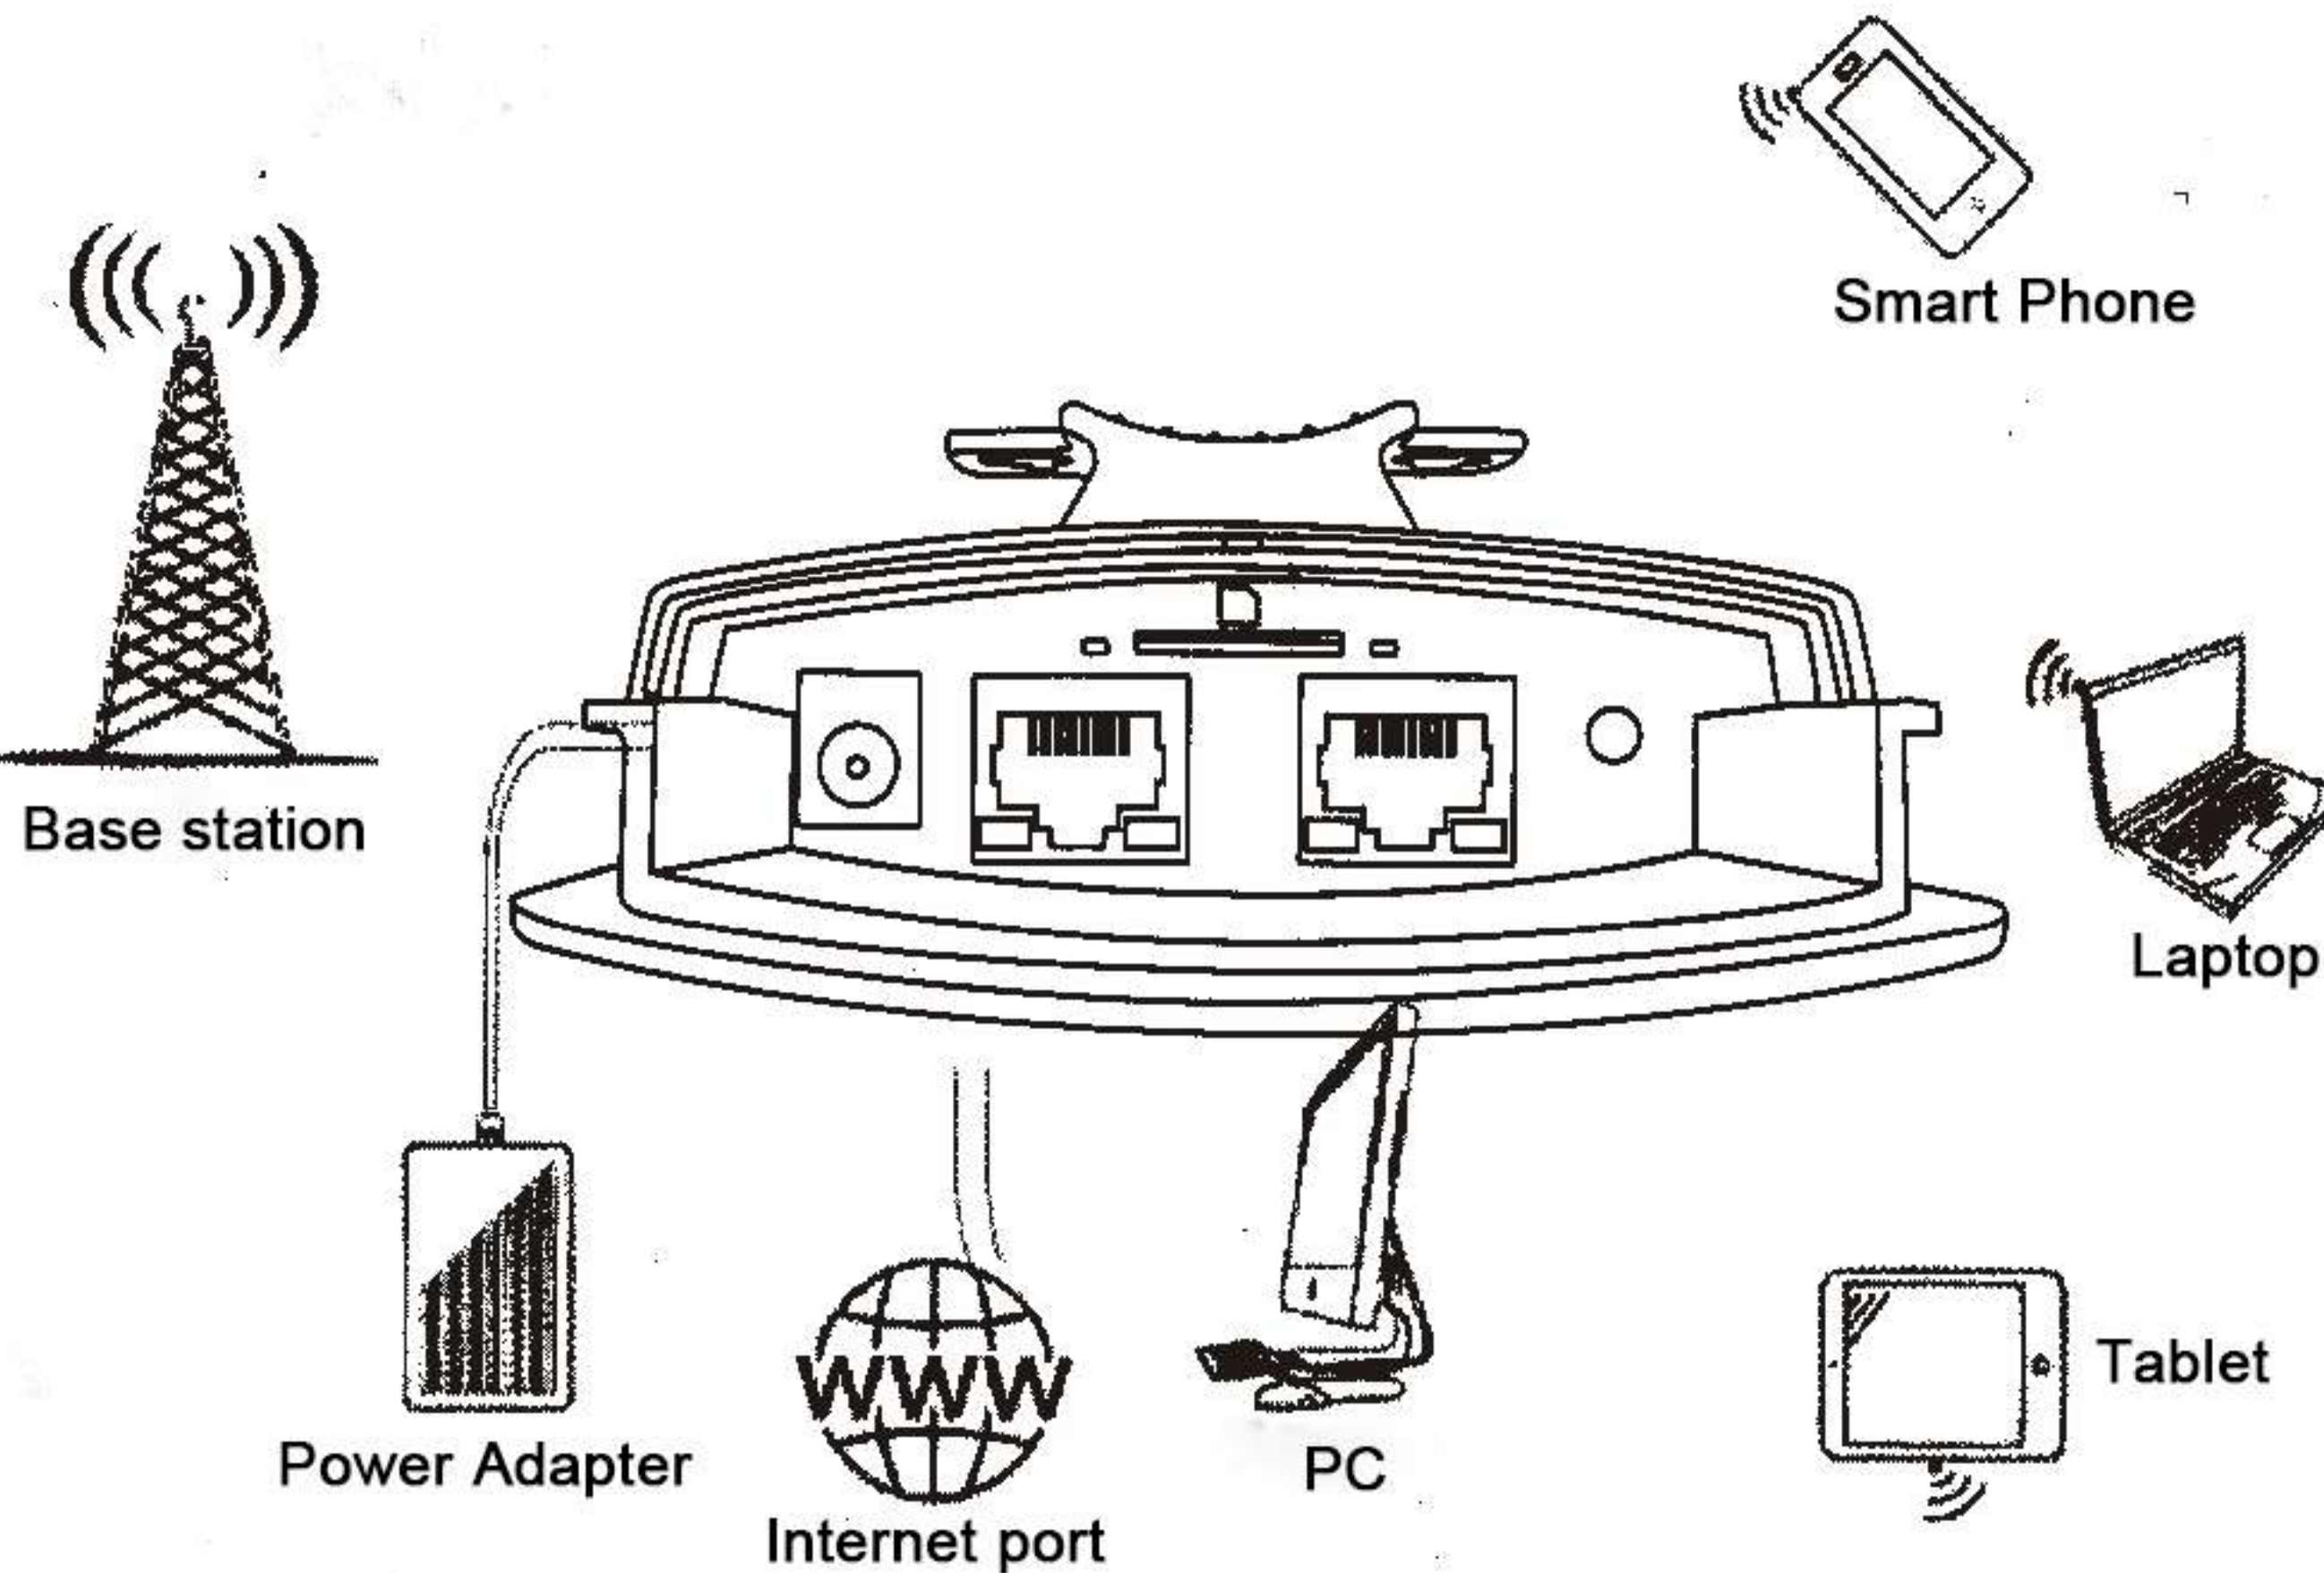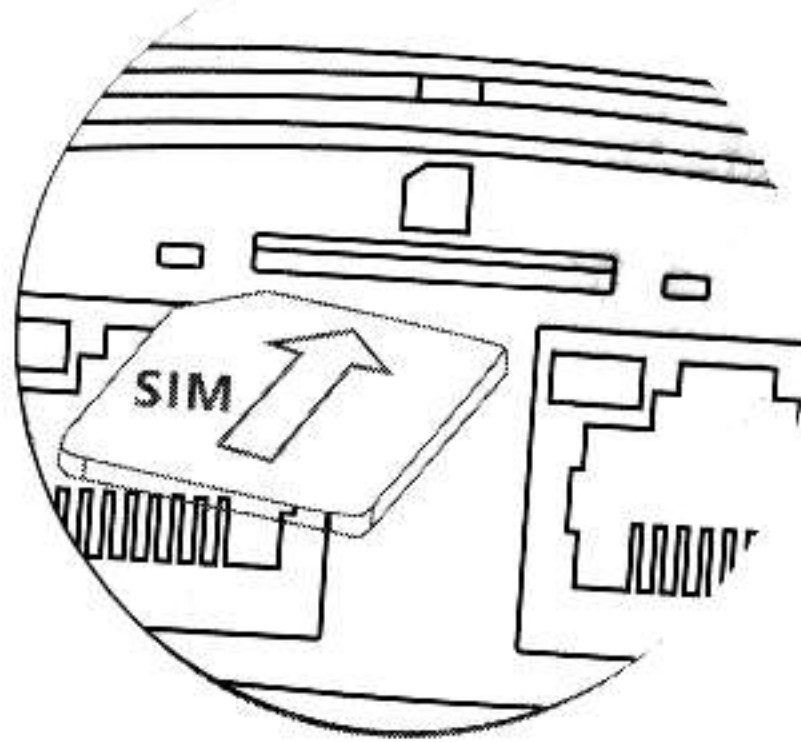


5. Wifi Connection and settings.

1. Confim Device working normally.
2. Connect your Phone to device hot point MIFI***** Hotpoint name and password was written on the device sticker.
- 3.Input password to connect 4G router hotspot.

CPE 4G-LTE Wifi Router
SSID:MIFI_xxxx
Login/password:admin
Router IP:192.168.100.1
WIFI KEY: 1234567890


SSID: MIFI_xxxx
WIFI KEY: 1234567890

 (Different user device different Set interface,see the below picture)

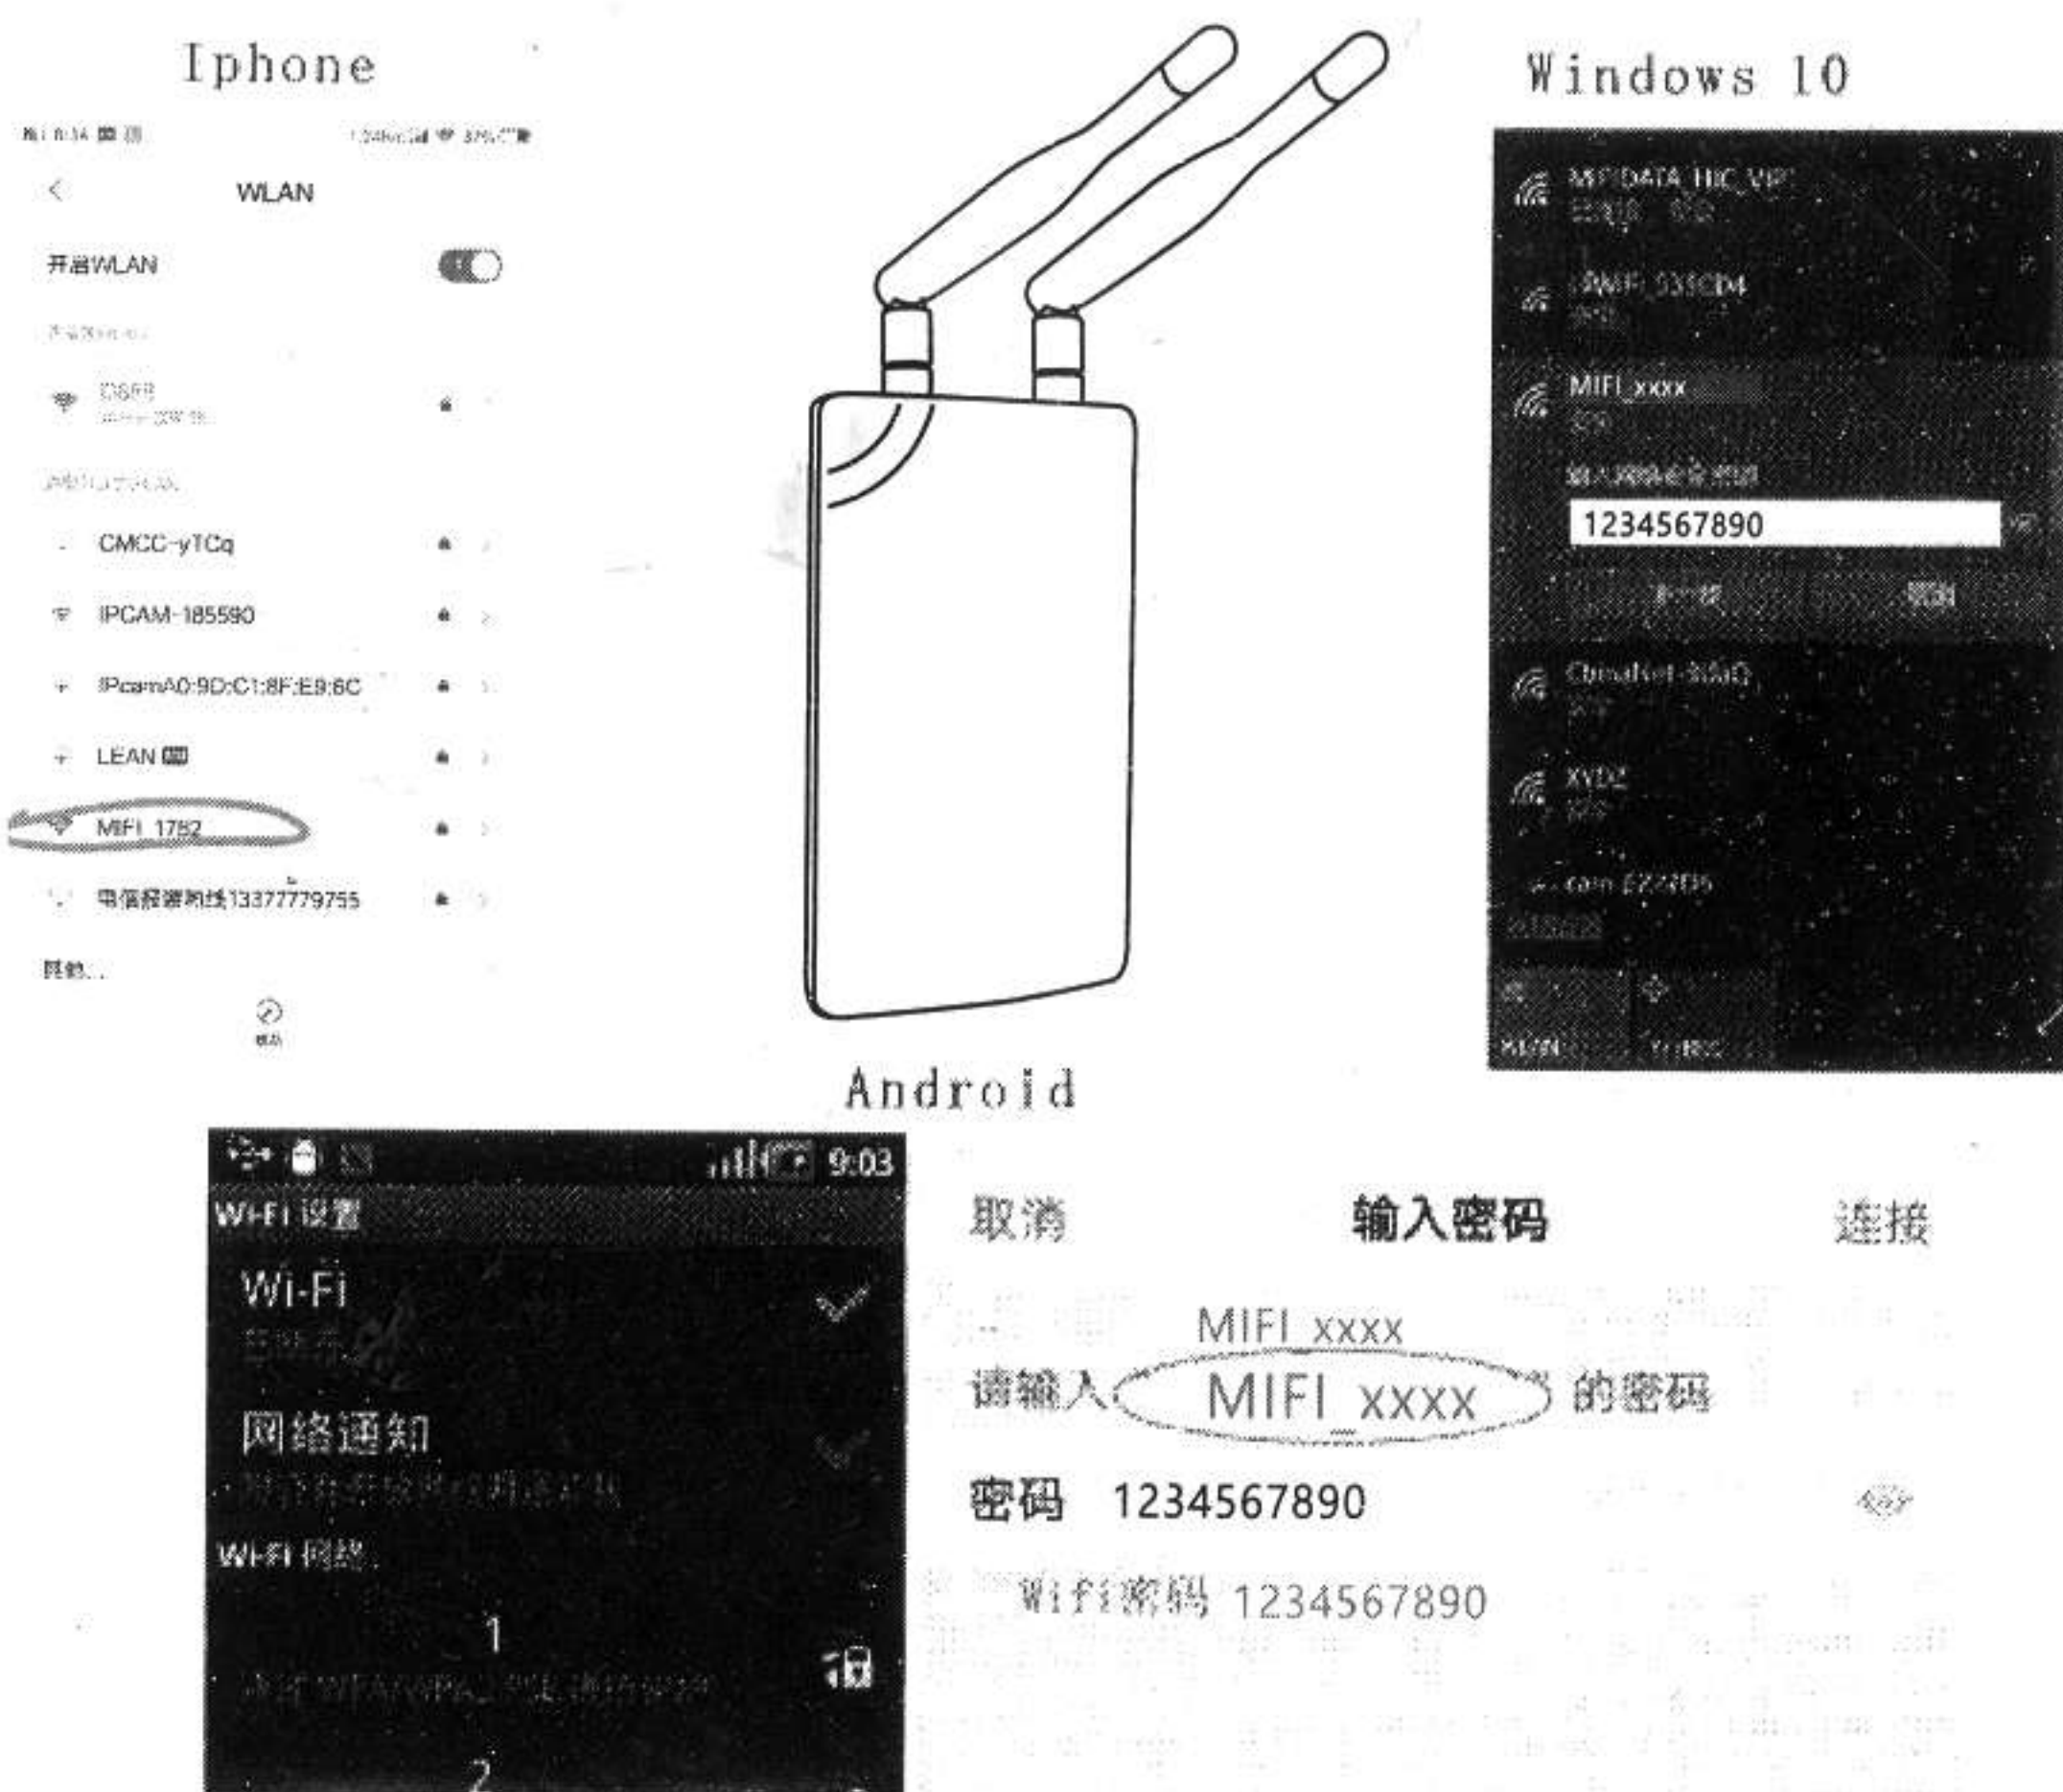


6.WEB Connection and settings

 - 1.Connect your Phone or PC to Device hotpoint MIFI***** Password is 1234567890
- 2.Open your phone or PC browser.
- 3.Input 192.168.100.1, login the 4G router backstage, user name is admin,password is admin.
- 4.Enter the WEB UI interface,you will see router setting,wifi setting,Firewall,System settings,Signal strength ect settings.According to personal needs,set as you want.

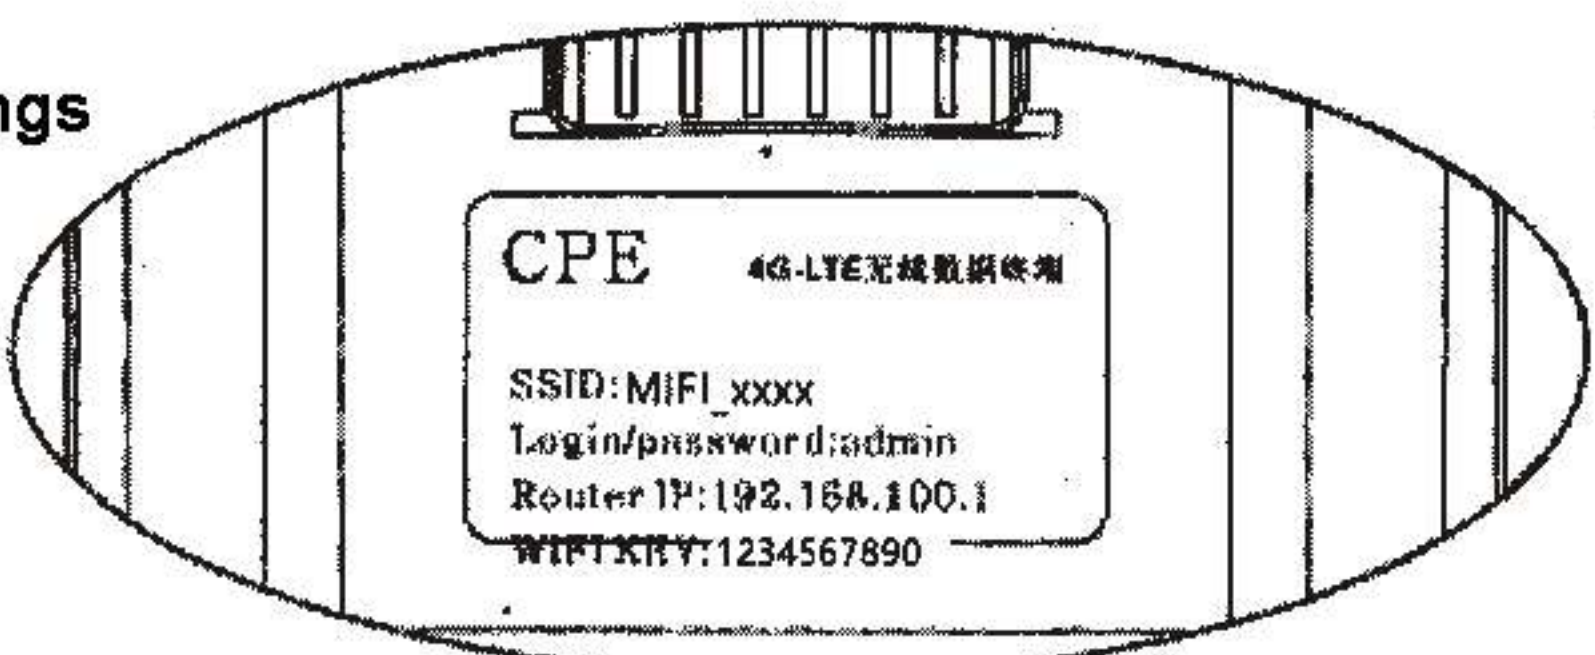

IP: 192.168.100.1
User: admin
Password: admin

 Main interface icon

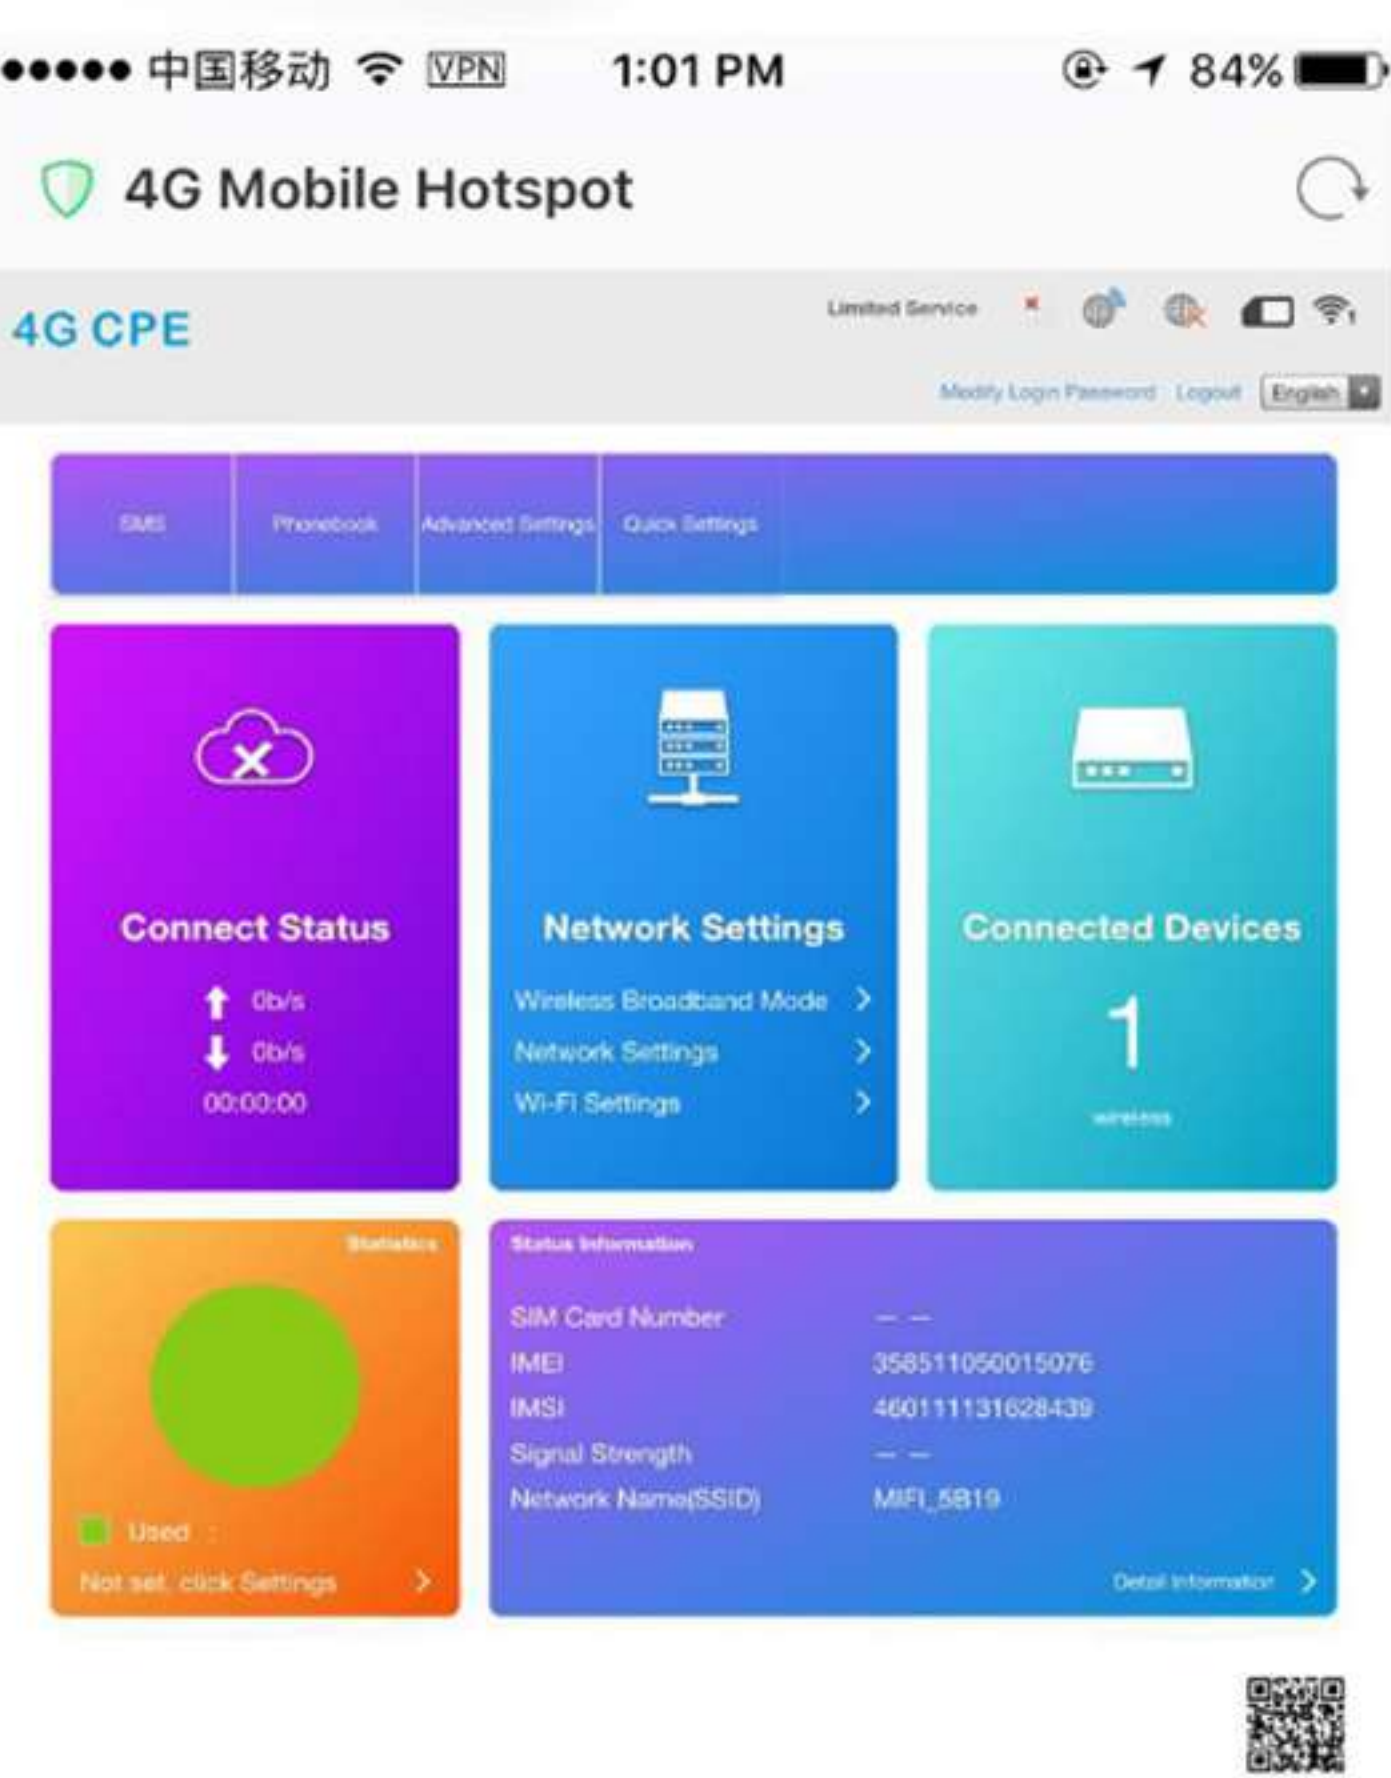

7.Fault diagnosis and precautions

- 1.Power indictor is off,Check if you connect power adapter right
- 2.Device cannot access the Internet:Check if the SIM card is installed correctly.
- 3.Weak device signal:Check if the antenna is installed correctly

Precautions:

- 1.Place the device horizontally to avoid shaking and break the device.
- 2.The ideal operating temperature of the equipment is 0°-40° , Storage temperature is-20°-+70° , Please do not use the device in places where the temperature is too high or too low.
- 3.Do not use the device during lightning.
- 4.Avoid violent compression or bending antennas.

