



Glass Door Smart Lock

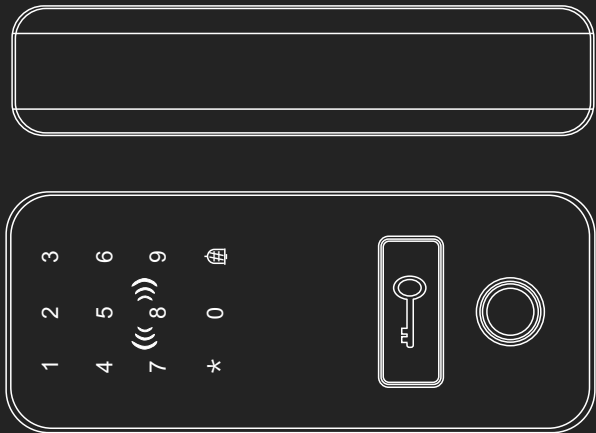

Installation and operating instructions

This manual contains instructions for the installation and operation of the lock, please save this manual


Product Overview

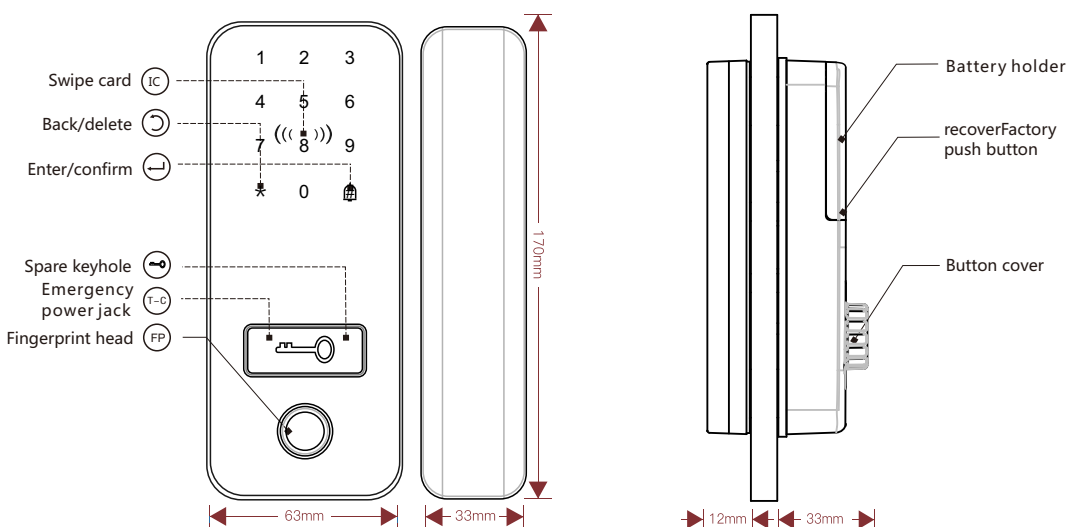

Adjust direction


Before installation, confirm the opening direction and adjust the lock to the desired direction.

Note: Make sure the lock is opened before operation

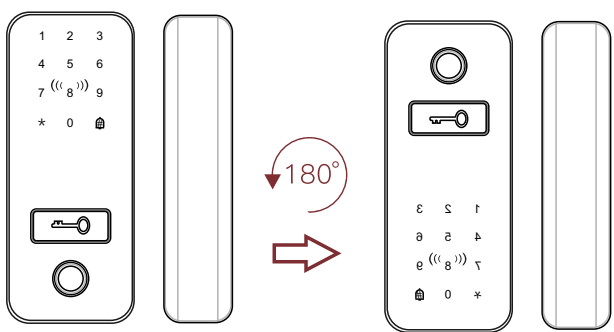

Press **"*#75"** under the factory condition to achieve left and right commutation;


Single door side strip installation

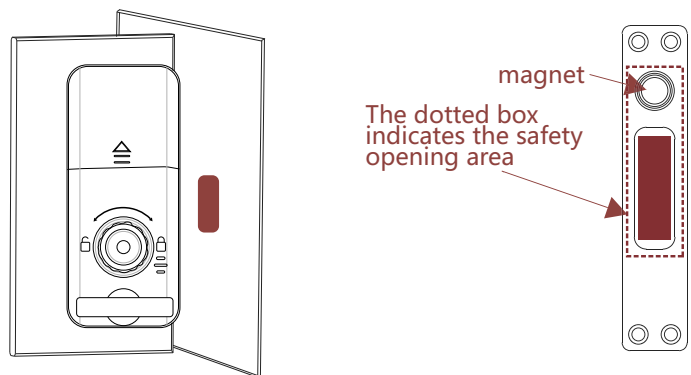


1 Install it as a frameless glass doorMaster lock. Close the door and mark the lockTongue position

2 Open holes in the wall and install side strips;Note that the magnet should be oriented with the main lock battery coverConsistent (all images are facing upward)


Procedure For installing a frameless glass door

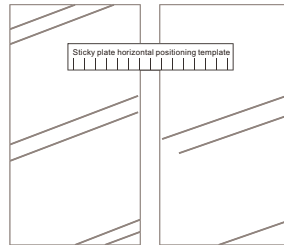


1 Clean the glass surface and draw a horizontal line inside the door

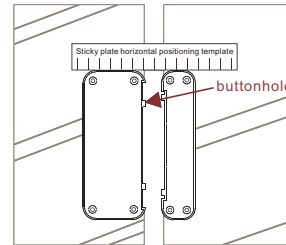

2 Remove the adhesive tape from the mounting plate and affix the footer to the side of the glass door according to the horizontal positioning line

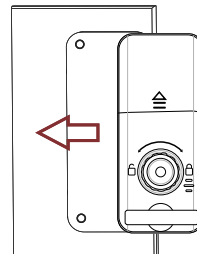

3 The main lock is pushed in from the side and screwed on 4 fixing screw (same as sub-lock operation)

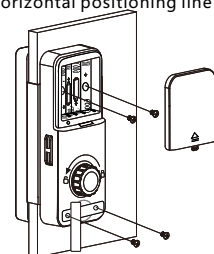


4 Connect the wire, and install the main lock back shell, and screw on the front 4 fixing screws (the operation of the secondary lock is the same)


Matters needing attention

1. Be sure to draw the positioning line to align with the main and secondary locks, and the door gap should not be less than 0.6MM
2. Glass thickness 10~12MM, more than this thickness need to be customized

Wooden doors, aluminum doors and other framed doors are installed


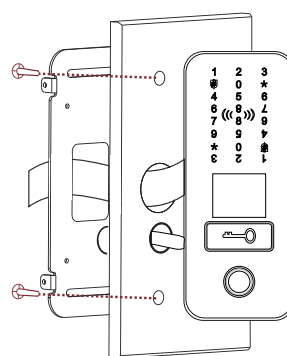


1 The main lock is perforated according to the size requirements, the front panel is threaded through the studs and wires, and the front plate is fixed by screws through the metal plate behind the door, and then the rear shell is installed

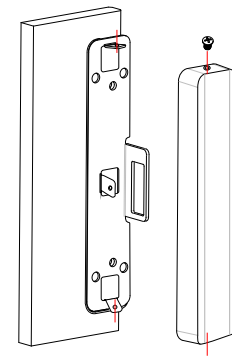


2 The secondary lock is fixed directly with self-tapping screws or rivets to the metal plate, and then fitted with the back shell. Note: The secondary lock only has the back shell

Restore to factory default Settings

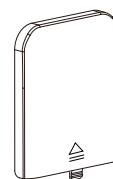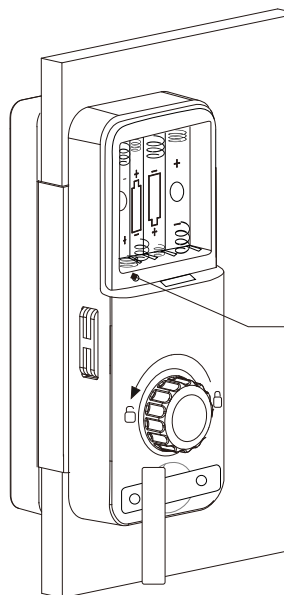

Lift the battery cover


Reset button

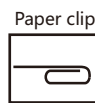

Paper clip

1. Unlock and open the door.
2. Find a paper clip, insert it into the reset button hole under the battery, and hold it down for 5 seconds until you hear a voice indicating "Initializing."
3. Delete all entered information.

How to disassemble and assemble wiring

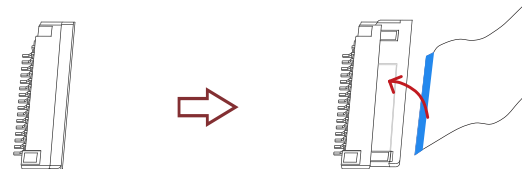


1. When removing the cable, gently pull the latch out to the right with your fingertips, and then shake out the cable
2. When installing the wire back, the wire blue upward, the metal bar downward, insert the wire first, and then gently push the lock to the left to press tightly

Note: Pull and push gently to prevent the lock from breaking


Special note: The key of this product must be kept outside the door for emergency use!

Input fingerprint

The correct way to enter fingerprints

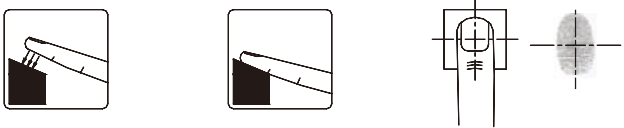

Incorrect way to enter fingerprints

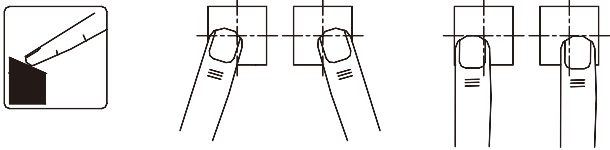

Quick configuration

The default administrator is 0. Enter the administrator password before using the password

- 1.Key "*"**
Back/Close key, click to delete the previous entry when entering the password.
- 2.Key "#"**
Confirm key or enter menu function key
- 3.Administrator**
Administrator's fingerprint, password, or IC card. Necessary for programming and configuration functions. It can also be used to unlock.
- 4.User information**
Fingerprints, passwords, and IC cards of non-administrators. Can only be used to unlock.

- 5. Anti-prying function**
By using password unlock, users can prevent the correct password from being exposed to strangers by entering random numbers before and after the correct password.
291 316874 673
Digitos aleatorios contraseña Digitos aleatorios
- 6.**When you enter the wrong information, you can press * to delete it. If you do not do anything within 10 seconds, the system will exit administration mode and you can try to enter administration mode again.

manage member

Touch the keyboard to light up the screen

Enter a new 6-8 digit password

reinput

Can be added continuouslyUser information

According to the

According to the

According to the

According to the

The administrator password must be between 6 and 8 characters

append user

Enter administrator password

Enter a new 6-8 digitUser password

reinput

Can be added continuouslyUser information

According to the

According to the

According to the

According to the

The new user password must be between 6 and 8 characters

append user fingerprint

Enter administrator password

Press printsensor

repeatedly Press/ releasesensor

Can be added continuouslyUser information

Release sensor

The system indicates that the operation succeeded

According to the

According to the

Change the finger Angle appropriately each time input to obtain better results.

append user ic card

Enter administrator password

Place the IC card near the detection area

Can be added continuouslyUser information

The system indicates that the operation succeeded

According to the

According to the

According to the

Normally openmode

Enter valid unlock information

Before the screen goes off

The normally open mode is activated

unpack

According to the

The lock will remain in normally open modeUntil you re-enter the correct unlock information.

When Passable mode is enabled, it will remain unlocked until the correct unlock information is entered again.

Application option



Powered by Smart home platform
The lock is compatible with your Bluetooth protocol and you can manage your lock by connecting to your app. Search for "doodle" in the app marketplace, or scan the code to get the app.

How to connect APP

Download and install your app Doodle, register and log in

Step 1

Open your application and click "+" to add a device

The second step

Select Camera/Lock - Door lock (Bluetooth)

The third step

Click Scan Devices and next

Step 4

Edit device name

Step 5


You can press the icon to unlock via Bluetooth.

Step 6

You can generate remote dynamic passwords.

Mini Smart Gateway (Optional)

Users can connect the device to the Internet via a smart mini-gateway for remote control through your application.
Note: Mini Smart Gateway can only be configured on 2.4GHz network.

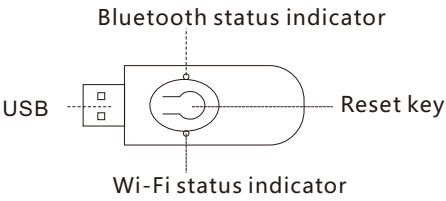

Step 1

Open the Doodle App and click to add

The second step

Selective gateway controlWireless Gateway (BLE)

The third step

Open the mini-gateway and hold down the "Reset" button" until the red light flashes.

Step 4

Select a 2.4GHz Wi-Fi network and enter your password. And then the next step

Step 5

Click scan deviceAnd next step

Step 6

Edit device name

Step 7

You can find your smart mini gateway on the home page.

Step 8

Select Add in the list to add your device.

Step 9

Manage your smart lock through remote administrati on over the Internet