

BHT-003 Series Thermostat



For Water Heating/Boiler/Electric Heating

WIFI Type

Welcome

Thank you for your purchase.

Your new thermostat will provide uniform and comfortable temperature control throughout every room in your property. We bring together technology, craftsmanship and the highest quality materials to provide you with a safe, reliable product combined with sleek, contemporary design.

Please read this installation/programming manual for comprehensive instructions on installing and operating your thermostat. Please also ensure a suitably qualified person installs your thermostat and complies with all local regulations.

In the box you will find

Thermostat	1pc	Screws	2pc
User Guide	1pc	Floor Sensor (2.5m)	1pc
QC Passed	1pc	(Floor sensor is Optional)	

ABOUT YOUR THERMOSTATS

The BHT-003 range has been developed to control electric underfloor, water heating or water/gas boiler systems. These units are designed for use in commercial, industrial, civil and domestic properties

MODEL DEFINITION

GA: Water heating, 5A
GB: Electric floor Heating, 16A
GC: Water/Gas Boiler, 5A
L: Backlight
P: Weekly Programmable
N: Modbus Communication
W: Wifi
S2: Both internal sensor and floor external sensor

For example: BHT-003 GCLP

FEATURES


On Appearance

1. 86mm hidden box and European 60mm round box is suitable.
2. Full white appearance, perfectly integrated into your family.
3. LED matrix light, simple display, energy saving, protect your eyes.
4. Touch buttons to make simple operation.
5. Amazing Silver Frame opens your modern life.
6. The visible thickness above the wall is only 12mm.
7. Interlock to connect gives you easy installation.

On Functionality

1. Powerful functions are available such as WIFI/Modbus etc.,
2. 0.5 °C Accuracy keeps temperature within the level you set.
3. The keys are locked to prevent children from misoperation.
4. Data memory when power is off.
5. 5+1+1 six periods programmable maximize comfort and economy.
6. Temporary programmable.
7. All setting languages synchronize your time zone, address and language.
8. No limit to add thermostats in App and support Smart Scene..
9. Create thermostat group to Centralized control.
10. Integrate with [Amazon Echo](#), [Google Home](#), [Tmall Genie](#).
11. Support device sharing.

DIMENSION

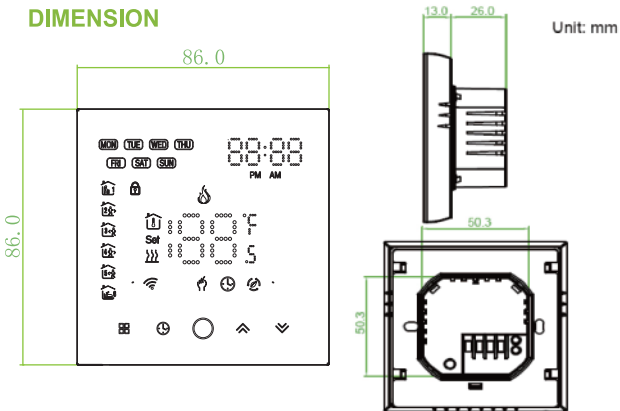

TECHNICAL DATA

Power Supply: 95 ~ 240 VAC, 50 ~ 60HZ
Current Load: 5A (water heating/water boiler/gas boiler)
16A (electric heating)

Sensor: NTC3950, 10K

Accuracy: ±0.5 °C

Set Temp. Range: 5 ~ 35 °C

Display Temp. Range: 5 ~ 99 °C

Ambient Temp.: 0 ~ 45 °C

Ambient Humidity: 5 ~ 95 % RH (Non Condensing)

Storage Temp.: -5 ~ 45 °C

Power Consumption: <1.5W

Timing Error: < 1%

Shell Material: PC +ABS (Fireproof)

Installation Box: 86 * 86mm Square or European 60mm Round Box

Wire Terminals: Wire 2 x 1.5 mm² or 1 x 2.5 mm²

Protection Class: IP 20

Buttons: Capacitive Touch Buttons

BEFORE WIRING AND INSTALLING

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
3. Installer must be a trained, experienced service technician.
4. After installation is complete, check out product operation as provided in these instructions.




CAUTION

Electrical Shock or Equipment Damage Hazard. Can shock individuals or short equipment circuitry.

Disconnect power supply before installation.

WIRING

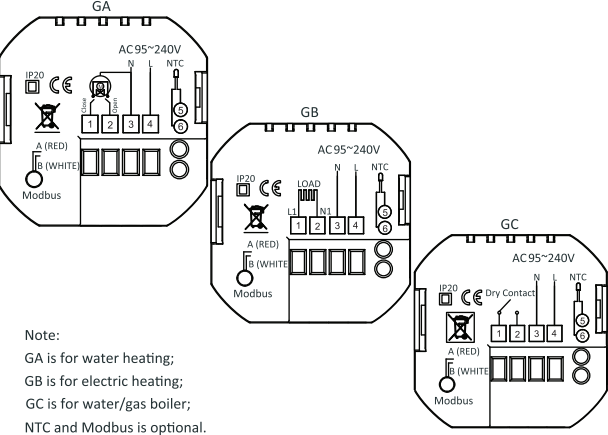

Note:

GA is for water heating;

GB is for electric heating;

GC is for water/gas boiler;


NTC and Modbus is optional.

INSTALLATION

Your thermostat is suitable for installation within a standard 86mm pattress box or European 60mm pattress box.

Step 1. Keep power off. See Fig 1.


Step 2. Remove the mounting Plate by rotating the LCD part. See Fig 2.

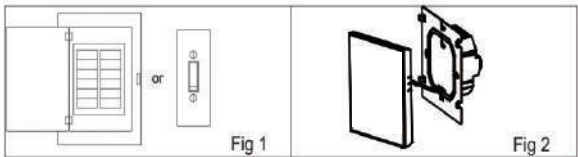

Step 3. Connect power supply, load into the appropriate terminals.


(see "Wiring your thermostat" for details and Fig 3).

Step 4. Fix the mounting plate into the wall with screws in the box. See Fig 4.

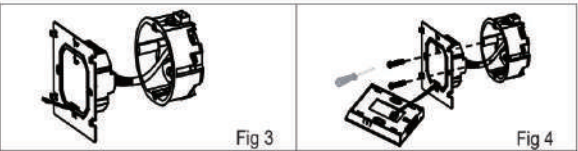


Step 5. Fasten body of thermostat and the mounting plate through rotating. See Fig 5.

Step 6. Installation complete. See Fig 6.

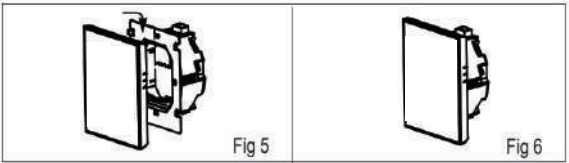

HOME SCREEN QUICK REFERENCE

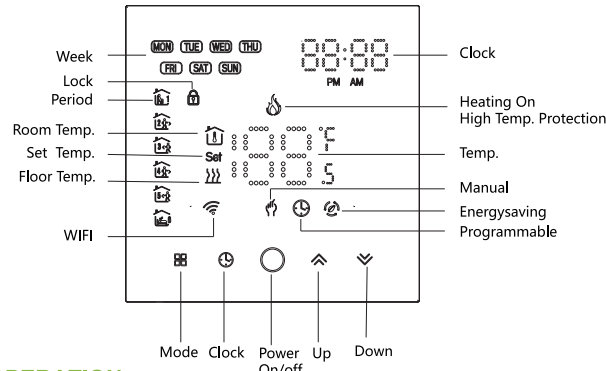

OPERATION

During Power On

1. Power On/off: Press to turn the thermostat on/off.

2. Function & Programmable

Touch to change between manual mode and programmable mode.

In manual mode, will show directly below the temperature display,

In programmable mode, will show bottom left below the temperature display.

3. Setting Temperature

In the mode of programmable, set temperature, time could not be adjusted. If the user wants to change, please go to manual mode or programmable setting.

In the mode of manual, press to set the desired temperature.

4. Adjusting/Setting the Clock

Press to set minute, hour and weekday. By using the arrows.

Press once more to confirm and exit.

5. Locking your Thermostat

Press and hold the for 5 seconds to lock/unlock your thermostat

In item 3 of high senior options, you can select full lock or half lock.

6. Adjusting/Setting the Program Schedules

When Wi-Fi connection is made, your thermostat will automatically accept the program schedule made via the APP on your device.

If the schedule is set through the APP, after the APP completes the schedule setting, the thermostat needs to be turned off once.

If the thermostat does not establish a Wi-Fi connection, manually set the schedule see below for detailed instructions: To set the program schedules through your thermostat (NOT via your smartphone/tablet) simply follow the instructions as below:

Please note: Setting the programme schedule through your thermostat can only be carried out if there is no Wi-Fi connection between your thermostat and smartphone/tablet.

Press icon four times in a row. You can see "MON TUE WED THU FRI" and , and the minutes of time are flashing.

Use to set the minutes;

Press the icon again, the hour of the time will flash, set the

hour by ;

Press the icon again, the temperature setting will flash, set the

temperature by ;

This completes the setting of periods 1.

In the same way, complete the settings of periods 2, 3, 4 and 5

(display periods 1, 2), 5 (display periods 3, 4).

Press the icon once more to enter the Saturday schedule

settings (you will see the SAT in the upper left corner of the screen).

Repeat the above process to set the period and temp. and Sunday

schedule.

Press the icon once more to confirm and exit.

Default settings for program schedule

Time display	WEEKDAY (MONDAY – FRIDAY) (1 2 3 4 5 shows on screen)		WEEKEND (SATURDAY) (6 shows on screen)		WEEKEND (SUNDAY) (7 shows on screen)	
	TIME	TEMPERATURE	TIME	TEMPERATURE	TIME	TEMPERATURE
Period 1	06:00	20 °C	06:00	20 °C	06:00	20 °C
Period 2	08:00	15 °C	08:00	20 °C	08:00	20 °C
Period 3	11:30	15 °C	11:30	20 °C	11:30	20 °C
Period 4	13:30	15 °C	13:30	20 °C	13:30	20 °C
Period 5	17:00	22 °C	17:00	20 °C	17:00	20 °C
Period 6	22:00	15 °C	22:00	15 °C	22:00	15 °C

A separate schedule may be set for weekdays (Mon – Fri) and

for weekends (Sat or Sun).

7. Checking the Temperature of Floor Sensor

Press and hold the arrow for 5 seconds to display the temp. of floor sensor.

8. Return To Factory Default

Press the Restore Manufacturer Defaults, you can reset thermostat. Steps: Open your app - go into your room - click menu on the top right corner - move to the end - Press Restore Manufacturer Defaults.

9. Setting the Functions and Options

During Power Off, press and hold and for 5 sec. in the order to reach system function. Then press to scroll through the available functions, and use the arrows to change the available options. All settings are confirmed automatically.

Code	Function	Setting and options	Default
1	Temperature compensation	-9 to +9 °C (for internal sensor)	-3
2	Deadzone Temperature	1 ~ 5 °C	01
3	Button locking	00: All buttons are locked except power button. 01: All buttons are locked.	01
4	Sensor types	In: Internal Sensor (to control the temp.) Ou: External Sensor (to control the temp.) AL: Internal/ External Sensor (Internal sensor to control the temp., External sensor to limit the temp.)	AL
5	Min. Set Temp.	5-15 °C	05
6	Max. Set Temp.	15-45 °C	35
7	Display Mode	00: Display both set temp. and room temp. 01: Display set temp. only	00
8	Low temperature protection setting.	0-10 °C	00
9	High temperature protection setting.	25-70 °C	45
A	Economy Mode	00: Non-energy saving Mode 01: Energy saving mode	00
B	Economy Temp.	0-30 °C	20
C	Daytime display brightness	0-7	07
D	Night display brightness	0-7	03
E	Back to factory setting	00: User setting 01: Power on back to factory setting	00

ABOUT WIFI

WI-FI CONNECTION

Before using your Wi-Fi thermostat for the first time,you must configure the Wi-Fi signal and settings through your smartphone or tablet ,This will allow communication between your connecteddevices

Step 1 Download your APP (Fig1-1)



Fig 1-1



Fig 1-2 IOS



Fig 1-3 Android

Search for "Smartlife" in Apple Store or Google Play or use a browser to scan the QR code above (Figure 1-2), and complete account registration and installation according to the guidance of the APP.

Step 2. Connect the thermostat

Check the tutorial below to complete the connection and setup.

Method 1: Scan the QR code to configure the network guide (Fig 2.1-Fig 2.3)

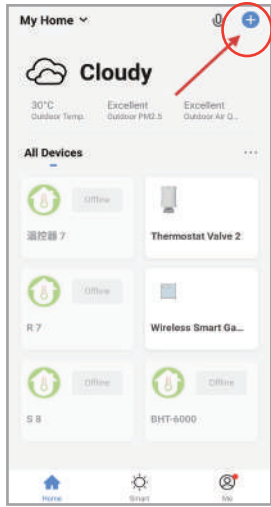


Fig2.1

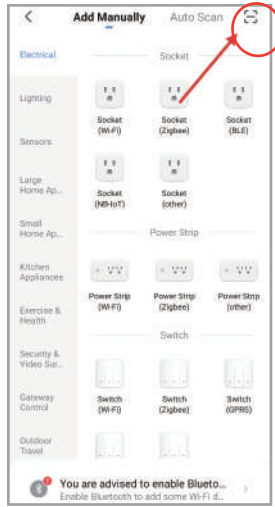


Fig2.2



Fig2.3



Scan this QR code

Method 2: Ordinary distribution network guidance (Fig. 2. 1&Fig. 2.3.1)



Fig2.3.1

Network distribution mode:

1、EZ Mode

When the thermostat is off, press and hold the " √ "until the thermostat screen flashes quickly and displays the " " icon, and then operate according to the following figure (Fig 2.4-Fig 2.7).

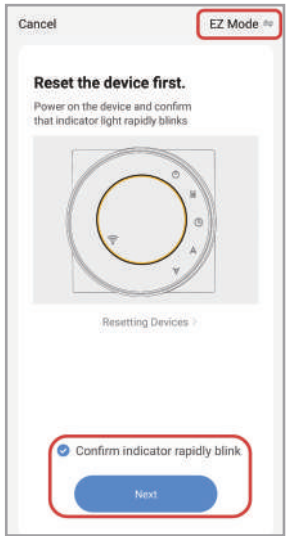


Fig2.4

2、AP Mode

When the thermostat is off, press and hold the " √ " until the thermostat screen flashes slowly and the " " icon is displayed (if the " " icon appears, continue to press the " √ " until the thermostat screen Flashes slowly and displays the " " icon), and then operate according to the following figure (Fig 2.8-Fig 2.14).



Fig2.8

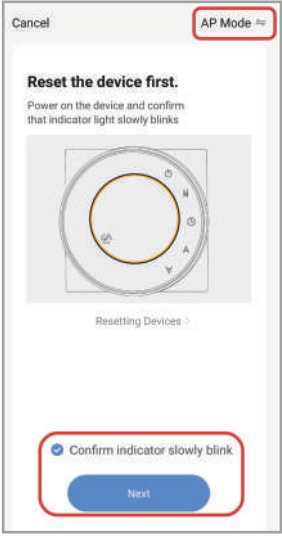


Fig2.9

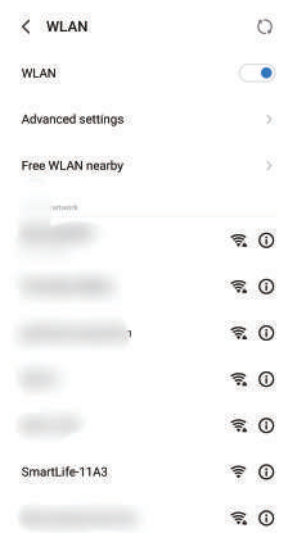


Fig2.12

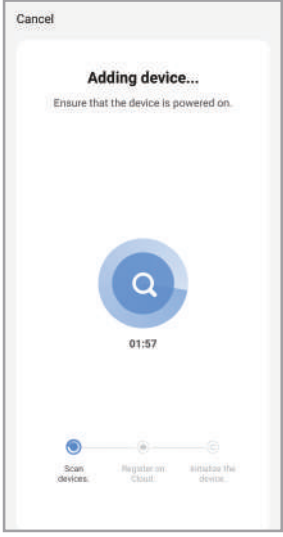


Fig2.13

After connecting to this hotspot, return to the "smartlife" APP


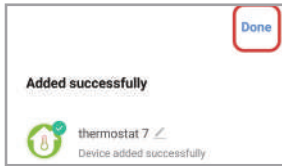


Fig2.14

More settings



APP operation interface description (heating thermostat)

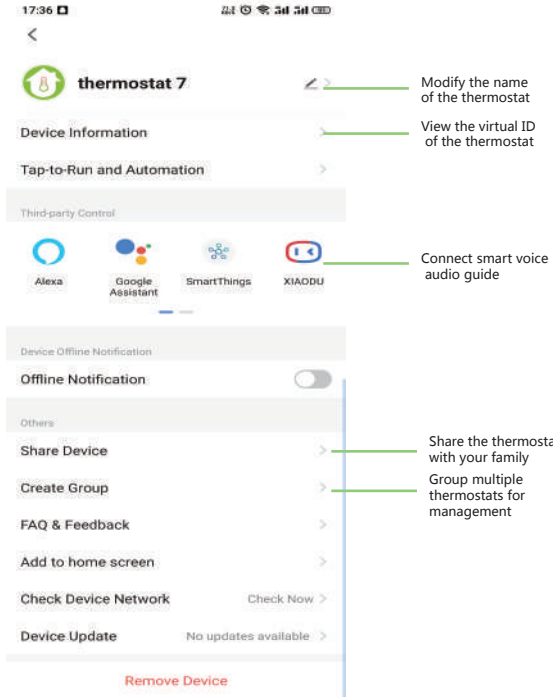

SIMPLE EXCEPTION HANDLING

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosen.
2	Without output but display works.	* Use a new LCD panel or new Power Unit Box to replace the old one.
3	Room Temp. Is a little different from the actual.	* Do temperature calibration in item 1 of high senior options

SERVICE

Your thermostat carries an 24 months warranty from date of purchase. Service outwith the warranty period may incur a charge. More detail please contact with us directly.