

Smart lock manual



user manual



ATTENTION:

The lock comes with “English” voice as standard, and you can switch to other language by the following operations



keep the lock under factory default without any users registered

Activate the keypad and input the code for other language of the voice

333666991  - English

333666992  - Arabic

333666993  - Russian

333666994  - Portuguese

333666995  - Thai


333666996  - Spanish

333666997  - Vietnamese

333666998  - Indonesian


Installation instruction of anti-theft lock body

1. Accessory

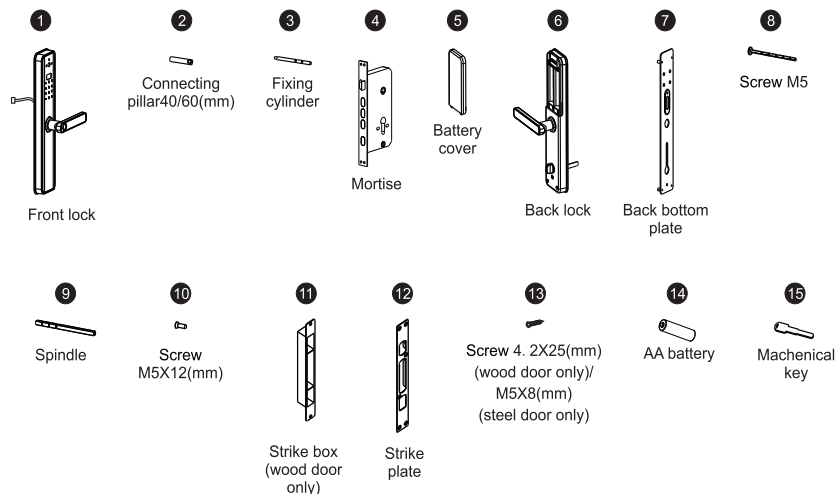


2. Door opening direction

① Right handle opening

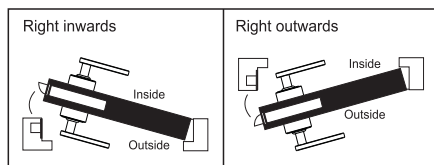


② Left handle opening

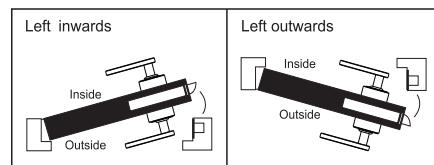

3. Adjust right handle and left handle


Release the screw with a screw driver, and turn 180 degree according to your needs to adjust the left and right, fix the screw after the handle on the correct direction.

Note: Do Not Remove The Screw Inside The Handle Hold, Otherwise, There Is No Warranty.

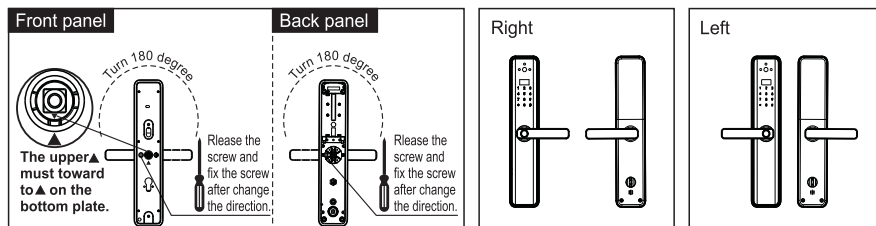

4. Adjust the mortise direction

According to the your need to adjust the mortise direction.

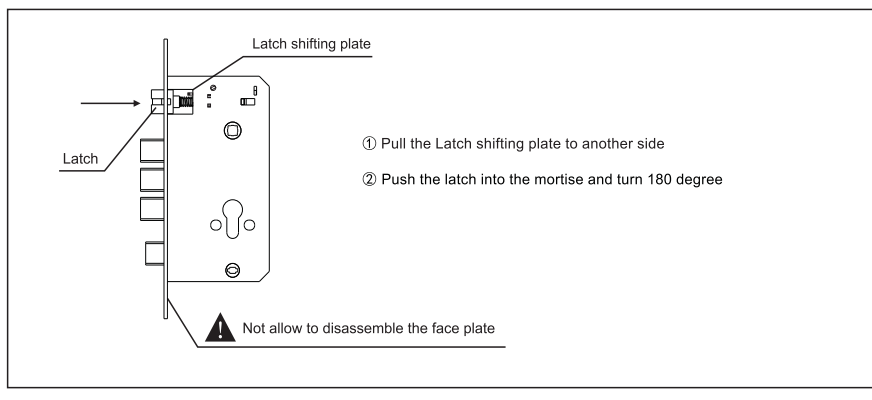





5. Accessories for sorts of door thickness

Available door thickness 40mm-120mm. If the door is over this range, please contact us for more information. Please select the correct accessories according to your door thickness.

Code and name	Specifications(mm)	door thickness ranges & QTY			
		40-60(mm)	60-80(mm)	80-100(mm)	100-120(mm)
⑨ Spindle (Cut the spindle according to the door thickness)		1	1	1	1
⑬ Screw 4.2X25(mm) (wood door only)	25 4.2	10	10	10	10
⑬ Screw M5X8(mm) (steel door only)	8 M5	8	8	8	8
⑧ Screw M5 (Cut the screw according to the door thickness)		2 Or 2	2 Or 2	2	2
③ Fixing cylinder (Cut the fixing cylinder according to the door thickness)		2	2	2	2
② Connecting pillar 40/60(mm)	40 60	2	2	2	2

6. Caution before installation

    
- Do not be a strong force when installation, avoid to damaging the lock.
- Use correct installation tools.
- Wear glass to protect your eyes when drilling holes.
- Drilling the door holes on both side of the door avoiding to damaging the door plate.




Intelligent lock(five in one) operation manual

7. Installation


Installation steps:

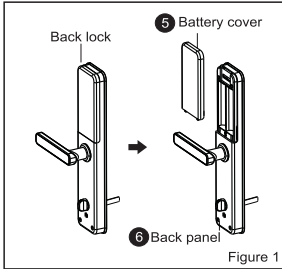


- (1) As Figure 1:
① Divide the Back Lock into Battery cover and Back panel.

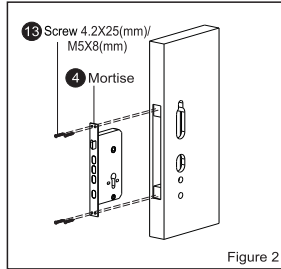


- (2) As Figure 2:
① Make the mortise cable get through the door plate, fix the mortise with 4 screws.

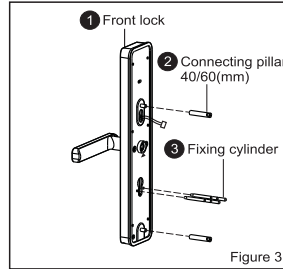


- (3) As Figure 3:
① Install the two connecting pillars with two fixing cylinders onto the front panel.

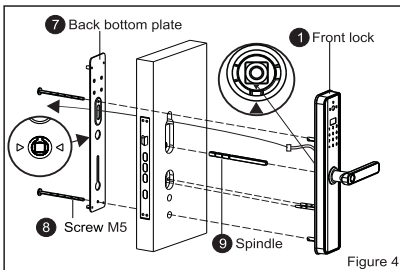


- (4) As Figure 4:
① Insert the spindle onto the mortise.
② Get the cable across the door plate and back bottom plate.
③ Fix the back bottom plate and front panel with two screws. (Note: The upper ▲ must toward to ▲ on the bottom plate), the two on the bottom plate must toward to the central of the spindle.

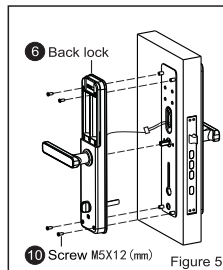

- (5) As Figure 5:
① Connect the front panel cable with the connect on the back panel.
② Fix the back panel on to the back bottom plate with 4 screws. (Note: make sure the knob is vertical.

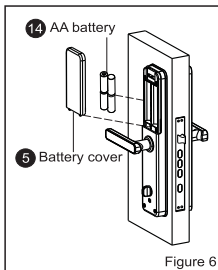

- (6) As Figure 6:
① Put the Batteries correctly and fix the Battery cover.

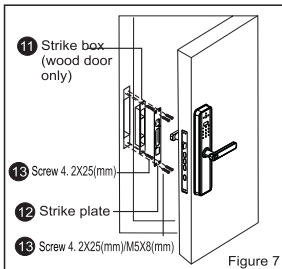

- (7) As Figure 7:
① Fix the strike box on the door frame, and then fix the strike plate with 4 screws on the door frame.

8. Check points after installation

- The face plate is horizontal with the door.
- The Latch bolt, Dead bolt and Security Bolt must works smoothly and flexibly.
- The Front lock is vertical and stable.
- Front handle works smoothly and flexibly, Dead bolt should be in position when you lift the handle.
- Dead bolt should be in position when you lift the Back handle, and it should be retracted when you press the handle.
- Knob turns smoothly and flexibly, and Security bolt reaches out or retracts should be together with the Knob's action.

1.Function and Operation


1.1 Description of terms and functional keys

- Administrator information: refer to the Administrator's fingerprint, password or IC card.
Unlock information: refer to the input fingerprint, password ,Remote control or IC card information (including Administrator and ordinary users).
- Key"*": clear key/back key. Enter the password or point by clearing the previous input. Press the clear key three times in succession, empty all input.
- Key"⌂": confirmation key or menu function key.

2. Original state


- The factory administrator orinital password is 123456, under the orinital state any fingerprint, IC card or password can open the lock.
- Any fingerprint, IC card ,or password which are not registered can't open the lock after inputting the administrator information.

3. Lock function management (step one)

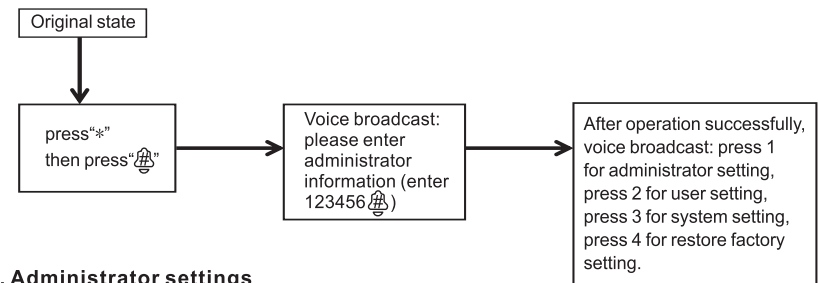


4. Administrator settings

1) Add administrator (step 2)

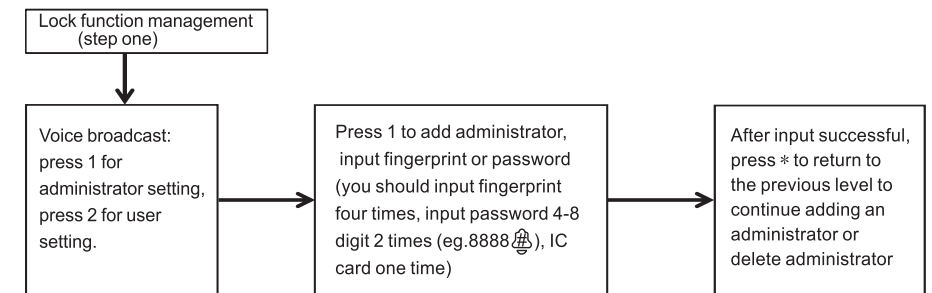


2) Delete administrator information

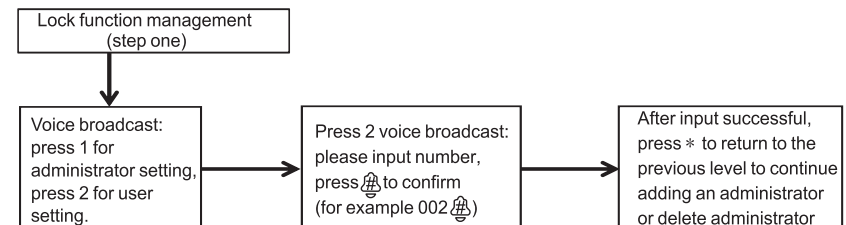


5. Common user setting

1) Add administrator information

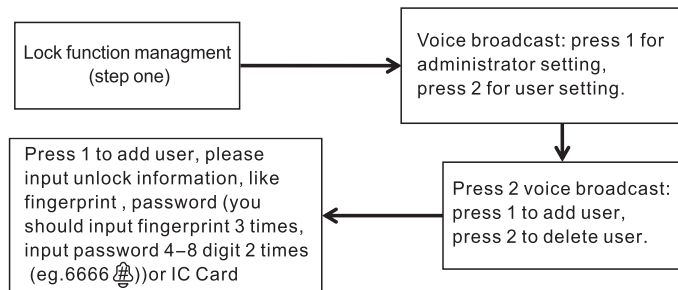


2) Delete user information

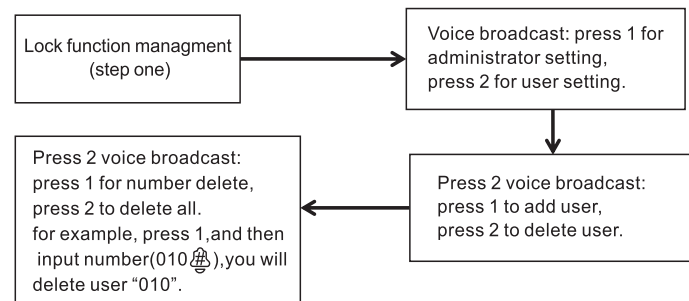


6. system setting


1) Voice setting

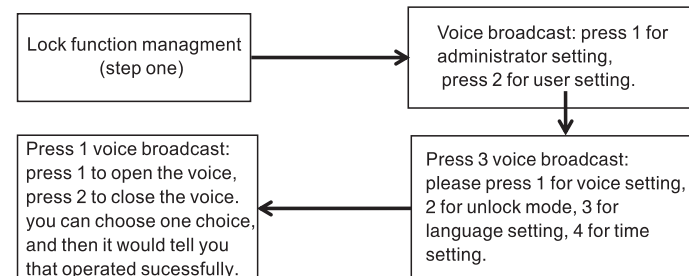


2) Unlock mode setting

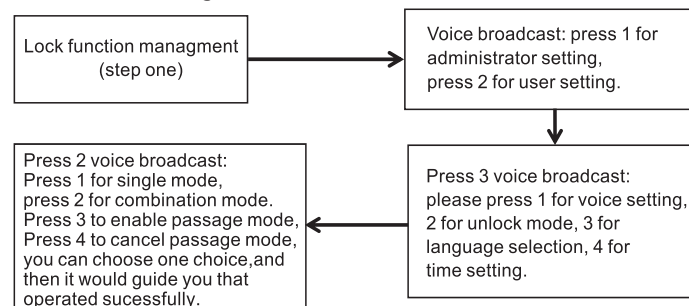

3) Time setting

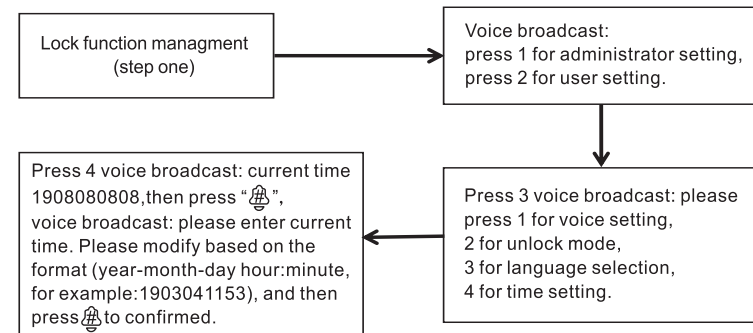

7. Restore factory settings

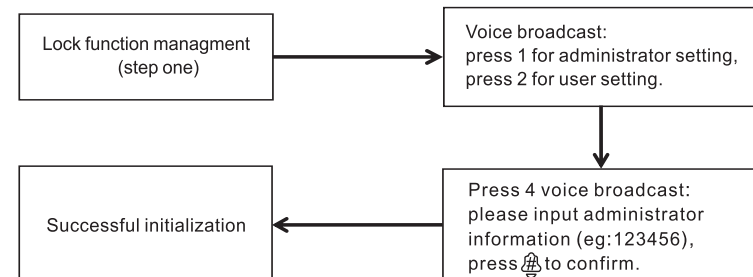

8. APP Configuration (Smart life) - optional

- 1) Search "Smart life" in App Store or an App market, download and install it.
- 2) Register with your cellphone number and log in.
- 3) Click "Security & Sensor", find "Lock(Wi-Fi)", click and add a device following instructions before use.
- 4) Remote unlocking: wake up the screen and press "⌚". There will be a voice prompt: requesting remote unlocking.

