 






## Zones Controller Beacon Remote

Model:TY-05



Before Remote Control, the Controller must be completed network setup.
  
### Remote Control Detail:

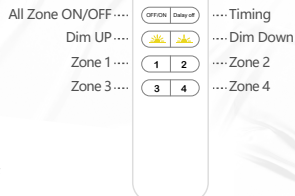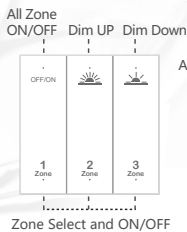

Model | LED type | Input/Output voltage | Output current | Output

|  |              |           |     |            |
|--|--------------|-----------|-----|------------|
|  | Single Color | DC 12-24V | 15A | 1 channel  |
|  | CCT          | DC 12-24V | 15A | 2 channels |
|  | RGB          | DC 12-24V | 15A | 3 channels |
|  | RGBW         | DC 12-24V | 15A | 4 channels |
|  | RGBWCCT      | DC 12-24V | 15A | 5 channels |

### Pair and De-pair:



#### Pair the Controller to "1 Zone" on Remote Control

- In 5 seconds after Power on the Controller, depress the button "1 Zone" 5 Seconds.
- If the LED linked to Controller, gradually changes, the pair process is completed.
- If the pair is not successful, repeat the process.

#### De-pair the Controller from "1 Zone" on Remote Control

- In 5 seconds after Power on the Controller, depress both "1 Zone" Button and "Dim down" Button, and stay 5 Seconds.
- If the pair is not successful, repeat the process.


### Operation instruction:

- Scan the QR code (or search 'TUYA' on APP Store) to download the App.
- Open the App, and log in with a user ID.




LED SMART CONTROLLER

- Power on the Controller. Trigger the initializing process. The Controller will be detected automatically by APP.
- Click "Go to add", the controller will be auto setup into wifi. You would be requested to input the wifi password for first time.

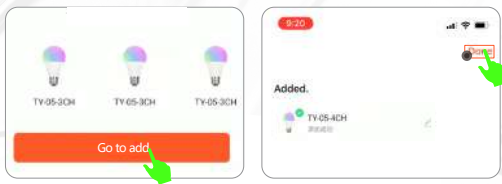


### Mechanical Info:

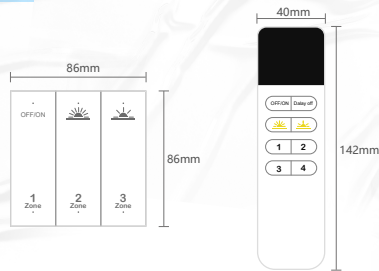


### Cautions:

- Do NOT apply AC110/220V Power directly to the Device.
- Do NOT overload the LED watts to the Device's output.
- In any wire connecting, make sure the Power Supply is OFF to the Device.
- Do not expose the Device directly into Moisture, Water and Fire.
- Keep the Device away from child.

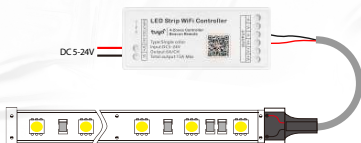


### Controller connection diagram:

One Panel Control could work with max 3 Controllers.

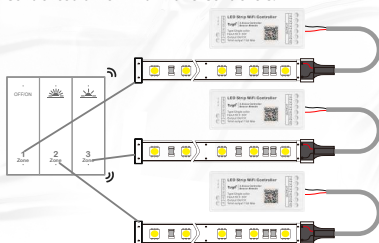

### Controller Accessories list:

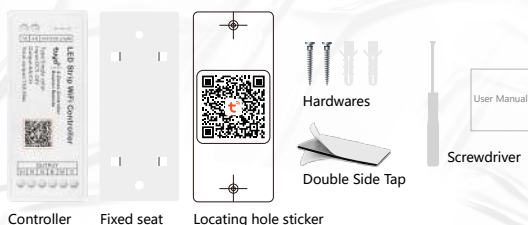

### Different Zone Control types for Panel Control or Remote Control.



The Panel Control or Remote Control would be displayed into APP after successfully paired.

