

CONTENTS	
INTRODUCTION	INSTALLATION
1	3
STANDALONE MODE	CONTROLLER MODE
5	12
WIEGAND READER MODE	ADVANCED APPLICATION
14	15

INTRODUCTION

The device is a single door multifunction standalone access controller or a Wiegand output reader. It uses Atmel MCU assuring stable performance. The operation is very friendly, and low-power circuit makes it long service life.

The device supports 1,000 users (988 common users + 2 panic users + 10 visitor users), all user data can be transferred from one to another. It supports multi access modes in card access, PIN access, card + PIN access, or multi cards/PINs access. It has extra features including block enrollment, interlock, Wiegand input & output interface, etc.

Three Versions Optional:
The device with Bluetooth function is optional.
The device with big user capacity is optional.
The device with WIFI function is optional.

Features


- > Touch key
- > Metal case, anti-vandal
- > Waterproof, conforms to IP66
- > One relay, 1,000 users (988 common + 2 panic + 10 visitor)
- > PIN length: 4-6 digits
- > EM card, EM+ Mifare cards optional
- > EM card: Wiegand 26-44 bits input & output
- > Mifare card: Wiegand 26-44bits, 56bits, 58bits input & output
- > Can be used as Wiegand reader with LED & buzzer output
- > Card block enrollment
- > Tricolor LED status display
- > Integrated alarm & buzzer output
- > Pulse mode, Toggle mode
- > User data can be transferred
- > 2 devices can be interlocked for 2 doors
- > Built-in light dependent resistor (LDR) for anti tamper
- > Backlit keypad, can set automatic OFF after 20 seconds

Specifications

User Capacity	1000
Common User	988
Panic User	2
Visitor User	10
Operating Voltage	12~18V DC
Working Current	≤150mA
Idle Current	≤60mA
	-01-


Proximity Card Reader	EM / EM + Mifare
Radio Technology	125KHz / 125KHz + 13.56MHz
Read Range	2~6 cm
PIN Length	4~6 digits
Wiring Connections	Relay Output, Exit Button, Alarm, Door Contact, Wiegand Input, Wiegand Output
Relay	One (NO, NC, Common)
Adjustable Relay Output Time	0~99 Seconds (5 seconds default)
Lock Output Load	2 Amp Maximum
Wiegand Interface	EM card: Wiegand 26-44 bits input & output, Mifare card: Wiegand 26-44bits 56bits, 58bits input & output. (Factory default: Wiegand 26bits for EM card, Wiegand 34bits for Mifare card)
PIN Output	4 bits, 8 bits(ASCII), 10 digits Virtual Number (Factory Default: 4 bits)
Environment	Meets IP66
Operating Temperature	-40°C ~ 60°C (-40°F ~ 140°F)
Operating Humidity	0%RH~98%RH
Physical Colour	Zinc-Alloy (A/B) ABS (C)
Dimensions	144x54x35 (mm) → A-C, 146x54x35 (mm) → B
Unit Weight	330g → A, 415g → B, 190g → C
Shipping Weight	405g → A, 500g → B, 280g → C

Carton Inventory

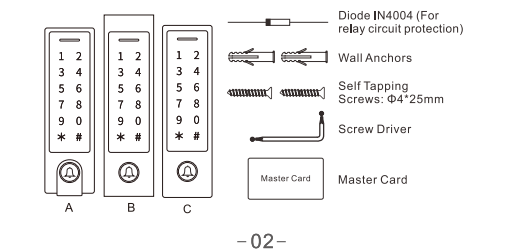

INSTALLATION

- > Remove the back cover from the unit
- > Drill 2 holes(A,C) on the wall for the screws and one hole for the cable
- > Knock the supplied rubber bungs to the screw holes(A,C)
- > Fix the back cover firmly on the wall with 4 flat head screws
- > Thread the cable through the cable hole(B)
- > Attach the unit to the back cover

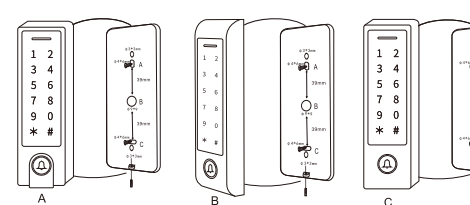

Wiring

Wire Color	Function	Notes
Red	DC +	12-18V DC Power Input
Black	GND	Negative Pole of DC Power Input
Blue & Black	Relay NO	Normally Open Relay Output (install diode provided)
White & Black	Relay Common	Common Connection for Relay Output
Green & Black	Relay NC	Normally Closed Relay Output (install diode provided)
Yellow	OPEN	Reconnect to Exit/RE-2 Input
Pass-Through Wiring (Wiegand Reader or Controller)		
Green	Data 0	Wiegand Output (Pass-Through) Data 0
White	Data 1	Wiegand Output (Pass-Through) Data 1
Advanced Input and Output Features		
Grey	Alarm Output	Negative contact for Alarm
Grey	Contact Input	Contact Input (Normally Closed)
Brown & Black	Doorbell A	Contact for Doorbell
Yellow & Black	Doorbell B	Contact for Doorbell

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	—
Enter into programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	—	Three beeps
Exit from the Programming mode	Red light bright	One beep
Open lock	Green light bright	One beep
Alarm	Red light shines quickly	Beeps

Basic Configure

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code) #
Exit Program Mode	*

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits)
3. Exit Program Mode	*

Set the Working Mode

Notes: The device has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use, (Factory default is Standalone Mode / Controller Mode)


Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Standalone/Controller Mode	7 7 # (Factory default)
OR	
2. Wiegand Reader Mode	7 8 #
3. Exit	*

-04-

STANDALONE MODE


The device can work as Standalone Access Control for single door, (Factory default mode) → 7 #

Connection Diagram

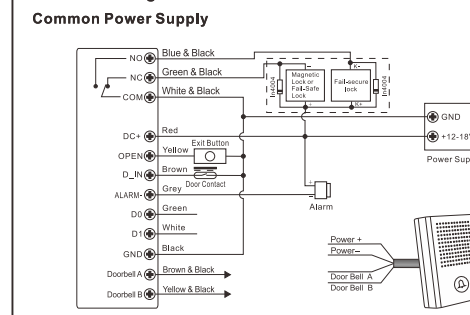

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the keypad might be damaged. (1N4004 is included in the packing)

Access Control Power Supply

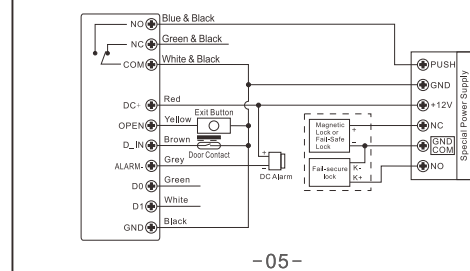

-05-

Programming

Programming will be varied depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- > User ID Number: Assign a user ID to the access card / PIN in order to track it.

The Common User ID: 0~987
Panic User ID: 988 ~ 989
Visitor User ID: 990 ~ 999

IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID to be available.

- > Proximity Card: EM card, EM+ Mifare cards
- > PIN: Can be any 4-6 digits except 8888 which is reserved.

Add Common Users

PIN/ Card user ID: 0~987; PIN length: 4-6 digits except 8888

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Add Card User	
2. Using Auto ID (Allows the device to assign Card to need available User ID number)	1 (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	
2. Select Specific ID (Allows Master to define a specific User ID to associate the card to)	1 (User ID) # (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	
2. Add Card: Block Enrollment (Allows Master to add up to 988 cards to the Reader in a single step) Takes 2 minutes to program.	1 (User ID) # (Card Quantity) # (The First Card 8/10/17 Digits Number) # (Card number must be consecutive, Card quantity= numbers of cards to be enrolled)

-06-

Add PIN User

1. Using Auto ID (Allows the device to assign PIN to need available User ID number)
OR
2. Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (PIN) #
OR	
2. Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)	1 (User ID) # (PIN) #
3. Exit	*

Tips for PIN Security (Only valid for 6 digits PIN):

For higher security we allow you to hide your correct PIN with other numbers up to a max of 10 digits.

Example PIN: 123434
You could use "123434*" or "*" (123434)
(*) can be any numbers from 0~9)

Add Panic Users

User ID number is 988, 989; PIN length: 4-6 digits except 8888

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Add Card User	
2. Using Auto ID (Allows the device to assign Card to need available User ID number)	1 (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	
2. Select Specific ID (Allows Master to define a specific User ID to associate the card to)	1 (User ID) # (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	
2. Add Card: Block Enrollment (Allows Master to add up to 988 cards to the Reader in a single step) Takes 2 minutes to program.	1 (User ID) # (Card Quantity) # (The First Card 8/10/17 Digits Number) # (Card number must be consecutive, Card quantity= numbers of cards to be enrolled)

Add Visitor Users

User ID number is 990~999; PIN length: 4-6 digits except 8888

There are 10 groups Visitor PINCard available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PINCard become invalid automatically.

-07-

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (0-9) # (Read Card) / (Input 8/10/17 Digits Card Number) #
OR	
2. Add Card	1 (User ID) # (0-9) # (PIN) # (0-9 means times of usage, 0=10 times)
3. Exit	*

Change PIN Users(PIN length: 4-6 digits except 8888)

(Note: WIFI versions don't support change PIN)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete User- By Card/ PIN	2 (Read Card)/(Input PIN) #
OR	
2. Delete User- By ID number	2 (User ID) #
OR	
2. Delete ALL Users	2 (Master Code) #
3. Exit	*

Delete Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete User- By ID number	2 (User ID) #
OR	
2. Delete User- By Card number	2 (Input 8/10/17 Digits Card Number) #
OR	
2. Delete ALL Users	2 (Master Code) #
3. Exit	*

Set Strike-out Alarm

The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 60 minutes after engaging or disengage only after entering a valid card/PIN or Master code / card.

-08-

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode	3 (1-99) # (factory default)
OR	
2. Toggle Mode	3 0 #
3. Exit	*

Set Access Mode

For Multi user access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card Access	4 0 #
OR	
2. PIN Access	4 1 #
OR	
2. Card + PIN Access	4 2 # (WIFI versions don't support this function)
OR	
2. Card or PIN Access	4 3 # (factory default)
OR	
2. Multi User Access	4 3 (2-9) # (Only after 2-9 valid users, the door can be opened)
3. Exit	*

-09-

Simplified Instruction	
Function Description	Operation
Enter the Programming Mode	* (Master Code) # (then you can do the programming (123456 is the factory default master code))
Change the Master Code	0 - New Code - # - Repeat the New Code - # (code: 6 digits)
Add Card User	1 - Read Card - # (can add cards continuously)
Add PIN User	1 - PIN - # (The PIN is any 4-6 digits except 8888 which is reserved)
Delete User	2 - Read Card - # 2 - PIN - #
Exit from the Programming Mode	*
How to release the door	
Card User	Read Card
PIN User	Input PIN #

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Strike-Out OFF	6 0 # (factory default)
OR	
2. Strike-Out ON	6 1 # Access will be denied for 10 minutes (Exit button is still workable)
OR	
2. Strike-Out ON (Alarm)	6 2 #
2. Strike-Out ON (Alarm)	5 (0-3) # (factory default is 1 minute)
2. Set Alarm Time	Enter Master Code # or Master Card or valid user card/ PIN to silence
3. Exit	*

Set Door Open Detection

Door Open Too Long (DOTL) Detection
When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door. The beep can be stopped by doing the door, master users or valid users, or else, it will continue to beep the same time with the alarm time set.

Door Forced Open Detection

When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened by force, the inside buzzer and external alarm (if there is) will both operate, they can be stopped by master users or valid users, or else, it will continue to sound the same time with the alarm time set.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection	6 3 # (factory default)
OR	
2. Enable Door Open Detection	6 4 #
2. Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Exit	*

The function of Set Alarm Time also apply for anti-tamper alarm

-10-

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Sound	7 0 #
Enable Sound	7 1 # (factory default)
OR	
2. LED Always OFF	7 2 #
LED Always ON	7 3 # (factory default)
OR	
2. Keypad Backlit Always OFF	7 4 #
Keypad Backlit Always ON	7 5 #
Keypad Backlit Automatic OFF	7 6 # (factory default)
Automatic OFF after 20 seconds, it will go ON by pressing any key (this key isn't taken into consideration)	
3. Exit	*

Master Card Usage

Using Master Card to add and delete users

Programming Step	Keystroke Combination
1. Input (Master Card)	
2. Input (Card) or (PIN #)	
Repeat step 2 for additional users	
3. Input (Master Card) again	

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete Card/ PIN Users	6 3 # (factory default)
OR	
2. Delete Card/ PIN Users	6 4 #
2. Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Exit	*

Users Operation & Reset to Factory Default
> Open the door: Read valid user card or input valid user PIN #
> Remove Alarm: Enter Master Code # or Master Card or valid user card / PIN

-11-


> To reset to factory default & Add Master Card: Power off, press the Exit Button, hold it and power on, there will be two beeps, then release the exit button, the LED light turns into yellow, then read any 125KHz EM card/ 13.56MHz Mifare card, the LED will turn into red, means reset to factory default successfully. Of the card reading, it is the Master Card.

Remarks:
① If no Master Card added, must press the Exit Button for at least 5 seconds before release, (this will make the previous registered Master Card invalid)
② Reset to factory default, the user's information is still retained.

CONTROLLER MODE

The device can work as Controller, connected with the external Wiegand reader. (Factory default mode) → 7 7 #

Connection Diagram

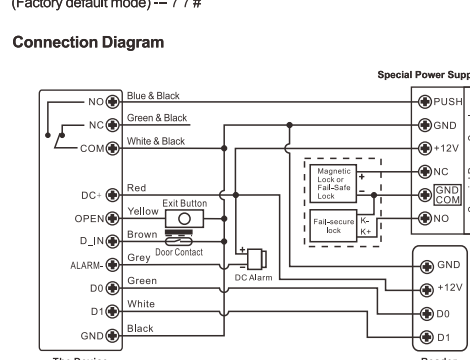

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the reader might be damaged. (1N4004 is included in the packing)

-12-

Set Wiegand Input Formats

Please set the Wiegand input formats according to the Wiegand output format of the external Reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand Input Bit	For EM Card: 8 (26-44) # (factory default is 26bits) For Mifare Card: 8 0 (26-44, 56, 58) # (factory default is 34bits)
3. Disable Parity Bit	8 0 #
Enable Parity Bit	8 1 # (factory default)
4. Exit	*

Note: For connecting Wiegand readers with 32, 40, 56 bits output, need disable parity bits.

Programming

- > Basic Programming is the same as Standalone Mode
- > There are some exceptions for your attention:

The device Connected with External Card Reader

- If EM/Mifare card reader: users can only be added/deleted on either the device or external reader.
- If HID card reader: users can only be added/deleted on external reader.

The device Connected with Fingerprint Reader

For example:
Connect SF1 as the fingerprint reader to the device.
Step 1: Add the Fingerprint (A) on SF1 (Please refer to SF1 manual)
Step 2: Add the same Fingerprint(A) on the device:

Programming Step	Keystroke Combination
1. Enter Program Mode: * (Master Code) #	
OR	
2. 1 (Press Fingerprint A once on SF1) # (ID auto allocated)	
OR	
2. 1 (User ID) # (Press Fingerprint A on SF1) # (Select specific ID)	
3. Exit: *	

-13-

The device Connected with Keypad Reader
The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format. Choose the below operation according to the PIN output format of your reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. PIN input bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.


- > Add PIN Users: To add PIN users, after enter into programming mode on the device, PIN(s) can be input, added on either the device or the external Keypad Reader.

- > Delete PIN Users: the same way as add users.

WIEGAND READER MODE

The device can work as Standard Wiegand Reader, connected to the third party Controller → 7 8 #

Connection Diagram

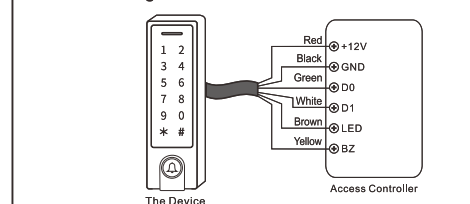

Notes:
> When set into Wiegand Reader mode, nearly all settings in Controller Mode will become invalid, and Brown & Yellow wires will be redefined as below:
- Brown wire: Green LED light control
- Yellow wire: Buzzer control

- > If you need to connect Brown/Yellow wires: When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound.

-14-

Please set the Wiegand output formats of Reader according to the Wiegand input formats of the Controller.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand output bits	For EM Card: 8 (26-44) # (factory default is 26bits) For Mifare Card: 8 0 (26-44, 56, 58) # (factory default is 34bits) 8 (4 or 8 or 10) # (factory default is 4 bits)
PIN output bits	8 0 #
3. Disable Parity Bit	8 0 #
Enable Parity Bit	8 1 # (factory default)
4. Exit	*

Note: For connecting Wiegand controller with 32, 40, 56 bits input, need disable parity bits.

ADVANCED APPLICATION

Collection Card Mode
After this mode is turned on, all cards can open the lock. At the same time, the card is added to the device.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Collection Card Mode OFF	9 2 # (factory default)
OR	
2. Collection Card Mode ON	9 3 #
3. Exit	*

User Information Transfer
The device supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to another (let's name it Accept Unit).

-15-

Connection Diagram:

