

Mini Keypad

Round

Ellipse

User Manual

User Manual

-06-

Simplified Instruction	
Function Description	Operation
Enter the Programming Mode	* - Master Code - # then you can do the programming (123456 is the factory default master code)
Change the Master Code	0 - New Code - # - Repeat the New Code - # (code: 6 digits)
Add Card User	1 - Read Card - # (can add cards continuously)
Add PIN User	1 - PIN - # (The PIN is any 4~6 digits except 8888 which is reserved)
Delete User	2 - Read Card - # 2 - PIN - #
Exit from the Programming Mode	*
How to release the door	
Card User	Read Card
PIN User	Input PIN #

-12-