

Instruction Manual

(Plug -in Chime)

Thank you for choosing our Plug-in Chime. Please read this instruction carefully before assembling & using the product. Keep your owner's manual for future reference.

Safety Instructions:

1. Please install your Chime according to this manual to avoid any malfunctions or damage.
2. The Chime is designed for indoor use only.
3. The Chime is not user serviceable, there is a danger of electric shock if opened.
4. Do not expose directly to rain/dripping or immerse in water.
5. Do not mount it close to a fireplace or expose to high temperature.
6. Never use any cleaning chemicals or wet cloth to clean the unit. Only use a dry, clean and soft cloth/micro fiber cloth.


What's Included in your Kit

- | | |
|-------------------|------------------------|
| 1 x Plug-in Chime | 1 x instruction manual |
|-------------------|------------------------|

Specifications:

Working voltage:	AC 90~250V	Working Frequency:	433.92 MHz $\pm$ 280 KHz
Power Consumption:	10 mW	Transmit power:	0dbm
Sensitivity :	-110dbm	N.W:	92G
Volume:	Up to 100db	Chime Size :	82*82*20mm/82*82*19 mm

Overview

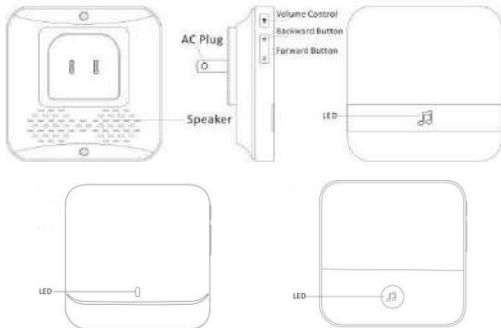

Note: Diagrams are only for information, take practicality as standard.

Installation

Wi-Fi video doorbell installation (refer to your Wi-Fi video doorbell instruction manual).

Installing Plug-in Chime

Plug into any regular household socket.

(Please tear metal strip protective film off before using).

Melody Selection

This Chime provides a choice of 52 different melodies. When it is plugged in, press the select button forwards to play previous music and backwards to play next music until you hear a chime you like.(this is for one Wi-Fi video doorbell paired with one Plug-in Chime only).

Sound Volume Selection

Press the volume control repeatedly until the desired volume is achieved – 5 levels are available as a circle, lowest level is mute.

Pairing with your Wi-Fi video doorbell

Press and hold Volume button for 4 seconds until the LED indicator lights up, Wi-Fi enters into pairing status. Then press the button on the Wi-Fi video doorbell within 5 seconds, pairing is completed once LED indicator on the Chime is rapid blinking . When above procedure is finished, pairing is quit automatically.

1. Two or above Wi-Fi video doorbells Choosing the Same Music or Same Chime:

Long press Volume button for 4 seconds to enter pairing status. Press the first Wi-Fi video doorbell within 5 seconds to get connection, once LED indicator on Chime is rapid blinking, pairing is completed. Repeat this operation to get each required Wi-Fi video doorbell connected with same music or same chime unit. When above procedure is finished, pairing quits automatically.

2. Two or above Wi-Fi video doorbells Pairing with Different Music/Plug-in Chimes:

Choose one favorite melody first, long press 4 seconds on Volume button to enter pairing status, then press the first Wi-Fi video doorbell to pair. Press music button to change melody and pair with different Wi-Fi video doorbell one by one. When above procedure is finished, pairing is quit automatically.

3. Two or above Chimes Pairing with Same Wi-Fi video doorbell:

Long press Volume button on first Chime for 4 seconds to enter pairing status, press the Wi-Fi video doorbell within 5 seconds to get connection. Repeat above operation to pair Wi-Fi video doorbell with required Chime one by one.

4. All Pairing Memory Clearance:

Press and hold Volume button until plug into household socket for 10 seconds to erase all pairing memory, when Plug-in Chime LED indicator blinking that means setting successfully, program return to default.