

ABOUT WIFI

WI-FI CONNECTION

When first time using Wi-Fi thermostat,you must configure the Wi-Fi signal and settings on your smartphone or tablet. This will allow communication of your connected devices.

Step 1 Download your APP (Fig1-1)



Fig 1-1



Fig 1-2 IOS



Fig 1-3 Android

Search for "Smartlife" in Apple Store or Google Play or scan the QR code above (Figure 1-2) by browser to complete account registration and installation according to the guidance of the APP.

Step 2. Connect the thermostat
Follow the steps below to complete the connection and setup.

Method 1: Scan the QR code to configure the network guide (Fig 2.1-Fig 2.3)



Fig2.1



Fig2.2



Scan this QR code

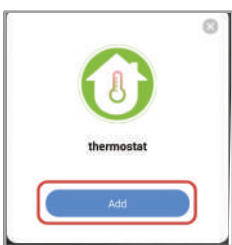


Fig2.3

Method 2: Regular distribution network guidance (Fig. 2.1&Fig. 2.3.1)



Fig2.3.1

Network distribution mode:

1. EZ Mode
When the thermostat is off, press and hold the " " until the thermostat screen flashes quickly and displays the " " icon, and then operate according to the following figure (Fig 2.4-Fig 2.7).



Fig2.4

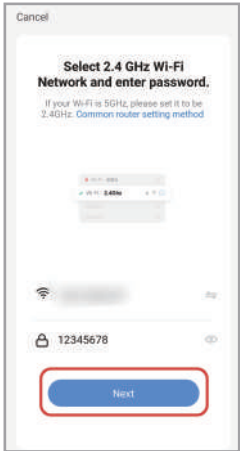


Fig2.5



Fig2.6

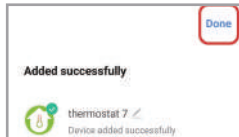


Fig2.7

2.AP Mode
When the thermostat is off, press and hold the " " until the thermostat screen flashes slowly and the " " icon appears. (if the " " icon appears, continue to press the " " until the thermostat screen Flashes slowly and displays the " " icon), and then operate according to the following figure (Fig 2.8-Fig 2.14).



Fig2.8



Fig2.9

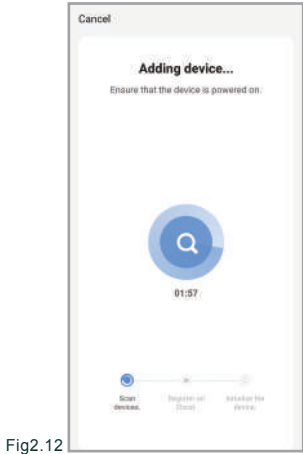


Fig2.12

Fig2.13

After connecting to this hotspot, return to the "smartlife" APP



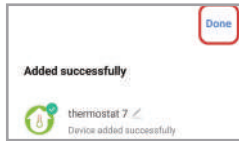


Fig2.14

APP operation interface description (heating thermostat)

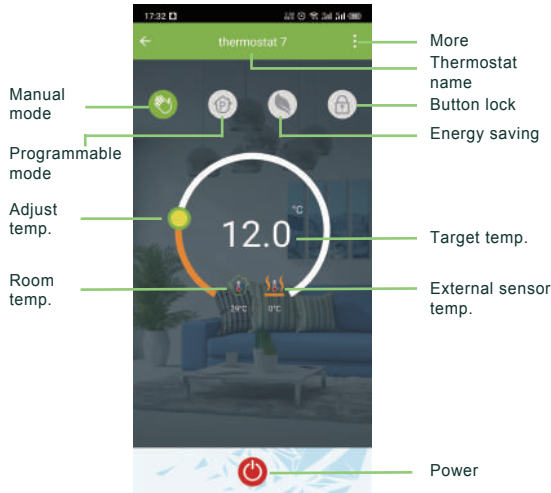

MORESETTINGS

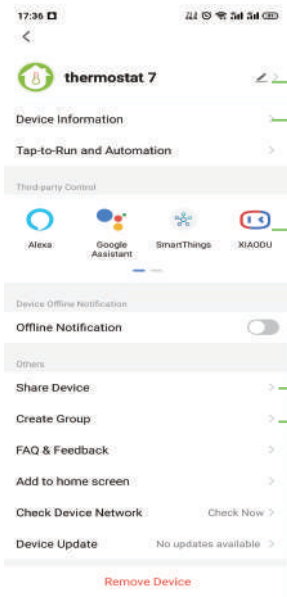

Modify the name of the thermostat
View the virtual ID of the thermostat

Connect smart voice audio guide

Share the thermostat with your family
Group multiple thermostats for management

SIMPLE EXCEPTION HANDLING

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosen.
2	Without output but display works.	* Use a new LCD panel or new Power Unit Box to replace the old one.
3	Room Temp. Is a little different from the actual	*Do temperature calibration in item 1 of high senior options

SERVICE

24-months warranty since date of purchase
Service beyond the warranty period may need charge.
More details, please contact us.