 


Vibrating Door & Window Alarm

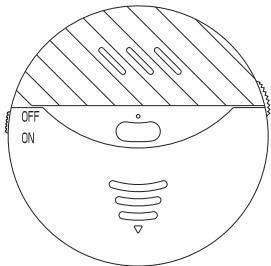

Specification

WIFI: 802.11b/g/n

Network: 2.4GHz

Working voltage: 3V

Battery: 2*AAA batteries

Standby current: $\leq 10\mu A$

Working humidity: 95% ice-free

Storage temperature: $0^{\circ}C \sim 50^{\circ}C$

 
Decibel : 130dB

Low battery remind: $2.3V \pm 0.2V$

Size: 74*13mm

G.W.:58g

◀ 02/10 ▶

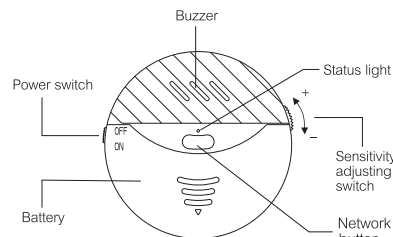

How to use

1. Pull out the insulation sheet.
2. Power ON
3. Press and hold network button for 3s, LED indicator flashes quickly
4. Sensitivity adjusting switch: Switch upward -- increase, switch downward--decreased.

◀ 03/10 ▶

Installation

1. Clean the window and door before installation
2. Fix the alarm with double-sided tape



Download App

1. ISO iPhone: Download "Smart Life" from Google Play.
2. Android: Download "Smart Life" from app store.
3. Open the Smart Life app and create a new account.
4. Register and log in.

 
◀ 04/10 ▶




Connection instruction

Make sure your smartphone connects to the WIFI (only 2.4GHz WIFI is supported).

1. Click '+' in the upper right to Add Device.

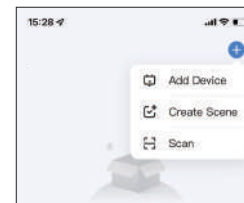

 2. Click "Sensors" and then "Sensor(Wi-Fi)".


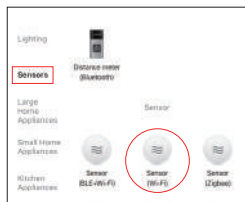


3. Enter your WIFI account and password, and then "Next".

4. Press and hold Network button of device for 3-5seconds, until the LED Red blinking quickly.

◀ 06/10 ▶

  5. Click "Confirm the indicator is blinking" and then "Blink quickly".

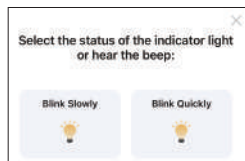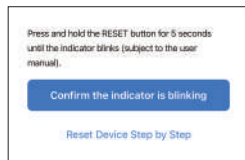

◀ 07/10 ▶

6. Connect successfully.



Low Battery & replace battery

1. When the battery is lower than $2.3V \pm 0.2V$, the device will send a notification to the user's mobile phone.
2. When the battery power is too low, the new AAA battery should be replaced in time.
3. Please replace the two AAA batteries together. The replacement doesn't delete the door alarm Settings.

Battery Notices

1. Install the battery in the correct polarity, Incorrect polarity may damage the alarm.

◀ 08/10 ▶

2. Do not mix different types of batteries, such as alkaline, carbon old and new batteries.
3. Don't try to charge non-rechargeable batteries.
4. Throwed the battery into the fire and water are not allowed after disassembled the battery.
5. Old batteries must be disposed of in accordance with local waste recovery regulations.

FAQ

1. Connection application failed ?
 - a. Make sure that you are connected to a 2.4ghz WiFi network. This device does not support 5GHz WiFi network.
 - b. Make sure to connect when the battery fresh (No battery low warning).
2. No alarm when vibrating ?

Please make sure if the battery is low and installed correctly.
3. No notification when vibrating ?

Make sure that the alarm in the Wifi normal transceiver range.
4. Insensitivity when vibrating ?

The problem of sensitive selecting, switch upward, sensitivity is increased, switch downward, sensitivity is decreased

◀ 09/10 ▶

Warranty Card

Thank you for purchasing our product.
Please fill in the details below and keep them safe.

User name	
Contact	
Model name	
Contact add.	
Purchase add.	
Purchase date.	

Certificate :



◀ 10/10 ▶