

80.00 mm

120.00 mm

Outdoor Keypad & RFID Access Control

User Manual

CONTENTS	
INTRODUCTION	INSTALLATION
1	3
STANDALONE MODE	CONTROLLER MODE
5	12
WIEGAND READER MODE	ADVANCED APPLICATION
14	15

INTRODUCTION

The device is a single door multifunction standalone access controller or a Wiegand output reader. It uses Atmel MCU assuring stable performance. The operation is very user-friendly, and low-power circuit makes it long service life.

The device can be made with Bluetooth version or with WIFI version.

Features

- > Metal case, anti-vandal
- > Waterproof, conforms to IP66
- > PIN length: 4-6 digits
- > EM card, Mifare card optional
- > EM card: Wiegand 26-44 bits input & output
- > Mifare card: Wiegand 26-44bits, 56bits, 58bits input & output
- > Can be used as Wiegand reader with LED & buzzer output
- > Card block enrollment
- > Tri-color LED status display
- > Integrated alarm & buzzer output
- > Pulse mode, Toggle mode
- > User data can be transferred
- > 2 devices can be interlocked for 2 doors
- > Built-in light dependent resistor (LDR) for anti tamper
- > Backlit keypad, can set automatic OFF after 20 seconds

Specifications

User Capacity Common Card/PIN User Panic User Visitor User	10000 9988 2 10
Operating Voltage Working Current Idle Current	12V DC ≤150mA ≤60mA
Proximity Card Reader Radio Technology Read Range	EM / Mifare 125KHz / 13.56MHz 2-6 cm
PIN Length	4-6 digits
Wiring Connections	Relay Output, Exit Button, Alarm, Door Contact, Wiegand Input, Wiegand Output

Relay
Adjustable Relay Output Time
Lock Output Load

Wiegand Interface

PIN Output

Environment
Operating Temperature
Operating Humidity

Physical
Colour
Dimensions

Unit Weight
Shipping Weight

One (NO, NC, Common)
0-99 Seconds (5 seconds default)
2 Amp Maximum

EM card: Wiegand 26-44 bits input & output.
Wiegand 26bits for EM card,
Wiegand 34bits for Mifare card)
4 bits, 8 bits(ASCII), 10 digits Virtual Number
(Factory Default: 4 bits)

Meets IP66
-40°C ~ 60°C (-40°F ~ 140°F)
0%/RH-95%RH

Zinc-Black
Silver & Black
L117.5 x W66 x D19 (mm)-- A
L145 x W52 x D21 (mm)-- B
L117 x W70 x D22 (mm)-- C
L132 x W55 x D25 (mm)-- D
430g
510g

Carton Inventory

A Diode IN4004 (For relay circuit protection)
B Wall Anchors
C Screw Driver
D Master Card

INSTALLATION

- > Remove the back cover from the unit
- > Drill 2 holes(A,C) on the wall for the screws and one hole for the cable
- > Knock the supplied rubber bumps to the screw holes(A,C)
- > Fix the back cover firmly on the wall with 4 flat head screws
- > Thread the cable through the cable hole(B)
- > Attach the unit to the back cover

Wiring

Wire Color	Function	Notes
Red	DC+	12V DC Power Input
Black	GND	Negative Pole of DC Power Input
Blue & Black	Relay NO	Normally Open Relay Output (install diode provided)
White & Black	Relay Common	Common Connection for Relay Output
Green & Black	Relay NC	Normally Closed Relay Output (install diode provided)
Yellow	OPEN	Request to Exit(REX) Input
Pass-Through Wiring (Wiegand Reader or Controller)		
Green	Data 0	Wiegand Output (Pass-through) Data 0
White	Data 1	Wiegand Output (Pass-through) Data 1
Advanced Input and Output Features		
Grey	Alarm Output	Negative contact for Alarm
Brown	Contact Input	Door/Gate Contact Input (Normally Closed)
WIFI Version with Doorbell		
Brown & Black	Doorbell A	Contact for Doorbell
Yellow & Black	Doorbell B	Contact for Doorbell

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	—
Enter into programming mode	Red light shines	One beep

Basic Configure

Enter Program Mode

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code) # (Factory default is 123456)
Exit Program Mode	*

Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits)
3. Exit Program Mode	*

Set the Working Mode

Notes: The device has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use. (Factory default is Standalone Mode / Controller Mode)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Standalone/Controller Mode	7 7 # (Factory default)
2. Wiegand Reader Mode	7 8 #
3. Exit	*

STANDALONE MODE

The device can work as Standalone Access Control for single door.
(Factory default mode) — 7 7 #

Connection Diagram

Common Power Supply

Access Control Power Supply

Special Power Supply

Programming

Programming will be very depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- > **User ID number:** Assign a user ID to the access card/ PIN in order to track it.
- > **User ID number:** The Common Card/PIN User ID: 1-9988
Panic User ID: 9989-9990
Visitor User ID: 9991-10000
- IMPORTANT: User ID do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- > **Proximity Card:** Proximity Card: EM card/Mifare card
- > **PIN:** Can be any 4-6 digits.

Access Control Power Supply

Special Power Supply

Programming

Programming will be very depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- > **User ID number:** Assign a user ID to the access card/ PIN in order to track it.
- > **User ID number:** The Common Card/PIN User ID: 1-9988
Panic User ID: 9989-9990
Visitor User ID: 9991-10000
- IMPORTANT: User ID do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- > **Proximity Card:** Proximity Card: EM card/Mifare card
- > **PIN:** Can be any 4-6 digits.

Add Common Users
(PIN Card user ID 1-9988; PIN length: 4-6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card User	1 (Read Card) / (Input 8/10/17 Digits Card Number) # The cards can be added continuously.
3. Exit	*

Notes:

- > **User ID number:** Assign a user ID to the access card/ PIN in order to track it.
- > **User ID number:** The Common Card/PIN User ID: 1-9988
Panic User ID: 9989-9990
Visitor User ID: 9991-10000
- IMPORTANT: User ID do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- > **Proximity Card:** Proximity Card: EM card/Mifare card
- > **PIN:** Can be any 4-6 digits.

Simplified Instruction

Function Description	Operation
Enter the Programming Mode	* - Master Code - # (The PIN is any 4-6 digits)
Change the Master Code	0 - New Code - # - Repeat the New Code - # (code: 6 digits)
Add Card User	1 - Read Card - # (can add cards continuously)
Add PIN User	1 (User ID) - PIN - # (The PIN is any 4-6 digits)
Delete User	2-Read Card-# 2-User ID-#
Exit from the Programming Mode	*
Card User	Read Card
PIN User	Input PIN #

20240509_V1

OR

2. Add PIN	1 (User ID) # (PIN) #
3. Exit	*

Add Visitor Users
(User ID number is 9991-10000; PIN length: 4-6 digits)
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card become invalid automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (0-9) # (Read Card) / (Input 8/10/17 Digits Card Number) #
2. Add PIN	1 (User ID) # (0-9) # (PIN) # (0-9 means times of usage, 0-10 times)
3. Exit	*

Change PIN Users(PIN length: 4-6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card	1 (User ID) # (0-9) # (Read Card) / (Input 8/10/17 Digits Card Number) #
2. Add PIN	1 (User ID) # (0-9) # (PIN) # (0-9 means times of usage, 0-10 times)
3. Exit	*

Delete Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete User- By	2 (Read Card) # The users can be deleted continuously.
OR	
2. Delete User- By ID number	2 (User ID) #
OR	
2. Delete User- By Card number	2 (Input 8/10/17 Digits Card Number) #
OR	
2. Delete ALL Users	2 (Master Code) #
3. Exit	*

Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode	3 (1-99) # (factory default)
OR	
2. Toggle Mode	3 (1-99) # (factory default)
3. Exit	*

Set Access Mode

For Multi user access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card Access	4 0 #
OR	
2. PIN Access	4 1 #
OR	
2. Multi User Access	4 3 (2-9) # (Only after 2-9 valid users, the door be opened)
OR	
2. Card or PIN Access	4 3 # (factory default)
3. Exit	*

Set Strike-out Alarm

The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid card/ PIN or Master code/ card.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Sound	7 0 #
OR	
2. Strike-Out OFF	6 0 # (factory default)
OR	
2. Strike-Out ON	6 1 # Access will be denied for 10minutes (Exit button is still workable)

OR

2. Strike-Out ON (Alarm)	6 2 #
Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Exit	*

Set Door Open Detection

Door Open Too Long (DOTL) Detection

When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door. The beep can be stopped by closing the door; master users or valid users, or else, it will continue to sound the same time with the alarm time set.

Door Forced Open Detection

When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened by force, the inside buzzer and external alarm (if there is) will both operate, they can be stopped by master users or valid users, or else, it will continue to sound the same time with the alarm time set.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection	6 3 # (factory default)
OR	
2. Enable Door Open Detection	6 4 #
Set Alarm Time	5 (0-3) # (factory default is 1 minute)
3. Exit	*

The function of **Set Alarm Time** also apply for anti-tamper alarm

Set Audible and Visual Response

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Sound	7 0 #
OR	
2. LED Always OFF	7 2 #
OR	
2. LED Always ON	7 3 # (factory default)

OR

2. Keypad Backlit Always OFF	7 4 #
Keypad Backlit Always ON	7 5 #
Keypad Backlit Automatic OFF	7 6 # (factory default)
3. Exit	*

Master Card Usage

Using Master Card to add and delete users

Add Card/ PIN Users

- Input (Master Card)
- Input (Card) or (User ID#PIN#)
- Repeat step 2 for additional users
- Input (Master Card) again

Delete Card/ PIN Users

- Input (Master Card Twice within 5s)
- Input (Card) or (User ID#)
- Repeat step 2 for additional users
- Input (Master Card) again

Users Operation & Reset to Factory Default

- > **Open the door:** Read valid user card or input valid user PIN #
- > **Remove Alarm:** Enter Master Code # or Master Card or valid user card/ PIN
- > **To reset to factory default & Add Master Card:** Power off, press the Exit Button, hold it and power on, there will be two beeps, then release the exit button, the LED light turns into yellow, then read any 125KHz EM card/ 13.56MHz Mifare card, the LED will turn into red, means reset to factory default successfully. Of the card reading, it is the Master Card.

Remarks:

- If no Master Card added, must press the Exit Button for at least 5 seconds before release, this will make the previous registered Master Card invalid)
- Reset to factory default, the user's information is still retained.

CONTROLLER MODE

The device can work as Controller, connected with the external Wiegand reader.
(Factory default mode) — 7 7 #

Connection Diagram

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the reader might be damaged. (1N4004 is included in the packing)

Set Wiegand Input Formats

Please set the Wiegand input formats according to the Wiegand output format of the external Reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand Input Bit	For EM Card: 8 (26-44) # (factory default is 26bits) For Mifare Card: 8 0 (26-44, 56, 58) # (factory default is 34bits)

3. Disable Parity Bit
Enable Parity Bit

8 0 #	8 1 # (factory default)
*	*

4. Exit

Note: For connecting Wiegand readers with 32, 40, 56 bits output, need disable parity bits.

Programming

- > **Basic Programming is the same as Standalone Mode**
- > **There are some exceptions for your attention:**
- The device Connected with External Card Reader
 - If EM/Mifare card reader: users can be added/deleted on either the device or external reader.
 - If HID card reader: users can only be added/deleted on external reader.
- The device Connected with Fingerprint Reader
 - For example: Connect SF1 as the fingerprint reader to the device.
 - Step 1: Add the Fingerprint (A) on SF1 (Please refer to SF1 manual)
 - Step 2: Add the same Fingerprint(A) on the device:

1	Enter Program Mode: * (Master Code) #
2	1 (Press Fingerprint A once on SF1) # (ID auto allocated)
OR	
2	1 (User ID) # (Press Fingerprint A on SF1) # (Select specific ID)
3	Exit: *

The device Connected with Keypad Reader

The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format. Choose the below operation according to the PIN output format of your reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. PIN input bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.

> Add PIN Users:
To add PIN users, after enter into programming mode on the device, PIN(s) can be input/ added on either the device or the external Keypad Reader.

> Delete PIN Users: the same way as add users.

WIEGAND READER MODE

The device can work as Standard Wiegand Reader, connected to the third party Controller — 7 8 #

Connection Diagram

Notes:

- > When set into Wiegand Reader mode, nearly all settings in Controller Mode will become invalid, and Brown & Yellow wires will be redefined as below:
 - Brown wire: Green LED light control
 - Yellow wire: Buzzer control
- > If you need to connect Brown/Yellow wires: When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound.

Set Wiegand Output Formats

Please set the Wiegand output formats of Reader according to the Wiegand input formats of the Controller.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand output bits	For EM Card: 8 (26-44) # (factory default is 26bits) For Mifare Card: 8 0 (26-44, 56, 58) # (factory default is 34bits) 8 (4 or 8 or 10) # (factory default is 4 bits)
3. Disable Parity Bit	8 0 #
4. Exit	8 1 # (factory default)

Notes: For connecting Wiegand controller with 32, 40, 56 bits input, need disable parity bits.

ADVANCED APPLICATION

Collection Card Mode

After this mode is turned on, all cards can open the lock. At the same time, the card is added to the device.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Collection Card Mode OFF	9 2 # (factory default)
OR	
2. Collection Card Mode ON	9 3 #
3. Exit	*

User Information Transfer

The device supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to another (let's name it Accept Unit).

Connection Diagram:

Remarks:

- > The Master units and Accept units must be same series devices.
- > The Master Codes of the Master Unit and the Accept Unit must be set to the same.
- > Program the transfer operation on Master Unit only.
- > If the Accept Unit is already with the users enrolled, it will be covered after transferring.
- > For full users enrolled, the transfer takes about 30 seconds.

Set Transferring on Master Unit:

Programming Step	Keystroke Combination
1. Enter the programming mode	* (Master Code) #
2. Set transferring	9 8 #

Within 30 seconds, Green LED shines, after one beep, the LED will turn into Red, which means the users' information has been transferred successfully.

Interlock

The device supports the Interlock Function. It is of two Devices for two doors, and usually used for banks, prisons, and other places where a higher level security is required.

Connection Diagram:

Remarks: The Door Contact must be installed and connected as the diagram. Let's name the two Devices as "A" and "B" for two doors "1" and "2".

Step 1:
Enroll the users on Device A, then transfer the users' information to Device B by "User Information Transfer" function.

Step 2:
Set both of the two Devices (A and B) to interlock function

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Interlock	9 0 # (factory default)
OR	
2. Enable Interlock	9 1 #
3. Exit	*

If enable interlock, when and only door 2 is closed, the user can read the valid fingerprint/card or input PIN on Reader A, door 1 will open; then when and only door 1 closed, read valid fingerprint/card or input PIN on Reader B, door 2 will open.