


# GSM&WIFI Network Alarm System

User Manual

Wi-Fi+GSM+GPRS

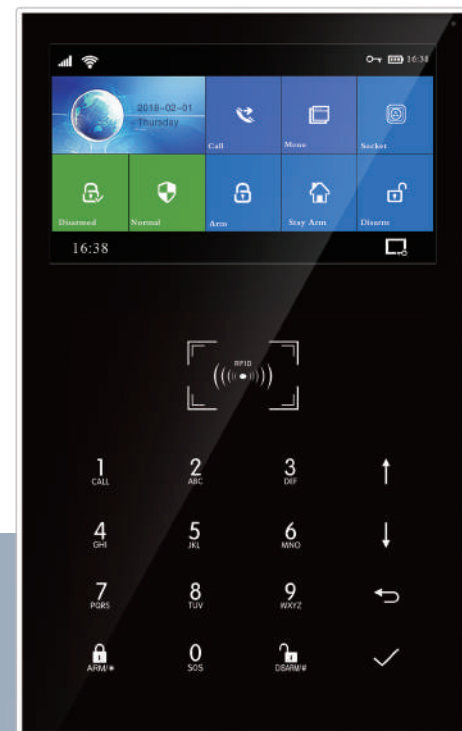

# Content

|                                                       |       |
|-------------------------------------------------------|-------|
| Overall state                                         | 1~2   |
| Explanation                                           | 1     |
| Features                                              | 1     |
| Daily Operation Nouns                                 | 2     |
| Appearance and accessories                            | 3~7   |
| Front                                                 | 3     |
| Back                                                  | 3     |
| Side view                                             | 4     |
| Power On/Off                                          | 4     |
| SOS Button                                            | 4     |
| SOS button backlight                                  | 4     |
| Navigating Menus                                      | 4     |
| Main interface function and button description        | 5     |
| Menu Structure                                        | 6     |
| Initial usage                                         | 8~12  |
| Start operation                                       | 8     |
| System initialization                                 | 8-9   |
| Smart Life APP Quick Use Guide                        | 10    |
| Menu operation                                        | 10    |
| Phone number setup                                    | 10    |
| Add/Delete remote control                             | 11    |
| Add/Delete wireless detector(included doorbell alarm) | 12    |
| Add/Delete RFID card                                  | 12    |
| Synchronization with external wireless siren          | 13    |
| Wireless Siren Alarm                                  | 13    |
| Smart Home                                            | 14    |
| Record                                                | 14    |
| Timer                                                 | 14    |
| Remote SMS                                            | 15-17 |
| Parameter setup                                       |       |
| Alarm host name setup                                 |       |

Parameter inquiry  
 Inquire system setting  
 Inquire system setting2  
 Alarm phone setup inquiry  
 Delay setup inquiry  
 Switch setup inquiry  
 Remote control/detector/RFID card inquiry

## PHONE FUNCTION 18

Out arm  
 Stay arm  
 Disarm SOS  
 SMS notification feedback

## Alarm and remote monitoring 20

SMS alarm  
 Voice alarm and alarm monitoring  
 Automatic dialing preset phone number when the alarm host alarms  
 Preset phone number to call alarm host  
 Mobile app alarm receiving procedure  
 Receiving alarm by internet monitoring center

## Technical Parameters 21

## PACKING LIST 21

## Overall state

### Explanation

For all the issues stated in this manual:

The icon  is only valid for the corresponding model host which is configured with the WIFI module.

The icon  is only valid for user who has applied alarm service in the local network alarm operation service center.


### Features

- › 4.3-inch IPS color display, full capacitive touch screen operation, simple style man-machine interface and menu guidance design
- › The main interface status bar, date and time clock display, host status at a glance
- › Built-in powerful performance CPU master based on 32-bit Cortex-M3 core
- › Based on the operating system with multitasking design, with a great user operation experience.
- › WIFI/GSM/GPRS network alarm system, and support APP push/SMS/voice monitoring/center network etc. multi-channel alarm ways, to ensure the alarm performance stable and reliable.
- › Support SMS arm/Disarm and parameters setting, support voice arm/Disarm.
- › Up to 99 storage locations for the learning of remotes , RFID and wireless detectors. 4 wired defense zone
- › Support many defense zones name such as of the gate, SOS, bedroom, window, balcony, perimeter, smoke, gas, carbon monoxide, water leaking, etc.
- › Support the main power failure, backup battery power shortage, tamper alarm and other extended alarm; Support detector low battery alert & tamper alarm function.
- › support Door open alert.
- › Support many defense zone types setting such as of entry/exit zone, indoor zone, perimeter zone, 24-hour zone, doorbell, etc.
- › Up to 5 groups preset alarm phone numbers, SMS on/off and voice on/off can be set respectively.
- › External wired alarm connectors: 1 channel external wireless siren, 8 channel alarm linked wireless intelligent socket.
- › APP or host can control several socket, so control the home electrical appliances.
- › Can store and query several daily operation records and alarm records.
- › GSM network automatic timing, to ensure the clock keep accurately all the time
- › Support multi-language menu display, voice prompts and alarm SMS settings.
- › Can record 20 seconds message and alarm voice.
- › Telephone function, support 5 groups re-dial number.

- › Excellent APP operation feeling and user interface, get the device working status anytime.
- › Arm/disarm, host alarm to mobile app.
- › Support APP arm/disarm remotely, parameter setting, Parts management and intelligent socket control.
-  › Friendly APP operating experience and user interface, obtain the latest working state of the device at any time.
- › User arm and disarm, host alarm push to APP.
- › Support APP arm and disarm remotely.
-  › GPRS real-time networking online, access to the latest working state of the equipment at any time. Automatically alarm if offline.
- › Reserved remote GPRS TCP / UDP protocol channel, compatible with multiple alarm center networking protocol to facilitate network alarm.
- › Center remote control.

## Daily Operation Nouns

## APPEARANCE AND ACCESSORIES

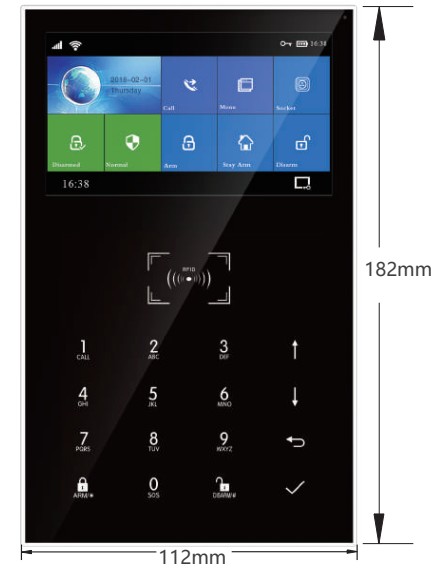


Back



Wired defense zone

Side View

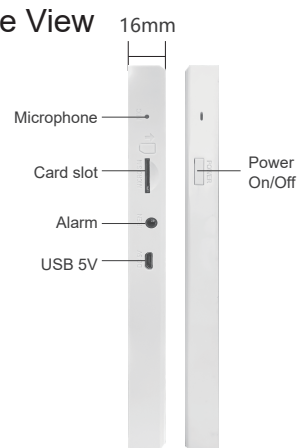

Power On/Off

| Function  | Method                                                                                     |
|-----------|--------------------------------------------------------------------------------------------|
| Power On  | Push this button, it will show "welcome" means power on successfully                       |
| Power Off | Push this button, for 3 seconds till the screen become black, means power off successfully |


## SOS Button

Push this button when emergency, it will cause the strobe alarm locally, then send the SMS alarm to the mobile defaulted, dial the mobile defaulted, push the alarm to the mobile app and send the message to the networking alarm center etc.

SOS button backlight

| Back ground light | Status |
|-------------------|--------|
| Circulate twinkle | Alarm  |
| Breathing twinkle | Alarm  |
| Normally on       | Disarm |

Navigating Menus

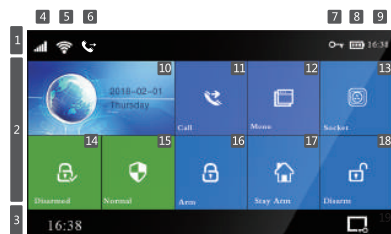

## Main interface function and button description

|                   |                       |                                  |                       |    |                                                                                                                                              |       |                                                  |  |                                    |  |
|-------------------|-----------------------|----------------------------------|-----------------------|----|----------------------------------------------------------------------------------------------------------------------------------------------|-------|--------------------------------------------------|--|------------------------------------|--|
| Top status bar    | 1                     | 4                                | GSM Status indication |    | No SIM card or wrong inserting                                                                                                               |       | GPRS networking status indication                |  | GSM networking strength indication |  |
|                   |                       |                                  |                       |    | No networking if gray color, 1~5 means the strength level                                                                                    |       |                                                  |  |                                    |  |
|                   |                       |                                  |                       |    | 1~4 means the wifi strength level<br>Gray color means no wifi                                                                                |       |                                                  |  |                                    |  |
|                   |                       |                                  |                       |    | Device already connected with the cloud, White dot at the right bottom corner means the binding mobile is online                             |       |                                                  |  |                                    |  |
|                   |                       | 6                                | GSM assign status     |    | SMS sending                                                                                                                                  |       | Telephone/mobile dialing                         |  |                                    |  |
|                   |                       | 7                                | Keyboard Lock         |    | Keyboard locked status, 5 seconds countdown before locked                                                                                    |       |                                                  |  |                                    |  |
|                   |                       | 8                                | Power status          |    | Main power supply                                                                                                                            |       | Spare power supply, 0~3 shows the power capacity |  |                                    |  |
|                   |                       |                                  |                       | 9  | Clock                                                                                                                                        | 00:04 | Current time                                     |  |                                    |  |
|                   |                       | Main status zone                 | 2                     |    |                                                                                                                                              |       | Current date and week                            |  |                                    |  |
|                   |                       |                                  |                       | 11 | Dial button                                                                                                                                  |       | Push and dial the telephone number               |  |                                    |  |
| 16                | Menu button           |                                  |                       |    | Push and enter into the menu setting                                                                                                         |       |                                                  |  |                                    |  |
| 12                | Arm button            |                                  |                       |    | Push and enter into the arm system                                                                                                           |       |                                                  |  |                                    |  |
| 13                | Socket button         |                                  |                       |    | Push and control the intelligent socket                                                                                                      |       |                                                  |  |                                    |  |
| 17                | stay Arm button       |                                  |                       |    | Push and enter into stay arm                                                                                                                 |       |                                                  |  |                                    |  |
| 18                | Disarm button         |                                  |                       |    | Push and enter into disarm                                                                                                                   |       |                                                  |  |                                    |  |
| 14                | Arm/Disarm Log button |                                  |                       |    | Push and searching the arm/disarm history                                                                                                    |       |                                                  |  |                                    |  |
| 18                | Arm/Disarm status     |                                  |                       |    | Arm status                                                                                                                                   |       |                                                  |  |                                    |  |
|                   |                       |                                  |                       |    | Stay arm status                                                                                                                              |       |                                                  |  |                                    |  |
|                   |                       |                                  |                       |    | Disarm status                                                                                                                                |       |                                                  |  |                                    |  |
| 15                | Alarm Log             |                                  |                       |    | Push can searching the alarm history                                                                                                         |       |                                                  |  |                                    |  |
|                   | Alarm status          |                                  |                       |    | No alarm                                                                                                                                     |       |                                                  |  |                                    |  |
|                   |                       |                                  |                       |    | Alarm status, will show the zone number if the zone alarm                                                                                    |       |                                                  |  |                                    |  |
| Bottom status bar | 3                     | 00:04                            |                       |    | Current time                                                                                                                                 |       |                                                  |  |                                    |  |
|                   |                       | "Please exit"<br>Countdown bar   |                       |    | Exit the delay status<br>Enter into the countdown status when arm finished<br>Will get to : get into when the countdown finished             |       |                                                  |  |                                    |  |
|                   |                       | "Please disarm"<br>Countdown bar |                       |    | Enter into the delay status<br>Need to be the count down status when get to the arm status, if no disarm, device will be triggered and alarm |       |                                                  |  |                                    |  |
|                   |                       | "Synchronizing"<br>Countdown bar |                       |    | Learning accessory state<br>Please trigger the parts before count down                                                                       |       |                                                  |  |                                    |  |
|                   |                       | Screen close button              |                       |    | Push and enter into black screen                                                                                                             |       |                                                  |  |                                    |  |

## • Menu Structure

|           |                |                  |                    |                                                                                                                       |
|-----------|----------------|------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------|
| Main menu | System Setting | Delay Setting    | Exit Delay         | Set the exit delay value, please refer to the daily operation words<br>Unit:seconds;scope:0~999 ; default:40 seconds  |
|           |                |                  | Enter Delay        | Set the enter delay value, please refer to the daily operation words<br>Unit:seconds;scope:0~999 ; default: 30 second |
|           |                |                  | Siren Duration     | Set the siren duration time while alarming<br>Unit:minutes;scope:0~999 ;default:3 minutes                             |
|           |                | Function Setting | Arm Beep           | Set the arm beep for external siren while arm/disarm<br>scope:on/off, default:off                                     |
|           |                |                  | Alarm Beep         | Set the siren notice for internal/external siren while arm/disarm<br>scope:on/off, default:off                        |
|           |                |                  | Arm/Disarm SMS     | SMS notice while setting the Arm/disarm<br>scope:yes/no, default:no                                                   |
|           |                |                  | Keypad Lock        | Keypad locked setting<br>scope:yes/no, default:no                                                                     |
|           |                |                  | Keyboard Backlight | Keyboard backlight setting<br>scope:on/off, default:off                                                               |
|           |                |                  | Keypad Tone        | Keypad Tone setting<br>scope:on/off, default:off                                                                      |
|           |                |                  | Delay Tick         | Delay Tick notice while in/out setting<br>scope:on/off, default:on                                                    |
|           |                |                  | Openning Alert     | Alert displays when ARM with the door/window open<br>Option: ON or OFF; Default: ON)                                  |
|           |                |                  | Voice Prompts      | Voice prompts for keypad operation<br>Option: ON or OFF; Default: ON)                                                 |
|           |                |                  | assistant switch   | Low power alert, indoor environment, SOS<br>Scope: on/off, default: on                                                |
|           |                | Password Setting | System Password    | System password setting<br>Scope:0000~9999;scope:6666                                                                 |
|           |                |                  | User Password      | User password setting<br>Scope:0000~9999;default:1234                                                                 |
|           |                |                  | Language Setting   |                                                                                                                       |
|           |                | Language Setting | Ελληνικά           | Panel in Greek language                                                                                               |
|           |                |                  | 简体中文               | Host Language: Simplified Chinese                                                                                     |
|           |                |                  | English            | Host Language: English                                                                                                |
|           |                |                  | Deutsch            | Host Language: Deutsch                                                                                                |
|           |                |                  | РУССКИЙ            | Host Language: Russian                                                                                                |
|           |                |                  | Español            | Host Language: Spanish                                                                                                |
|           |                |                  | Polski             | Host Language: Polish                                                                                                 |
|           |                |                  | Italiano           | Host Language: Italian                                                                                                |
|           |                |                  | Français           | Host Language: French                                                                                                 |
|           |                |                  | Português          | Host Language: Portuguese                                                                                             |
|           |                | Initialization   |                    | System Initialization, Function & describe as: System Initialization                                                  |

|         |                                                                                                                     |            |                                             |                                                                                   |                                                     |
|---------|---------------------------------------------------------------------------------------------------------------------|------------|---------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------|
| Mainmen | Phone Management                                                                                                    |            | 1st Phone                                   | Group 1 alarm phone number & dial Switch,SMS switch                               | See as:<br>Phone Number setting                     |
|         |                                                                                                                     |            | 2st Phone                                   | Group 2 alarm phone number & dial Switch,SMS switch                               |                                                     |
|         |                                                                                                                     |            | 3st Phone                                   | Group 3 alarm phone number & dial Switch,SMS switch                               |                                                     |
|         |                                                                                                                     |            | 4st Phone                                   | Group 4 alarm phone number & dial Switch,SMS switch                               |                                                     |
|         |                                                                                                                     |            | 5st Phone                                   | Group 5 alarm phone number & dial Switch,SMS switch                               |                                                     |
|         | Log Searching                                                                                                       |            | Alarm Log                                   | Alarm log & Event record                                                          |                                                     |
|         |                                                                                                                     |            | Arm Log                                     | Alarm/disarm log searching                                                        |                                                     |
|         | Accessories                                                                                                         |            | Remote Controller                           | Add/delete remote controller                                                      | See as:<br>Remote controller add/ delete            |
|         |                                                                                                                     |            | Detectors                                   | Add/delete wireless detectors                                                     | See as:<br>Wireless detector add/ delete            |
|         |                                                                                                                     |            | RFID                                        | Add/delete RFID cards                                                             | See as:<br>RFID card add/ delete                    |
|         |                                                                                                                     |            | Siren Learn                                 | External wireless siren pairing                                                   | See as:<br>External Wireless Siren matching         |
|         |                                                                                                                     |            | Alarm Socket                                | Alarm linkage intelligent socket Airlink                                          | See as<br>Wireless Alarm Linkage                    |
|         |                                                                                                                     |            | Socket Timer                                | Intelligent socket timer on/off setting                                           | See Intelligent Home                                |
|         |                                                                                                                     |            | Reader                                      | Read the data code sent by terminal accessories                                   | See                                                 |
|         |                                                                                                                     |            | Wired Defense Zone                          | Alarm information for configuring wired defense zones                             | See                                                 |
|         | Wi-Fi Setting                                                                                                       |            | Airlink                                     | Host gets into WIFI wireless networking airlink status (need to match mobile APP) | See as<br>Mobile APP with the host airlink & unbind |
|         |                                                                                                                     |            | Unbind                                      | Unbind the mobile app with the host                                               |                                                     |
|         |                                                                                                                     |            | MAC/IP                                      | Get the Wi-Fi MAC&IP address                                                      |                                                     |
|         |                                                                                                                     |            | Hotspot Configuration                       | Host gets into WIFI wireless network airlink status (need to match mobile APP)    |                                                     |
|         | Record                                                                                                              |            | Record/Playback                             | Record and playback                                                               | See as:<br>Record management                        |
|         |                                                                                                                     |            | Play                                        | Play the current record                                                           |                                                     |
|         |                                                                                                                     |            | Delete                                      | Delete the current record                                                         |                                                     |
|         |                                                                                                                     |            | Duration                                    | Set record duration                                                               |                                                     |
|         | Timer                                                                                                               |            | Arm Timer                                   | Arm timer time & on/off setting                                                   | See as:<br>Arm / disarm Timer                       |
|         |                                                                                                                     |            | Disarm Timer                                | Disarm timer time & on/off setting                                                |                                                     |
|         |                                                                                                                     |            | Zone&Sync                                   | Set the time difference between the local time with the Greenwich time            |                                                     |
|         |                                                                                                                     |            | Date & Time                                 | Host time manual setting                                                          |                                                     |
|         |                                                                                                                     | Wi-Fi Sync | Set if the time sync with the Wi-Fi         | Scope: on/off; default: on                                                        |                                                     |
|         |                                                                                                                     | 2G/4G Sync | Set if the time sync with the 2G/4G network | Scope: on/off; default: on                                                        |                                                     |
| Version | Search the Wi-Fi firmware, MAC address, 2G/4G firmware, 2G/4G module IMEI number, host firmware, host serial number |            |                                             |                                                                                   |                                                     |

Note: 1.Keyboard lock open: at the main interface, no pushing within 30 seconds or push directly, host will enter locked status. After locked, the user must enter a password to unlock before he can operate the host.  
 2.keyboard background light closed: at the main interface, no pushing within 30 seconds or push directly, host background light will be closed to save the power.  
 After selecting one language, the operation notice, display, SMS message will switch to the same language, host will restart while finished.

## First time Use

### Start operation

- Insert Card: insert a standard micro SIM card into the card slot as illustrated below
- Power On: plug in the power adapter through the USB 5V interface.
- Host On: in the off state, long press the power button till the "Welcome" displays on the screen. The host is on.
- Host Off: in the off state, long press the power button till the screen black. The host is off.

### System initialization

Main menu-System Setting-Initialization. All parameters, languages and time zones set by users will be back to factory default setting, all remote controls, detectors, RFID tags and records will be deleted, after initialization.



Networking IP deleted, the host is in GPRS offline statue. You'll need to send SMS to reset IP for the host to go back online.



Caution! only advised to do this when you forget operation password, host malfunction, parameters setting mistakes, unidentified detectors, remote controls or RFID tags learned. Initialization doesn't work under Keypad Lock.

## Smart Life APP Quick Use Guide

### APP Download

"Smart Life" APP has been released to the major global application stores, you can download it by searching "Smart Life" the application store or by scanning the QR code below.

**IOS App:** Please search" Smart Life" in Apple store to download

**Note:** IOS app has no QR code, have to download it in Apple store by searching Smart Life

**Android App:**Please search" Smart Life" in Google Play to download or scan the following QR code to downlod.

#### Notes:

- 1,Mainland China users can scan the Official Website Version and download it.
- 2,Non-Mainland China users just scan the Google Play Version
- 3,Both the Official Website Version and the Google Play Version are the same app, just only the download channels different.



Official Website Version



Google Play Version

## Account Registration and Login

When using a mobile phone number to register and log in, you need to select the corresponding country/region when registering and logging in, and replace the "+xx" country code at the beginning of the mobile phone number account with the code corresponding to the country to which the mobile phone number belongs.

## Device Network Configuration

The default network configuration mode is Airlink Configure, and it can also be switched to "SoftAP Configure" by "Other Mode".

When configuring the network for the device, the mobile phone needs to be connected to the Wifi network that the device needs to configure (only 2.4GHz WIFI network is supported when configuring the network for the device)

### Airlink Configure

-Use Smart Life APP to click the "+"in the upper right corner of the main interface -> Next select"Security & Sen ->Next select Alarm "Wi-Fi" and click OK to enter the Wi-Fi interface.

-Enter the correct WiFi password, click "Next", enter the device configuration preparation interface, and wait for the de to enter the Airlink Configure mode.

-According to the instructions, the device enters the WIFI Airlink Configure mode.

-Back to the "Smart Life APP", click "Continue" to configure the network, and wait patiently for the network configuratio be completed.

### SoftAP Configure

-Use Smart Life APP to click the "+"in the upper right corner of the main interface -> Next select "Security & Sensor " -> Next select Alarm"Wi-Fi" -> Next select "Other mode"-> Next Select "SoftAp Configure" and click OK to enter Wi-Fi interface.

-Enter the correct WiFi password,click"Next", enter the device configuration preparation interface, and wait for the device to enter the SoftAP mode.

-According to the instructions, the device enters the WIFI SoftAP mode.

-Back to the"Smart Life APP", click"Continue" to configure the network, and wait patiently for the network configuration to be completed.

## Menu Operation

This product is designed with capacity touch screen, utilizing current sensing of human body to function

For features not listed in this chapter, refer to the descriptions in the diagram above.

Function described in this part: include the phone number setting, remote controller add/delete, wireless detector add/delete and the external wireless siren matching can be set by mobile app.(only with  )

## Adding Alarm Phone Number

The host can be set to communicate with up to 5 phone numbers, dialing and SMS feature of which can be enabled/disabled separately. To set #1 phone number, for instance:

1.Keypad operation: Main Menu →Phone →1st Phone, press  to enter setting interface. You can input the alarm phone number (max.18 digits).

2.Move to  and press

to set it on/off. When you set it on, the host will call this phone number when alarm happens.

3.Move to  and press

to set it on/off. When you set it on, the host will send SMS to this phone number when alarm happens.

4. Press  to confirm Setting.

## Adding/Deleting Remote Controller

Push: Main menu→ Parts→ Remote controller, enter the interface for remote controller setting.

Push  or  for page down, it will show all the Synchronized remote controller

## Adding a new remote controller

↓ Press  to add remote, 20-second countdown starts.

Press any buttons to send wireless signal to the host.

↓ When 'Learning OK' displays, the remote is added successfully.

↓ When 'Device code has been learned' displays, it means the remote control

↓ was added already or it has the same wireless code as the other wireless detector added. Please change to a new remote.

## Delete

·choose the remote controller listed, press the related numbers to delete the related remote controller,

·choose "0" to delete all the remote controller..

## Match code with/delete wireless detectors

·Press: Main→menu→ Parts→ Detector,enter into the detector setting interface.

·Press  or  page down, it will list all the Synced wireless detectors.

## Sync the new wireless detectors

·Press ,host get into the"Set Name/Mode/Number"interface

·Press ,choose the zone name for the none Sync wireless detectors.

Press ,choose the none Sync wireless detectors. (stay arm active/ out arm active/24 hours active/ off/ doorbell silent 24 hours/ stay arm available (no delay) out arm available (no delay)

Choose"Stay Arm Active",after the arm or stay arm setting, the detectors in this zone will alarm while be triggered. Front Door 、 Window 、 Balcony 、 Perimeter use this kind of detectors.

Choose" Out Arm Active", after the stay arm setting, the detectors in this zones will not alarm while be triggered. Living Room 、 Bedroom and other internal place use this kind of detectors.

Choose "24 Hours Active", it will alarm while be triggered anytime, SOS Panic、 Smoke/Fire、 Gas、 CO、 water Leakage use this kind of detectors.

Choose"Close", it will not alarm while triggered.

For wireless doorbell, please choose"Doorbell", It will note "dingdong" anytime while be triggered.

24 Hours Silent: alarm sent when detectors triggered, siren muted, recommended for SOS(PANIC),smoke,gas,CO,water leakage detectors,etc.

Stay Arm Active without Delay: when panel is armed or star armed, alarm sent when detector is triggered without delay, recommended for door, windows, balcony, perimeter detectors.

Out Arm Active without Delay: when panel is stay armed, alarm won't be sent when detector is triggered, recommended for living room, bedroom detectors.

## Pair the wireless Siren

Go to Menu → Parts, get into the parts pairing interface

- When host shows "Learning OK", means the detectors Sync successfully, it will list all the name of the detectors, type, code and address code.
- If host shows "Device code has been learned", means the detectors have been learned or repeated with the code of the other learned remote controller, need to be changed.

## Delete

- Press the listed detectors , delete the chosen detectors.
- Press "0", delete all the detectors.

## Setting Name/Type of Wired Defense Zone

The host supports up to 4 wired defense zones, name and type of which can be set separately.

 Zone number for wired defense zones are not changeable and within 100-103  
Setting wired zone 100 .for example:

- Main Menu → Parts → Wired Zone, wired zone 100, enter setting.
- Press  to set name.
- Press  to set type

Stay Arm Active usually assigned to sensors on entry and exit doors, exterior doors and windows, perimeter. Active when armed in AWAY or HOME mode.

We recommend to set Door/Window Sensor to Stay Arm Active.

Out Arm Active usually assigned to a interior area (i.e.: foyer, lobby, or room).

Bypassed automatically when armed in STAY mode. We recommend to set PIR Motion Detector to Out Arm Active.

24 Hours Active usually assigned to a zone containing an Emergency Button, Smoke Sensor, CO, Water Leakage and Gas Sensors.

To used as doorbell, select Doorbell.

## Pair and delete the New RFID Tag

Go to Menu → Parts → RFID → enter into the RFID setting interface  
Press ^ or v . will list all the paired Rfid

Press v , host will show "please trigger the parts", and will get into the 20 seconds cut down.

Put the Rfid tags close to the Rfid induction zone,

While the host showing "learning ok" means the pairing succeed, it will list all the paired rfid tags. If the host shows "this device code already been learnt", means the Rfid code already been learned.

## Delete

After choose the list Rfid, press the related card number from the panel and delete the relate Rfid, Press 0 to delete all the Rfids

## Pairing with the wireless strobe siren

Operate the none paired wireless siren into the pairing mode (please refer the strobe siren user manual)

press the host of the siren pairing code button, host will the show the "code pairing signal already been sent" and sent to the wireless siren the siren will notice "pairing succeed. (refer the strobe siren user manual)  
after the pairing succeed between the siren and the host, the host will alarm, and the siren will beep the same time.

## Wireless alarm linkage

### Pairing alarm linkage Wireless Socket

- Go to Menu → Parts → alarm Socket. Getting into the wireless socket pairing interface.
  - operate the none pairing wireless socket and get into the pairing mode (refer the user manual of the wireless socket) Press and hold the button of the switch until it lights up, then the switch goes into the paring mode.
  - Tap ↑ and choose on  and ↓ off  The hub shows  and sends the on and off transmission signals to the switch.
- For pairing succeed wireless socket, can control on/off by host or mobile app, or can control by the socket timer.

## Intelligent home appliances

Full Socket

· Press main interface: socket, get into the socket controlling interface.

Code paring

· Code paring method between the host and the socket, please refer "socket code paring with the alarm host linkage" host can code pairing with the intelligent socket.

· Press ↑ choose  and choose , host will send on/off wireless signal to control the socket.

· Socket pairing with the host, can use the host or the APP to control on/off, or can set the socket timer.

## Socket Timer

- Host can set several groups timer to open/close the intelligent socket. Can set the socket number, time, time on/off etc. in each group.
- Press: Main menu→ Parts→Socket Timer, enter the intelligent socket timer interface.

## Add the timer

- Press  enter into the socket timer setting interface.
- Press  or + in - ,set the socket number.
- Press  or + in - ,adjust the timer time.
- Press the week item in  ,set the day of the week.
- Press  choose timer on or off.
- Press  , finish the setting.

## Edit

- Press the serial number front of the Timer, can edit the relevant timer, same as the above.

## Delete

- Press  behind of the timer list, delete the relevant timer.
- Press 0 delete all the Timer.

## Voice Recording

### Alarm Recording

You can record the voice by the device up to 20seconds, the host will call pre-set phone numbers and play the relative recorded voice.

- Main Menu→ Voice Recording→ Record and feedback.

The host displays "Busy, please wait"

- When it displays "Recording", the countdown starts.
- Speak to the host, make sure the voice record is simple and precise, This is address, intrusion detected'
- When finished, "Voice record playing" displays, and you'll hear the playback. Click  to save, it prompts "Saving, please wait"
- When "Operation succeed" displays, the recording is done.

## Timed Arm/Disarm

You can set auto arm/disarm based on your routine to avoid duplicated operation in everyday life or not to forget arm/disarm.

Timed Arm

- Main Menu→ Clock → Timed Arm
- Click  and  to set arm time (hour,minute)
- Click  to select "ON".
- Click  to confirm.

Timed Disarm

- Main Menu→ Clock → disarm.
- Click  and  to set arm time (hour,minute)
- Click  to select "ON".
- Click  to confirm.

## REMOTE SMS

### Set Parameters by SMS

User only need to edit the SMS as below format, and send to the host SIM card number to finish the setting

|   |                 |   |                 |                 |   |                 |                 |   |
|---|-----------------|---|-----------------|-----------------|---|-----------------|-----------------|---|
| * | System password | * | Address setting | Content setting | * | Address setting | Content setting | * |
|---|-----------------|---|-----------------|-----------------|---|-----------------|-----------------|---|

One SMS can be include one or several address and content, but need to be separated by \*, the head and the end must be \*, each address should be 2 digits, otherwise it may have the unexpected result, each SMS must be less than 160 bytes, we suggest to finish all the contents in one SMS.

| Address | Function                                                 | Content & Scope                                                                                                                                  | Factory Setting    |
|---------|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|
| 35      | Redial times while dial failure                          | 1~255 Times                                                                                                                                      | 1 Time             |
| 36      | bell ring times while auto receiving                     | 1~255 Times                                                                                                                                      | 1 time (in future) |
| 38      | User name password correct                               | 0000~9999 must be 4 digits                                                                                                                       | 1234               |
| 39      | System password correct                                  | 0000~9999 must be 4 digits                                                                                                                       | 6666               |
| 43      | Parameter initialization                                 | See note 1                                                                                                                                       |                    |
| 51      | alarm phone 1st setting                                  | See note 2                                                                                                                                       | Closed             |
| 52      | alarm phone 2nd setting                                  | See note 2                                                                                                                                       | Closed             |
| 53      | alarm phone 3rd setting                                  | See note 2                                                                                                                                       | Closed             |
| 54      | alarm phone 4th setting                                  | See note 2                                                                                                                                       | Closed             |
| 55      | alarm phone 5th setting                                  | See note 2                                                                                                                                       | Closed             |
| 62      | Search the GSM field strength                            | Empty                                                                                                                                            |                    |
| 90      | Set the GPRS sever IP address                            |  this setting only be valid while the GPRS online, see note 3 | Empty              |
| 92      | Set the GPRS APN                                         |  this setting only be valid while the GPRS online, see note 4 | CMNET              |
| 93      | Set domain name of the network time sever                |                                                                                                                                                  | us.ntp.org.cn      |
| 94      | Set the time difference with the standard Greenwich time |                                                                                                                                                  | +8                 |

**Setting comment**( allthe example used the default system password:6666):

**1. Parameter initialization:**keep the learned remote controller, wireless detectors and RFID cards, others recovery to factory setting. Set the SMS content as: \*6666\*43\*

## 2. Alarm phone number setting format: xxxxxxxxxx,A,B

Such as: xxxxxxxxxxxx is the phone number(no more than 18 digits),A: alarm voice dial switch(1-on,0-off),B: SMS alarm switch(1-on,0-off).

### For Example:

Set 2 alarm phone number, the one 13912345678 used to receive the voice dialing and SMS, the one 075581234567 only used to receive the voice dialing, then the SMS content should be:

\*6666\*5113912345678,1,1\*52075581234567,1,0\*

## 3. IP address setting format should be: aaa,bbb,ccc,ddd,xxxxx

Such as: aaa,bbb,ccc,ddd is the IP address,xxxxx is the port number,use the comma to separate for each address.

### For example:

Set the GPRS network sever IP address is 116.62.42.223, port number is 2001, then the SMS content setting should be: \*6666\*90116,62,42,223,2001\*

## 4. Set the local GSM operator GPRS access point APN

### For example:

Local GSM operator GPRS access point APN is internet.beeline.kz, then the SMS content setting should be: \*6666\*92internet.beeline.kz\*

## Set Control Panel' s Name by SMS

Set one name to the host, used for the prefix for the alarm SMS, so to distinguish the position for each alarm host.

SMS setting format 1234 is the user password, @ is the commend words, "XX estate a building" is the content name (no more than 40 digits).

## Searching system setting:

SMS format : \*6666\*62\* , host echo:

|                    |                                                            |
|--------------------|------------------------------------------------------------|
| SYSTEM set:        |                                                            |
| SN:                | Host serial number                                         |
| LANGUAGE:          | Host language                                              |
| ENGINEER PASSWORD: | Engineer password                                          |
| USER PASSWORD:     | GSM field strength value(0 or 99 means the signal unusual) |
| WIFI RSSI:         | WIFI field strength value                                  |

## Searching system 2

SMS format : \*6666\*90\* , host echo:

|              |                                       |
|--------------|---------------------------------------|
| SYSTEM set2: |                                       |
| APN:         | Name of the GPRS access point         |
| GPRS IP:     | GPRS network IP sever & client number |
| NTP:         | Network time sever domain name        |
| TIME ZONE:   | GMT standard time                     |
| SERVER:      | Sever                                 |

## Alarm phone number searching setting

SMS format : \*6666\*51\* , host echo:

|                 |                                                                |
|-----------------|----------------------------------------------------------------|
| PHONE set:      |                                                                |
| 1:              | 1 alarm phone number, voice switch, SMS switch, general switch |
| 2:              | 2 alarm phone number, voice switch, SMS switch, general switch |
| 3:              | 3 alarm phone number voice switch SMS switch general switch    |
| 4:              | 4 alarm phone number voice switch SMS switch general switch    |
| 5:              | 5 alarm phone number voice switch SMS switch general switch    |
| REDIAL COUNTER: | voice alarm redial counters                                    |

## Delay searching setting

SMS format: \*6666\*33\* , host echo:

|            |                              |
|------------|------------------------------|
| DELAY set: |                              |
| ENTRY:     | delay entering(unit: second) |
| EXIT:      | delay quit(unit: second)     |
| SIREN:     | alarming time(unit: minutes) |

## Searching switch setting

SMS format : \*6666\*46\* , host echo:

|                  |                                         |
|------------------|-----------------------------------------|
| SWITCH set:      |                                         |
| ARM/DISARM BEEP: | arm/disarm Beep switch(1 : on, 0 : off) |
| ALARM BEEP:      | alarm beep switch(1 : on, 0 : off)      |
| ARM/DISARM SMS:  | arm/disarm SMS switch(1 : on, 0 : off)  |

## Learned remote controller & detector quantities

SMS format : \*6666\*26\* , host echo:

|                   |                                      |
|-------------------|--------------------------------------|
| DETECTOR learned: |                                      |
| REMOTE:           | learned remote controller quantities |
| DETECTOR:         | learned detectors quantities         |
| RFID:             | learned RFID card quantities         |

## PHONE FUNCTION

Push  in the main interface, and enter the phone number dialing interface.

Push  to look over the dialed phone number.

 In any of the following states, phone call operation will be forbidden: GSM network abnormal, arm/disarm, phone alarm being in progress.

## User Daily Operation

Users can operate the alarm host in any ways as below:

- On-site Remote controller, keyboards , RFID cards .
- Remote SMS
- Mobile phone APP
- GPRS alarm center

### Out Arm

- By remote control: press  key to trigger “Out Arm”.
- By keyboard: In Main Interface, press  to trigger Out Arm.
- By RFID tag: In disarm mode, put the RFID card close to the sensitive area on bottom right corner of the alarm host.
- By remote SMS: Send SMS message `1234#1` (1234 is user password), the alarm host will send “System Armed!” SMS to mobile phone to confirm.
- By APP: In Main Menu, select “icon, After around 3 seconds, operation for “Out Arm” is completed, the App status icon updated to Out Arm.
- The alarm host reminder: A reminding voice “System armed” will be heard, the main Interface displays “Armed” and “Please exit”, and an exit time progress bar appears. The user should leave the alarm zone before exit time. If Arm/Disarm SMS switch  is on, the preset phone will receive SMS of “System Armed!”.

 In Out Arm mode, all defense zones are on alert statues. If there is any defense zone being triggered, the alarm host will generate sound and light alarm. Meanwhile, alarm host will send alarm SMS and make calling to preset phone number, and push alarm information to APP/GPRS alarm center. If alarm host has been learned alarming leakage smart plug, the plug will switch on when alarming.

### Stay Arm

- By remote control: press  key to trigger “Stay Arm”.
- By keyboard: In Main Interface, press  to trigger Stay Arm.
- By remote SMS: Send SMS message `1234#3` (1234 is user password), the alarm host will send “System Stay Armed!” SMS to mobile phone to confirm.
- By APP: In Main Menu, select “ Stay Arm” icon, after around 3 seconds, the operate for “Out Arm” is completed.

· The alarm host reminder: A reminding voice “System armed” will be heard, the Main Interface displays “Stay Armed”. If Arm/Disarm SMS switch  is on, the preset phone will receive SMS “System Stay Armed! “.

 In Stay Arm mode, only valid Stay Arm defense zones are on alert status. If any defense zones is been triggered, the alarm host will generate sound alarm, Meanwhile, alarm host send alarm SMS and make calling to preset phone number, and push alarm information to APP/GPRS alarm center. If alarm host learned alarming. leakage smart plug, the plug will switch on when alarming.

### Disarm

- By remote control: press  button to trigger “Disarm”.
- By keyboard: press  on main interface .
- By RFID tag: in out arm/stay arm mode, put the RFID card close to the sensitive area on bottom right corner of the alarm host. By SMS: Send SMS message `1234#2` (1234 is user password), the alarm host will send “System Disarmed!” SMS to mobile phone to confirm.
- By APP: In Main Menu, select “ Disarm” icon, after around 3 seconds, the operate for “Out Arm” is completed.
- The alarm host reminder: A reminding voice “System Disarmed” will be heard, the Main Interface displays “Disarmed”. If Arm/Disarm SMS switch is on, the preset phone will receive SMS “System Disarmed!”.

 In Disarm mode, all alarm procedure will be terminated, If Arm/Disarm SMS switch is on  , the preset phone will receive SMS “System Stay Armed! “. If alarm host learned alarming leakage smart plug, the plug will switch off.

### SOS

- By remote control: press  button on the remote control.
- By keyboard: Press  on the main interface of the alarm host.
- By APP: Select “SOS” icon in the main menu.
- The alarm host reminder: The Main Interface displays “Help”. The alarm host will generate a sound alarm, and send alarm SMS or make calling to the preset phone numbers , simultaneously send the alarm message to mobile phone APP or GPRS alarm center.

## Confirm the operation result by SMS

<The alarm host name>:  
The result of remote operation

## ALARM & REMOTE MONITORING

The host supports multiple types of alarm. When alarm occurs, it sends alarm messages containing the detector name and number to the user's mobile phone, pushes alarm information to the mobile phone APP, and sends alarm information to the handset monitoring center. At the same time, it dials the user's telephone, and the user can conduct on-site monitoring and remote control after the connection.

### The host also supports the following alarm classes

- Main power failure (the alarm is effective after the main power failure lasts for 5 seconds)
- Anti-prying alarm (alarm after separation of main engine wall mounting bracket and main engine)
- Spare battery power shortage (The alarm is valid when the spare battery voltage is less than 3.45V and lasts for 10 seconds under the condition of main power failure.)
- Main power recovery.

### SMS Alarm

Alarm occurred, host will send SMS manger to the preset phone numbers,should

<Host Name>:  
Current alarm!  
Defense Zone: xx

### Auto Dial Number Setting

- When alarm occurs, host will dial the preset phone numbers. (dial switch should be opened), after user answered, host will displays the current alarm type first, if there is a default recording, it will have voice notice "Press 1 is arm, Press 2 is disarm, Press 3 to monitor, Press 4 to talk". If user finds the misinformation, press 2 to disarm and end the alarm progress. Users can also press 3 to close the scene alarm. Just hang up the phone without monitor.
- If the user fails to answer or dial, the host will continue to dial the preset phone according to the preset number of dials until the user receives the call.

### Preset Telephone Remote Calls Host

When several sets of telephone numbers preset by the host actively call the alarm host, the host will automatically connect, after the call is connected, the host can monitor the on-site scene or control the host according to voice prompts.



### Mobile app alarm receiving procedure

When alarm occurs, panel sends push notification to your mobile phone. Users can check the alarm type in the APP main menu. Tap on 'Alarm Info' to check all records of panel operations and alarm logs.



### Networking Alarm Receiving Procedure

When alarm occurs, host will send the alarm message to the network monitoring center via the GPRS. The emergency response can be handled quickly after the central police have responded to the alarm.

This function will be valid only after the host has been opened with the user network alarm function and service.)



The IP address must be set up by using SMS, and this function will be effective.

APN must also be set in foreign or other areas. As for the method of these two settings, please see SMS message setting parameters).

## Technical Parameters

- Input Voltage: DC5V (Micro USB Standard Interface Power Supply)
- Working Current: <500mA
- Siren Output: <80db in 1 meter
- Wireless Frequency: 433Mhz/2.4G/125K
- Wireless Coding: eV1527
- GSM System: 850/900/1800/1900MHz
- WIFI System: IEEE802.11b/g/n wireless standard
- Spare Battery: 3.7V/1000mAh
- Working Temperature: -10 ~ 55 °C
- Relative Humidity: < 80% (no condensation)
- Product Size: 182\*112\*16MM (length x height x thickness)

## PACKING LIST

- one set of host with built-in backup battery.
- micro USB 5V / 2A standard power supply, one set of power cord
- mini siren\*1
- screw pack\*1
- RFID tags\*2
- PIR sensor\*1
- window/door sensor\*1
- remote controller\*2