 
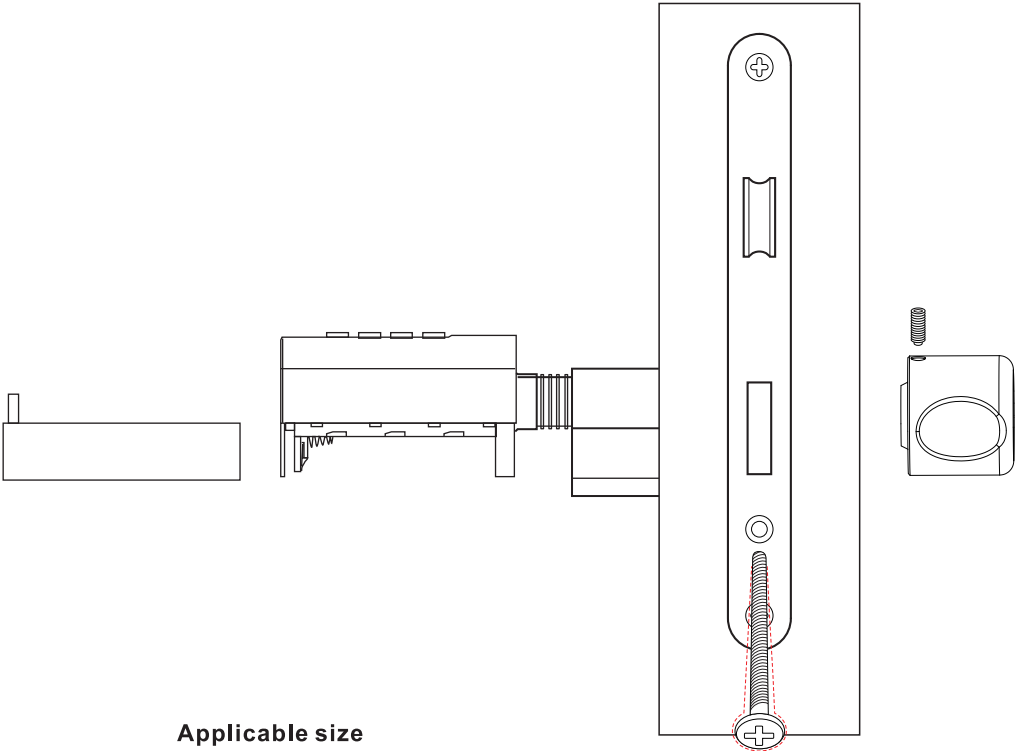 



PCB10KEY71
Instruction

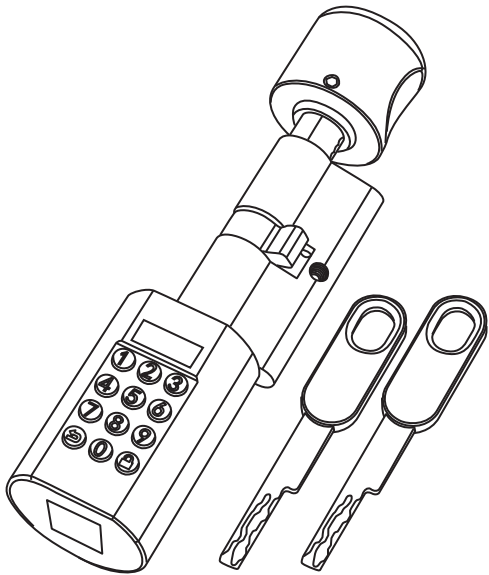




Applicable size

Catalogue

 - Applicable size01
- Product components03
- 1.Passcode: Flow chart04
- 2.RFID card:Flow char
- 3.Other settings: Flow chart05
- Accessories list (TOOL BOX)06
- Install battery
- Adjust the length of the cylinder07
- Installation pictures
- Uresetting diagram
- Unlock and lock08
- FAQ
- Bluetooth activation and login instructions09
- Select"Android/iOS"to download
- Log in to the app
- Bind the device10
- Specifications11
- Operating instruction



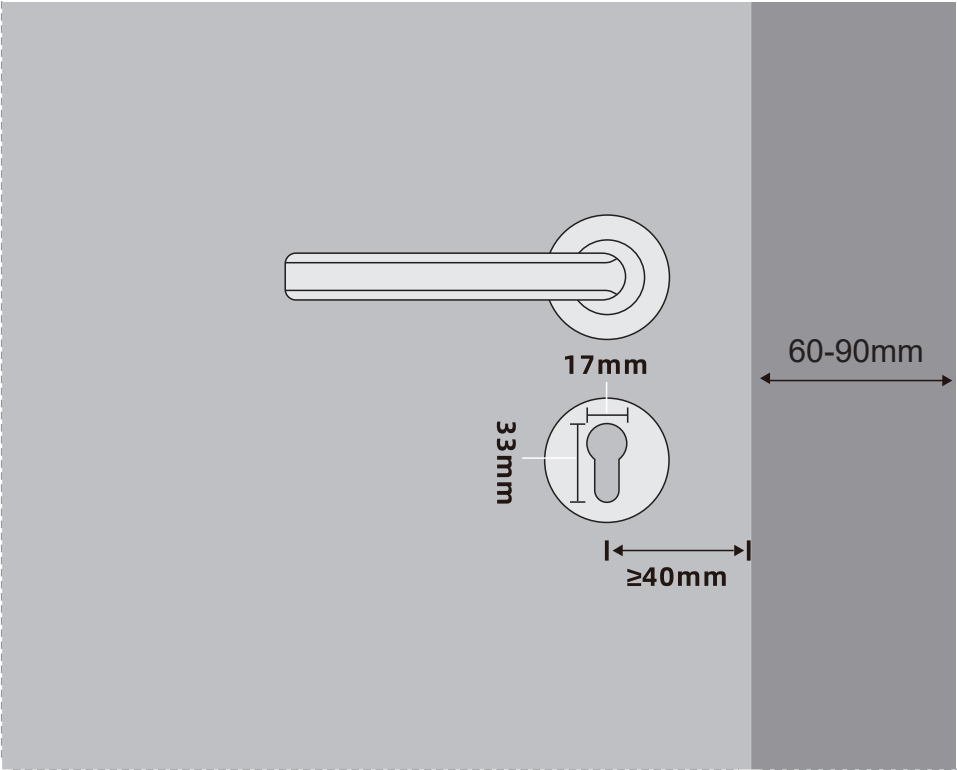


Product Components

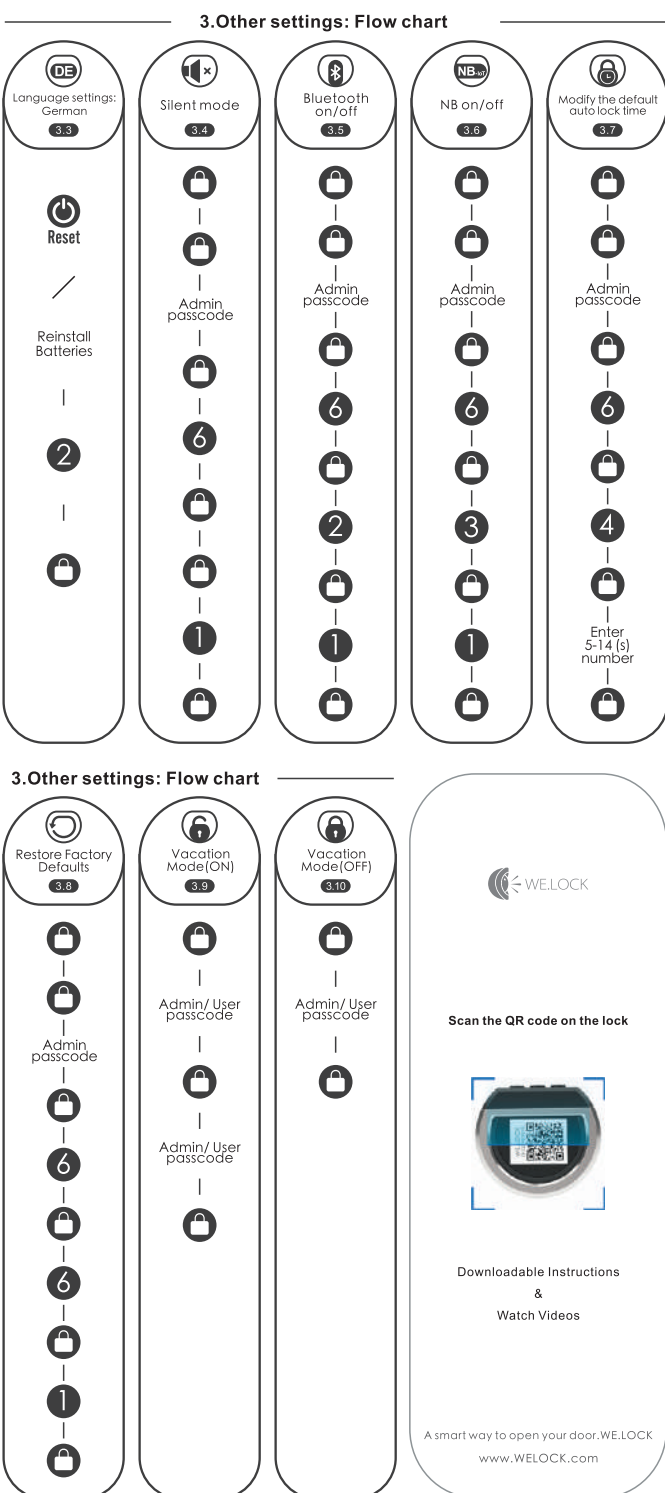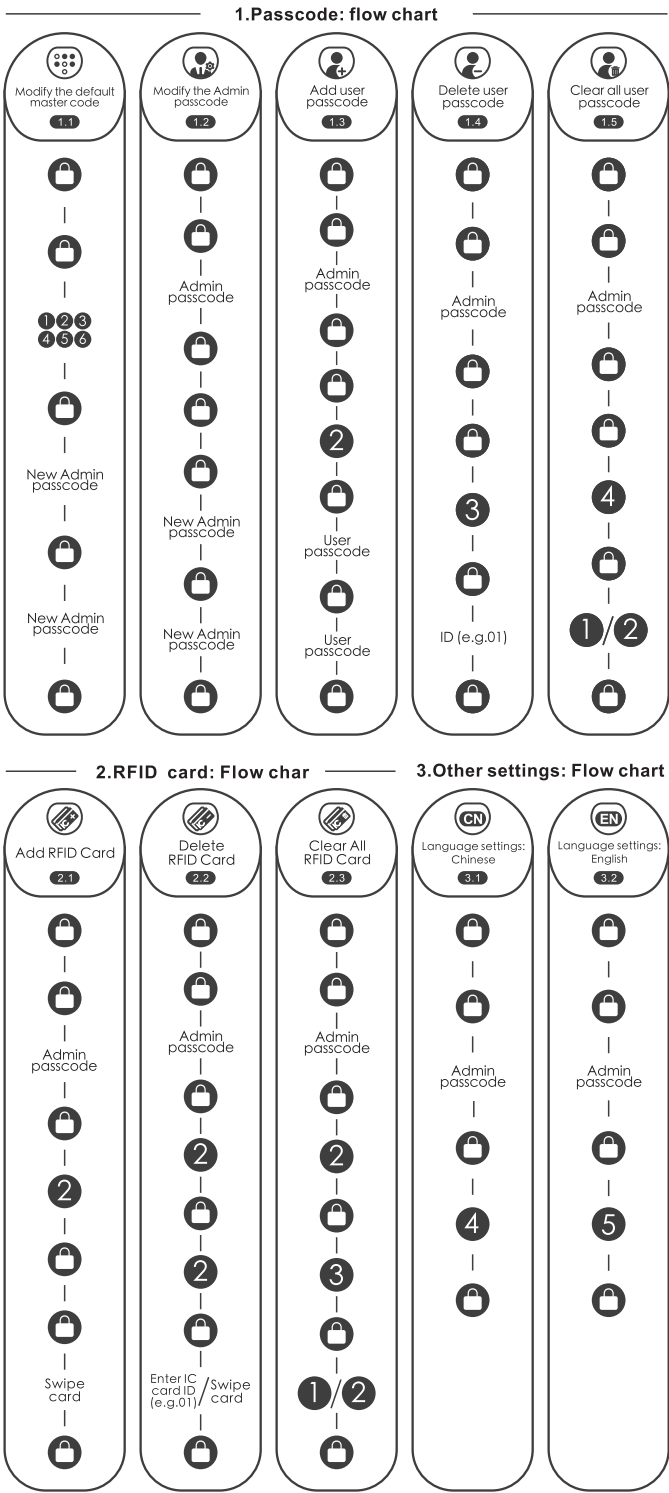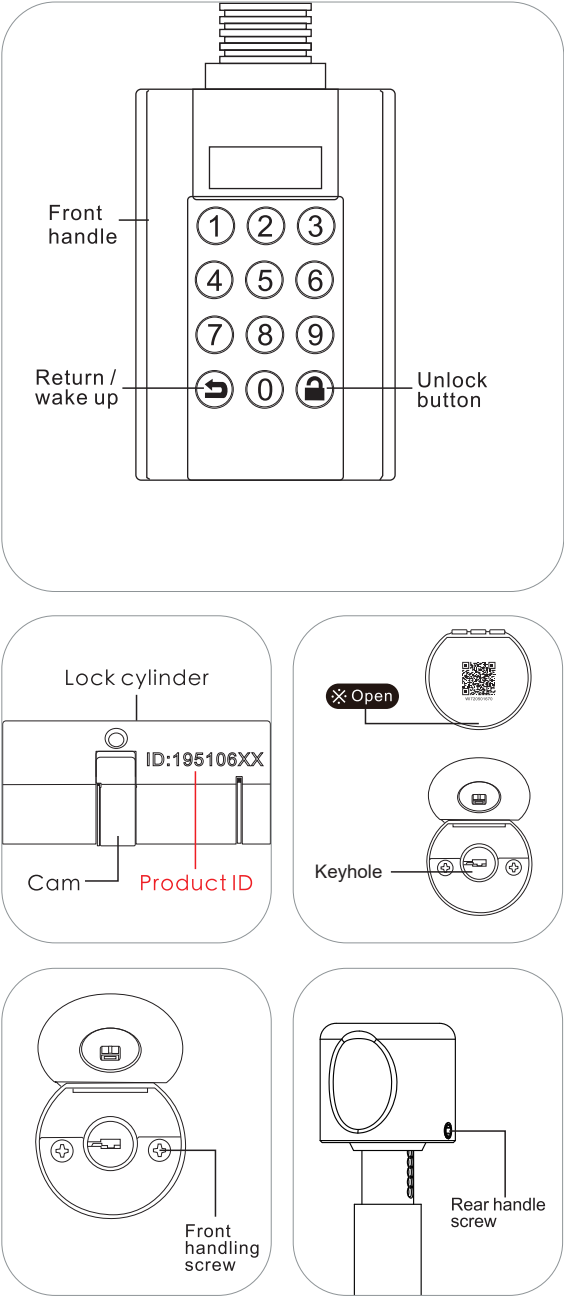


Accessories list (TOOL BOX)


If there is alack of accessories,please contact customer service in timne.

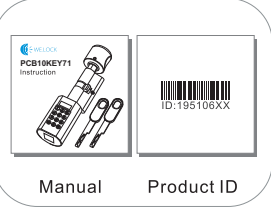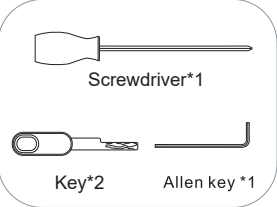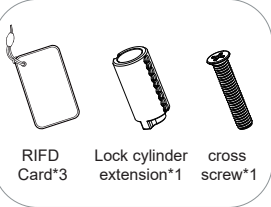


Install battery

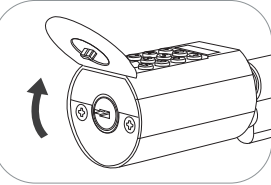


1.Open the silicone cover

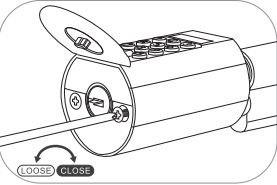


2.Loosen the screw

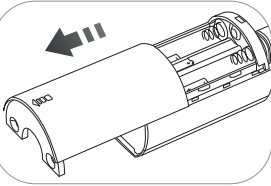


3.Open the battery box behind the front handle

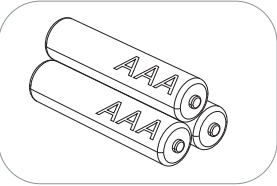

4.3 * AAA battery (Please buy it by yourself)

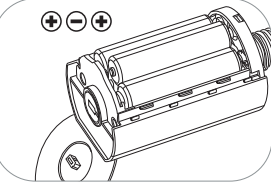


5.Install battery

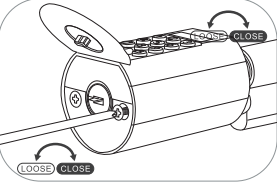


6.Fix the bottery cover and tighten the screws

 
Adjust the length of the cylinder

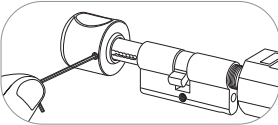


1. Loosen the screw of rear handle with allen key

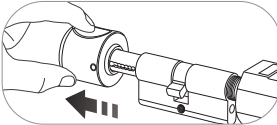

2. Take out the rear handle

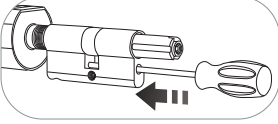


3. Use screwdriver to insert the lock cylinder, press it to take out the front handle

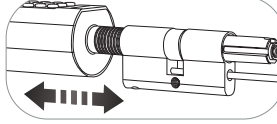


4. Use screwdriver to insert the lock cylinder, press it to adjust the front handle length


Spare lock cylinder extension , Which can increase the length of the lock cylinder if necessary

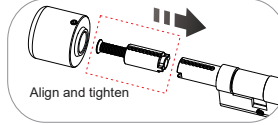


Align and tighten

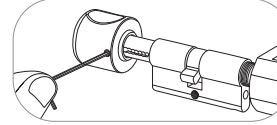


Installation pictures

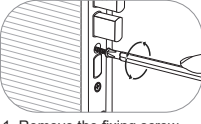

1. Remove the fixing screw and original cylinder

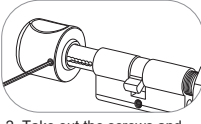


2. Take out the screws and take out the rear handle

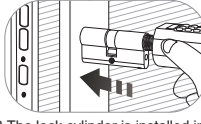


3.The lock cylinder is installed into the lock hole from the outside




4. Install Fixing screws

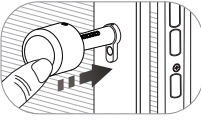


5. Install rear handle

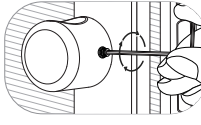


6. Fixed rear handle screw

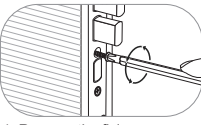


1. Remove the fixing screw and original cylinder

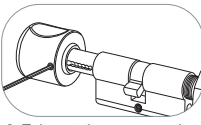


2. Take out the screws and take out the rear handle

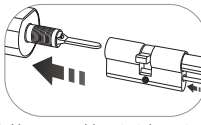


3. Use screwdriver to take out the front handle

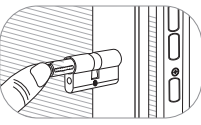

4. Install the cylinder from inside door

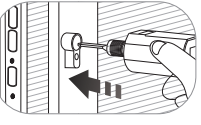


5. Use screwdriver to insert the lock cylinder, and then install the front handle

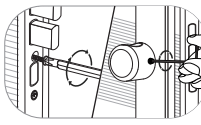

6. Fix the fixing screw and install the rear handle

Unlock and lock

Unlock the door from outside

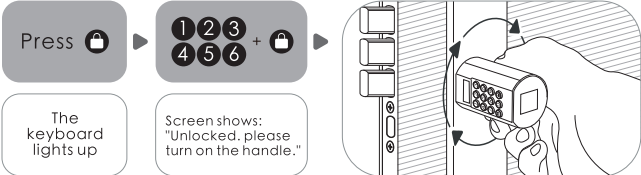

Press




The keyboard lights up

Screen shows: "Unlocked, please turn on the handle."

The knob can be rotated 360° degree freely after locked.

To protect the lock not be damaged by torsion forcefully.

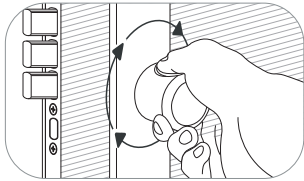

Low battery prompt:

After waking up, the screen displays:



After 3 "beep beep beep" beeps. The screen prompts: "Battery Low".

Please replace the battery promptly when the above message appears.

FAQ


- What should I do when I receive the lock?**
When you received the lock, please modify the default password "123456" to your own admin password first, so please keep it in your mind.
- Where can I find the lock ID?**
Please find the lock ID with 8 digits number on the middle of lock, or find it on packing box.
- When will the low battery alarm?**
The battery is below 20%.
- How can contact customer service?**
Please contact this email: Service@WelockGlobal.com

Bluetooth activation and login instructions

Scan the QR code on the lock




Select "Android/iOS" to download

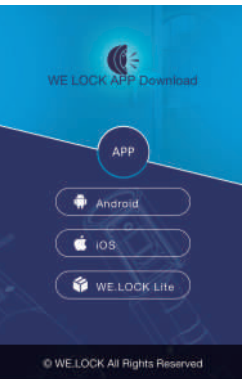


Log in to the app


- Select your country/region
- Enter the phone number/email to get the verification code
- Click"Send"
- Enter the verification code after receiving the message
- Click"Login"

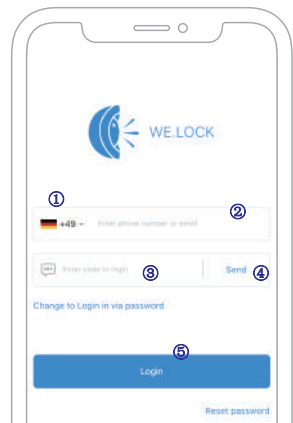

Bind the device

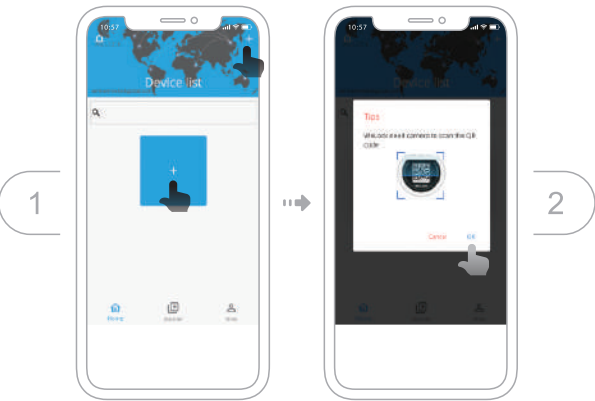


1

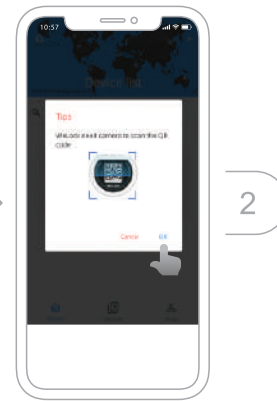


2



3

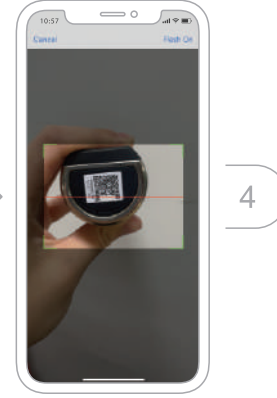

4

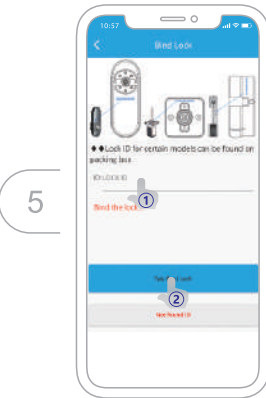

5

Specifications

Brand	WE.LOCK
Applicable door types	Wooden doors, interior doors, entrance doors etc
Adjustable range	60-90mm
Operating Temperature	-25℃ - 60℃
Pressing Cycle Times	100,000 Times
Material of handle	Zine Alloy
Way to unlock	Passcode/IC card /Bluetooth/Key
Battery Type	3* AAA Battery
Power input	3.6V-4.5V
Battery Replacement	Replaceable
Color	Silver
Battery Life	10-12 months

Operating instruction

- Enter the wrong passcode 5 times continuously . the system is locked for three minutes and cannot operate.
- Press to wake up the keyboard+10 digits temporary passcodeEnter the wrong passcode 5 times continuously, the system is locked for three minutes and the cannot operate. Temporary passcode generation needs to be donein the App. The time on the screen should be the same as the time on the phone, otherwise the temporary passcode will be invalid.
- Press to wake up the keyboard+ swipe the IC cards Swipe the unmatched card 5 times continuously, the system is locked for three minutes and the cannot operate. Any IC card can unlock the door in factory state.
- Bind the lock on APP
Bind the lock on APP via Bluetooth, click "unlock" , and the phone time will be synchronized to the lock via Bluetooth.