

BAC-008 Series WiFi Thermostat

User Guide



For Fan Coil Unit

FEATURES


On Appearance

- 1. LED display, more friendly interface; LED matrix light, simple display, energy saving, protect your eyes.
- 2. Touch buttons to make simple operation.
- 3. The ultra-thin embedded panel perfectly fits all kinds of walls; The visible thickness above the wall is only 13mm.
- 4. Frameless acrylic panel design, simple and elegant;
- 5. Classic black/white color scheme, seamlessly integrated.
- 6. Compatible with standard 86mm square cassettes and 60mm European cassettes to meet all installation environments;
- 7. Interlock to connect gives you easy installation.

On Functionality

- 1. Rich function options, Modbus, WIFI, keycard, etc., to meet all your needs;
- 2. Strict temperature control accuracy (± 1°C) to provide the warmth you want;
- 3. Power off protection, save all your settings safely;
- 4. Preset adjustment of 5+1+1 mode in a week, programmable setting of 6 time periods a day, green energy saving, Less cost, more intelligent and environmental protection;
- 5. Support the creation of product local groups/shares to achieve unlimited centralized control of the number of products/ multi-terminal control;
- 6. Perfect access: Tmall Genie, Amazon echo, Google Home, full experience new voice control method;
- 7. Create thermostat group to Centralized control.

DIMENSION Unit: mm

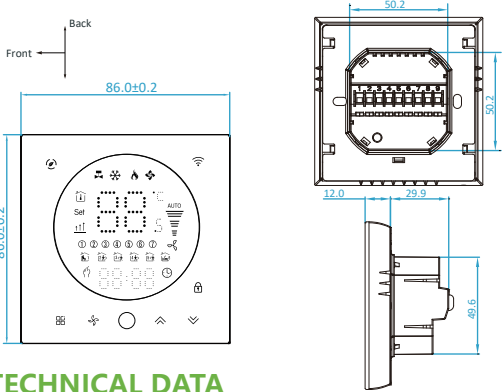

TECHNICAL DATA

Power Supply: 95 ~ 240 VAC, 50 ~ 60HZ
Fan Relay Amps Resistance: 5A; Inductive: 3A
Valve Relay Amps Resistance: 3A; Inductive: 1A
Sensor: NTC3950, 10K
Set Temp. Range: 5 -35 °C
Accuracy: ±1 °C
Display Temp. Range: 5 ~ 99°C
Ambient Temp.:0~45 °C
Ambient Humidity: 5 ~ 95 % RH (Non Condensing)
Storage Temp.: -5~ 45 °C Timing Error: < 1%
Power Consumption: <1.5W
Shell Material: PC +ABS (Fireproof)
Installation Box: 86 * 86mm Square or European 60mm Round Box
Wire Terminals: Wire 2 X 1.5 mm² or 1 x2.5 mm²
Protection Class: IP20
Buttons: Capacitive Touch Buttons

Welcome

Please confirm that this product is suitable for your heating equipment before installation;
*Before installation or maintenance, please make sure to keep the power off;
*Please strictly follow the wiring diagram for wiring installation;
*Installation to the wall, please confirm that the fasteners are suitable for this product;
*Do not pull the cable too hard, otherwise the product will be damaged;
*If a hard plastic wire is used in the installation process, it must be bent to an appropriate angle in advance;
*Please arrange for professionals to install;
*Please contact the after-sales service for equipment failure, please do not try to repair it yourself;
* After installation, please refer to this manual to check again to ensure normal and safe use, and keep this manual properly.

In the box you will find

- Thermostat 1pc
- Screws 2pc
- User Guide 1pc
- QC Passed 1pc

ABOUT YOUR THERMOSTATS

BAC-008 series Modern Touch Screen Room Thermostats are designed to on/off control the fans and valves in air conditioner applications via comparison of the room temperature and setting temp. as reaching the aim of comfort and saving energy.

MODEL DEFINITION

A: Two pipe; Control Fan Coil Unit and Two Wired Motorized Valve
M: Two pipe; Control Fan Coil Unit and 0-10V Motorized Valve
E: Four pipe; Control Fan Coil Unit and Two Wired Heat Valve and Two Wired Cool Valve.
N : Modbus RTU communication
W : Wifi connection
W2 : Window
T : Clock
For example: BAC-008ALW

K : Keycard
E : External Sensor
P : Programmable


BEFORE WIRING AND INSTALL

- 1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
- 2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
- 3. Installer must be a trained, experienced service technician.
- 4. After installation is complete, check out product operation as provided in these instructions.



Electrical Shock or Equipment Damage Hazard.
Can shock individuals or short equipment circuitry.
Disconnect power supply before installation.


WIRING

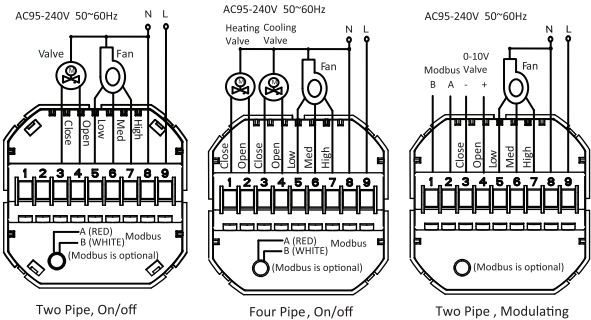


INSTALLATION

Your thermostat is suitable for installation within a standard 86mm pattress box or European 60mm pattress box.

- Step 1. Keep power off. See Fig 1.
- Step 2. Remove the mounting plate by pushing the LED assembly. See Fig 2.

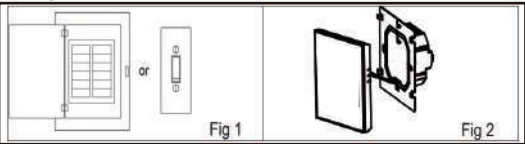


- Step 3. Connect power supply, load into the appropriate terminals. (see "Wiring your thermostat" for details and Fig 3).
- Step 4. Fix the mounting plate into the wall with screws in the box. See Fig 4.

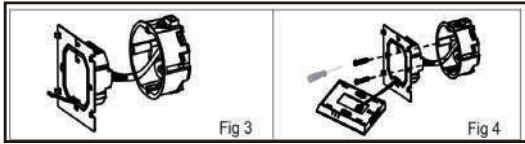


Step 5. Fix the thermostat body and the mounting plate by the lower button. See Fig 5.

Step 6. Installation complete. See Fig 6.

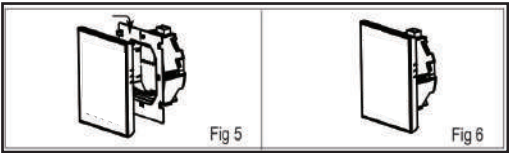

HOME SCREEN QUICK REFERENCE

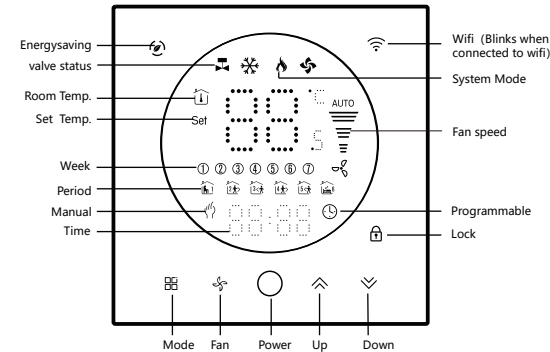

OPERATION

During Power On

- 1.Power On/off: Press to turn the thermostat on/off.
- 2.Manual & Programmable
Press and hold , will flash. Press to select manual and press to select weekly programmable.
- 3.Setting Temperature
In the mode of manual, press to set temperature. will display in below the middle of the screen.
- 4.Locking your Thermostat
Press and hold the for 5 seconds to lock/unlock your thermostat.
In item 3 of high senior options, you can select full lock or half lock.
- 5.Selecting System Mode
Press to change the system mode HEATING, COOLING and VENTILATION. In the mode of VENTILATION, the valve is off but the fan runs.
- 6.Setting the Fan Speed
Press go to select the fan speed AUTO, HIGH, MED, LOW.
- 7. Adjusting/Setting the Clock
Press and hold , will flash. Press to set minute, hour and weekday (1= Monday, 2 = Tuesday etc.) by using the arrows, after 3 seconds the value will be confirmed automatically.
- 8. Adjusting the Weekly Programmable
Press to do the adjustment of weekly programmable.
Then press to change the different items. Press to set the relative values.

Your thermostat provides six scheduled heating and cooling periods each day – three Comfort periods - 1, 3 & 5 (the temperature required when room is occupied) and three Economy periods – 2, 4 & 6 (the temperature required when room is unoccupied). You can set both the time and temperature for each of these six daily periods. Adjusting/setting the schedules can only be carried out when in program mode;
Touch to change between manual mode and programme mode.
In the manual mode, will display in the bottom of the screen In programmable mode, touch the icon until the weekday schedule setting appear (12345 will show along the left of the screen).
Use the and arrows to adjust the on time.
period Press the icon and use the and arrows to set the temp. for the 1st period. Repeat this process for periods 2 – 6. Press the icon once more to enter the weekend schedule settings (6 & 7 will show along the top of the screen). Repeat the above process to set the weekend schedule.

Press once more to confirm and exit.

Default settings for program schedule

Time display	WEEKDAY (MONDAY – FRIDAY) (1 2 3 4 5 shows on screen)		WEEKEND (SATURDAY) (6 shows on screen)		WEEKEND (SUNDAY) (7 shows on screen)	
	TIME	TEMPERATURE	TIME	TEMPERATURE	TIME	TEMPERATURE
Period 1	06:00	20 °C	06:00	20 °C	06:00	20 °C
Period 2	08:00	15 °C	08:00	20 °C	08:00	20 °C
Period 3	11:30	15 °C	11:30	20 °C	11:30	20 °C
Period 4	13:30	15 °C	13:30	20 °C	13:30	20 °C
Period 5	17:00	22 °C	17:00	20 °C	17:00	20 °C
Period 6	22:00	15 °C	22:00	15 °C	22:00	15 °C

In the mode of programmable, set temp., time and timing on/off could not be adjusted.

9.Setting the Functions and Options

When power is off, press and hold at the same time for 5 sec. in order to reach system function. Then press to change the different items.
All the settings will confirm automatically when power is on.

Code	Function	Setting and options	Default
1	Temperature compensation	-9 to 9 °C	-3
2	Fan control	00: When room temp. reaches the set point, the fan will turn off 01: When room temp. reaches the set point, the fan will keep low speed running	00
3	Button Locking	00: All buttons are locked except power button. 01: All buttons are locked.	1
4	Mode Select Custom	00: Cooling / Ventilation. 01: Cooling / Heating / Ventilation.	1
5	Min. Set Temp.	5-15°C	5
6	Max. Set Temp.	15-45°C	35
7	Display Mode	00: Display both set temp. and room temp. 01: Display set temp. only	00
8	Room card function	00: No room card energy saving work 01: No room card thermostat closed	00
9	Heating Energy-saving temperature	10-30°C	20
10	Cooling Energy-saving temperature	10-30°C	26
11	Daytime display brightness	0-8	1
12	Night display brightness	0-8	1
13	Deadzone Temp.	1-5 °C	1
14	The special effect of the standby light ring	0: no light ring 1: The light ring is fully bright after rotation 2: The light ring is always on 3: The light ring keeps rotating	1
15	Version number		U7

ABOUT WIFI

WI-Fi Connection

Before using your Wi-Fi thermostat for the first time, you must configure the Wi-Fi signal and settings using your smartphone or tablet. This enables communication between your devices.



Step 1 Download your APP (Fig1-1)





Search for "Smartlife" in Apple Store or Google Play or use a browser to scan the QR code above (Figure 1-2), and complete account registration and installation according to the guidance of the APP.

Step 2. Connect the thermostat

Method 1: Bluetooth network distribution (Fig 2.1-Fig 2.6)
Turn on the Bluetooth switch of the mobile phone and set the thermostat to the WiFi enabled state, see the following tutorial to complete the connection and settings.

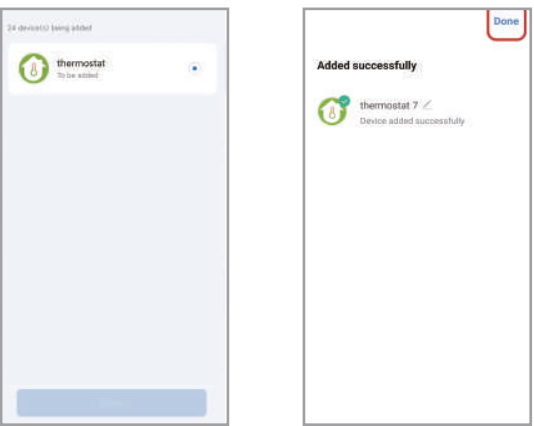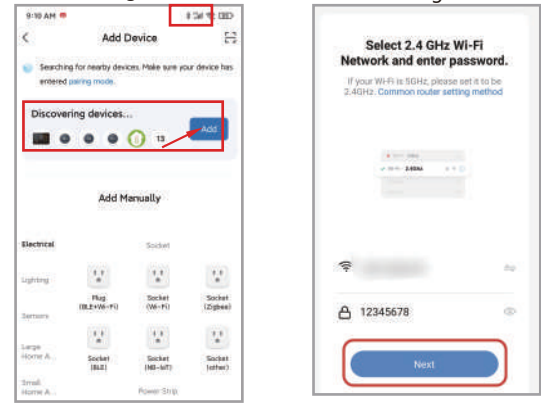


Method 2: Scan the QR code to configure the network guide (Fig 2.2 & Fig 2.7-Fig 2.8) complete the connection and setup

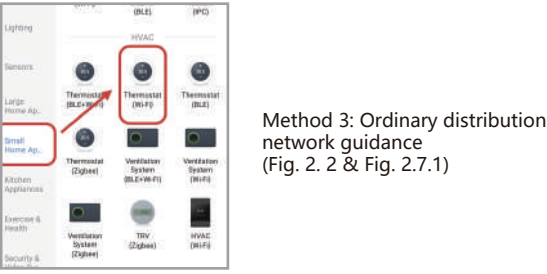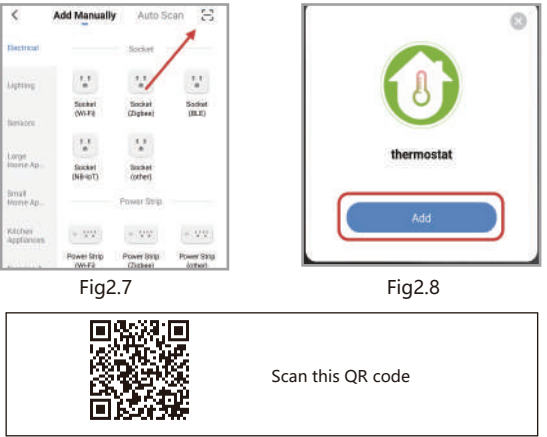




Method 3: Ordinary distribution network guidance (Fig. 2. 2 & Fig. 2.7.1)

Network distribution mode:

1. EZ Mode
Press and hold the " ≡ " until the thermostat screen flashes quickly and displays the " " icon, and then operate according to the following figure (Fig 2.9-Fig 2.13).

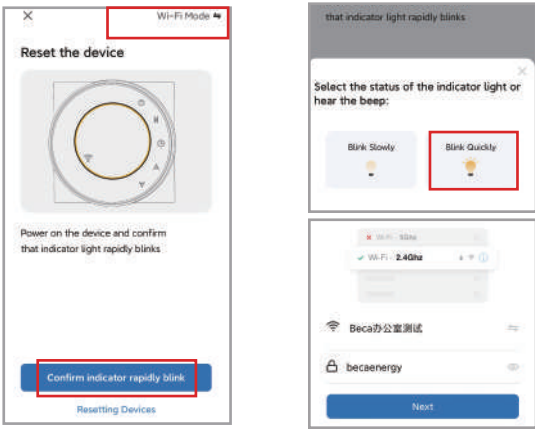


2、AP Mode
When the thermostat is off, press and hold the " ≡ " until the thermostat screen flashes slowly and the " " icon is displayed (if the " " icon appears, continue to press the " ≡ " until the thermostat screen Flashes slowly and displays the " " icon), and then operate according to the following figure (Fig 2.14-Fig 2.19).

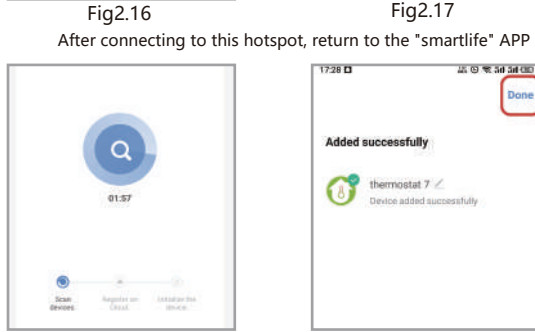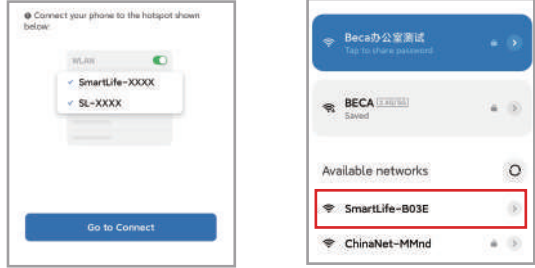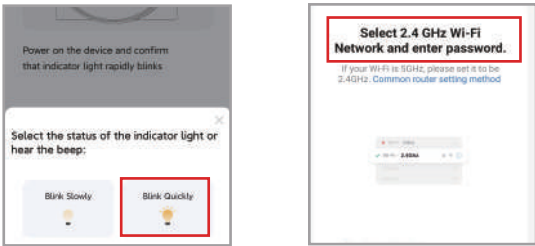

APP operation interface description (FCU thermostat)



More settings

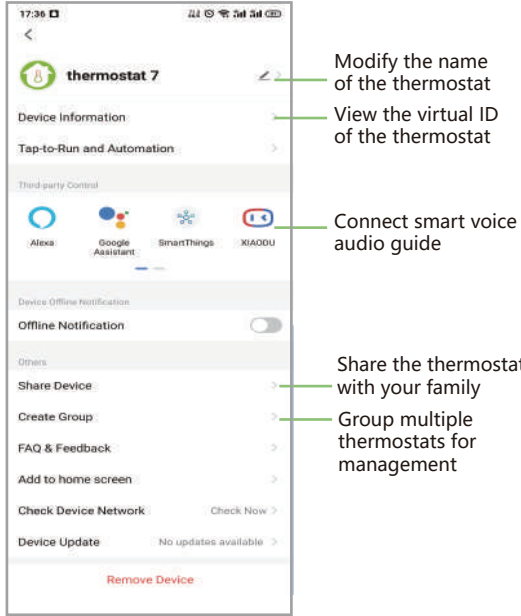

Simplement Exception Handling

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosen.
2	Without output but display works.	* Use a new LCD panel or new Power Unit Box to replace the old one.
3	Room Temp. Is a little different from the actual.	*Do temperature calibration in item 1 of high senior options

Service

Your thermostat carries an 24 months warranty from date of purchase. Service out with the warranty period may incur a charge. More detail please contact with us directly.