# WiFi Access Control

User Manual

## Introduction

This device is a WiFi based Touch Key Access Controller & RFID Reader. Users can unlock remotely through TuyaSmart or Smartlife app, they access the door with their smartphone. The APP supports 500 mobile users, and can manage 1000 users (Fingerprint / PIN / Card) maximum by the APP.

## APP Operation

Here are just a few steps to get you started.
1.) Free APP Downloading
Search TuyaSmart or Smartlife on Google Play or APP Store

2.)Make sure WiFi works on your mobile phone.

### 1. Register & Login

(Make sure the registered email is legal and valid, so that you can recover your password once forgotten. **Mobile Number is for China Mobile ONLY**)

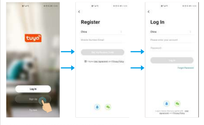

You will get a verification code in your mail box.



### 2. Add Device

You can add device by clicking 'Add Device' or clicking '+' on the top.
(It is suggested to turn on the Bluetooth, it's easier to find the device and faster to add device )

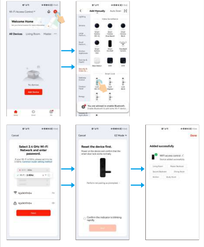



**Note: To better manage the devices and family members, you will need to create a HOME before you begin to manage this device.**

**Attention: When the user first Open the lock through APP, APP will ask you to Switch on 'remote unlock' first**

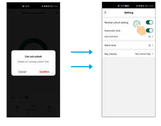



### 3. Member Management

Note: The first to add the device is the Home Owner (Super Master)

| Authority | Home Owner (Super Master) | Administrator | Ordinary member |
|---|---|---|---|
| Open the door | √ | √ | √ |
| Member Management | √ | √ | X |
| User Management | √ | √ | X |
| Set Users as Admin | √ | X | X |
| View All Records | √ | √ | X |
| Set Relay Time | √ | X | X |

### 4. User Management

**4.1 Add Members**
(Note: The members that you shared to must register the account first.)

Remark: When adding members, the Owner (Super Master) can decide to add the user as Admin or Ordinary member.

**4.2 Manage Members**
Owner(Super Master) can decide effective time (Permanent or Limited) of the members.

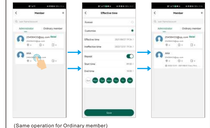

(Same operation for Ordinary member)



**4.3 Delete Members**

**4.4 Add Users (Fingerprint/ PIN / Card Users)**
The APP supports to Add/Delete Fingerprint / PIN / Card users.

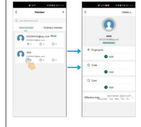



# Simplified Instruction

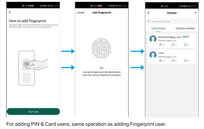

For adding PIN & Card users, same operation as adding Fingerprint user.

**4.5 Delete Users (Fingerprint / PIN / Card Users)**

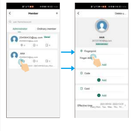

For deleting PIN & Card users, same operation as deleting Fingerprint user.

### 5. Temporary Code

The temporary code can be shared by SNS tools (Whatsapp, Skype, Wechat...) or email to the guest/users.

For Temporary Code, there are two types of it:
**Cyclicity**: For example, valid at 9:00am~6:00pm every Monday~Friday during August~October.

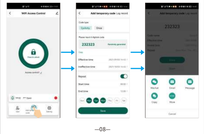



**Once:** One-time code can be valid in 6 hours and can be used only for once.

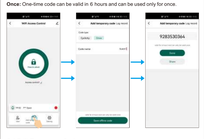

**5.1 Edit Temporary Code**

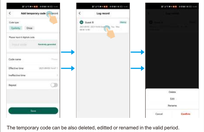

The temporary code can be also deleted, edited or renamed in the valid period.



### 6. Setting

**6.1 Remote unlock setting**
**Default is off.** When added the device first time, it will ask to turn on. Once turn off, all the mobile users will not be able to access the lock by APP.

**6.2 Automatick Lock**
**Default is on.**
Automatic Lock on: Pulse Mode
Automatic Lock off: Latch Mode

**6.3 Auto lock time**
**Default is 5 seconds.** It can be set from 0~100 seconds.

**6.4 Alarm time**
**Default is 1 minutes.** It can be set from 1~3 minutes.

**6.5 Key Volume**
It can set Key Volume Mute, Low, Middle and High.

### 7. Log (Including Open History and Alarms)

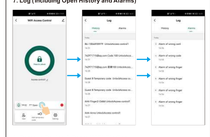

### 8. Remove Device & Reset WiFi Binding

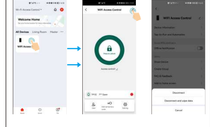



**Note:**

**Disconnect** is just removing the device from the APP. The users (card / fingerprint /code) are still retained. (If Super Master Disconnected, all other members will have no access to the device)

**Disconnect and wipe data** is unbinding the device and reset WiFi.. (Means this device can be connected by other new users)

**Method 2 to reset the WiFi**
*** ( Master Code) # -** Default Master Code is **123456**
**9 ( Master Code) #**

(To change the Master Code, please refer to another user manual)

**ATTENTION:**

There are 3 features (Programming on the Device) that are NOT supported by the WiFi version
1. Card + PIN Mode
2. Card + FING Access Mode
3. Tips for PIN Security ---- It supports to hide your correct PIN with other numbers up to a max of 9 digits only.