INDOOR STATION

Operation Instructions




1. Call Record

2. Voice Message


3. Motion


4. Camera Record

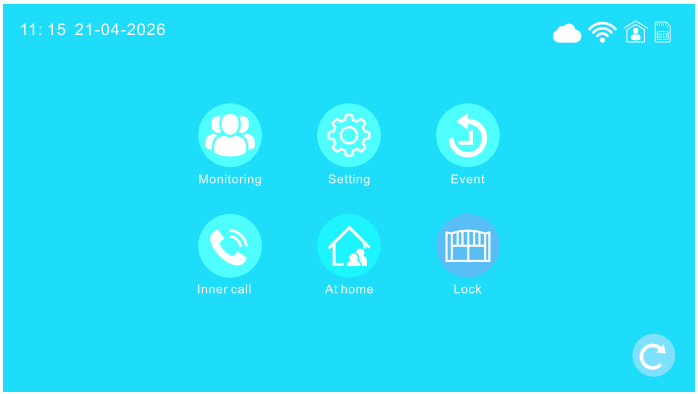

Monitoring: Real-time monitoring outside of the door.
Setting: Set the device
Event: Check all record (Include Call Record, Voice Message, Motion, Camera Record)
Inner Call: Call different rooms if there are also Indoor Screen
At home: There are three modes: At home, Not at home, Dormant. Click to change mode.
Lock: This function temporarily unavailable.


Device Setting

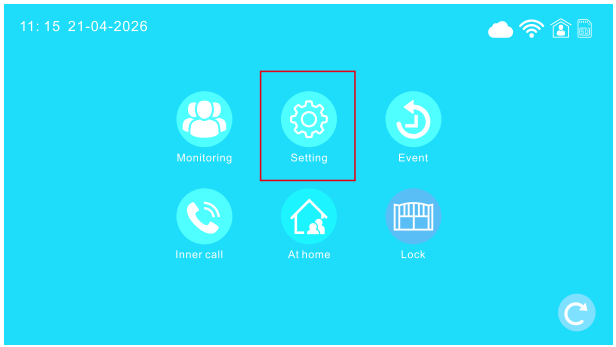

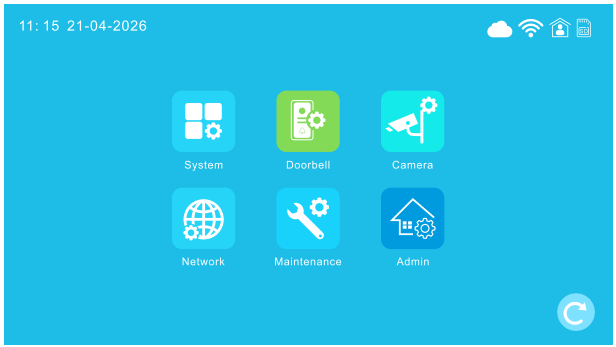


Setting includes System Setting, Doorbell Setting, Camera Setting, Network Setting, Maintenance, and Admin.

System Setting

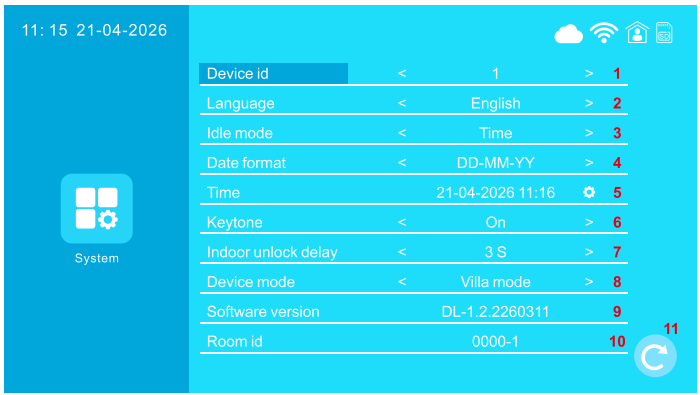


1. Select different device id
2. Select different language
3. Select Idle mode, Show Time or Screen off
4. Select different ways to display the year, month and day
5. Set the time
6. Turn on/off the keytone
7. Delay time: 1~10s
8. Select different mode: Villa mode, or Building mode
9. Show software version
10. Show Room id
11. Return to the previous menu

Doorbell Setting

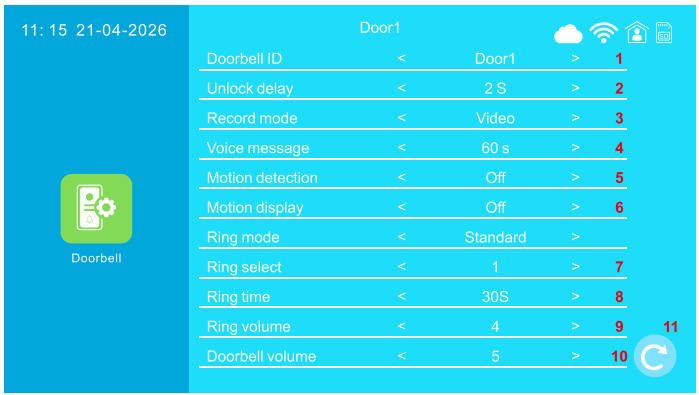

1. Set door station ID
2. Delay time: 0.5~10s
3. Select video or snapshot
4. Voice message: 120s max.
5. Turn on/off motion detection
6. Turn on/off motion display
7. Select different ring voice for Indoor Screen
8. Ring time: 1~60s
9. Ring volume of Indoor Screen: off or 1~10 level
10. Ring Volume of Door Station: off or 1~10 level
11. Return to the previous menu

Camera Setting:

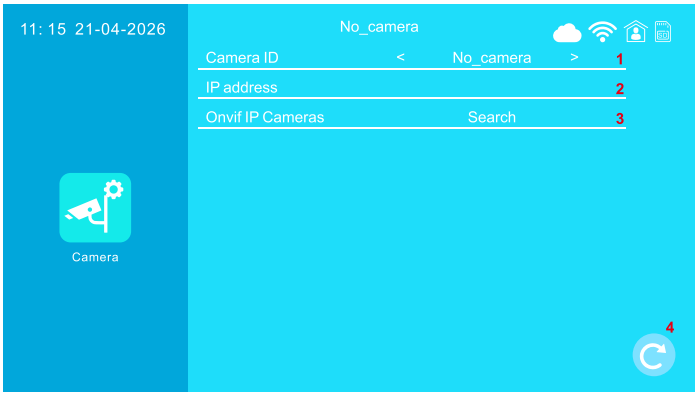

1. Select Camera ID
2. Show Camera IP address
3. Search Camera and add
4. Return to the previous menu


Network Setting

(Connect Indoor Screen to WiFi at first, then we could add it by Tuya APP):




1. Click QR code, then the QR code will show out at the bottion, open Tuya APP to scan QR code to add Video Intercom
2. Show if cloud services connected
3. Show IP Address
4. Show MAC
5. UUID of Indoor Screen
6. Select WiFi and Connect.
7. Return to the previous menu


Maintenance

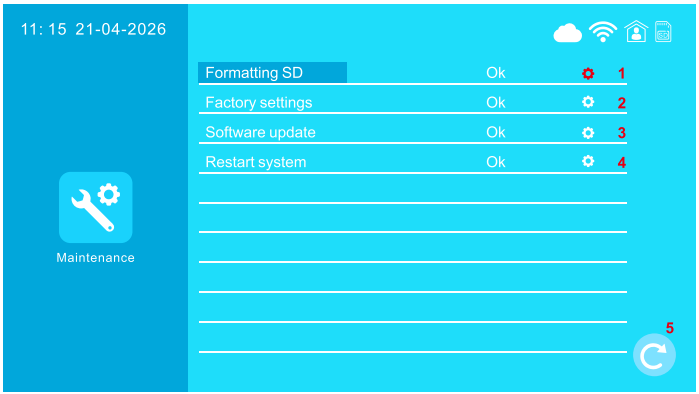

1. If we insert a SD card, we could click it to format the SD card
2. Restore factory Settings
3. Click to update software if needed
4. Restart system
5. Return to the previous menu

Admin Setting

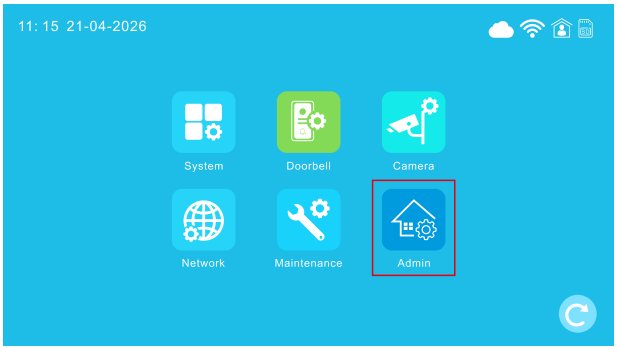

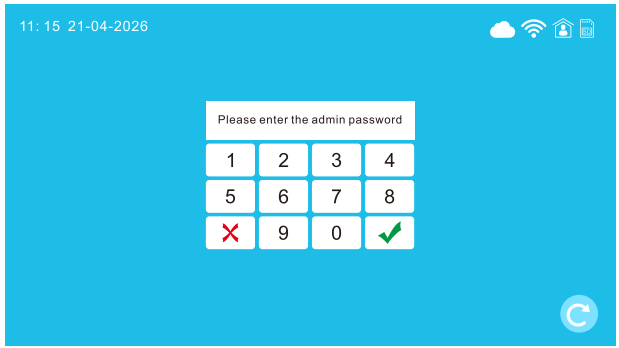

Input default admin password (666666) to set new admin password, check device information, and erase all data.

Precautions for Power Supply

POE Connection

