CONTENTS

INTRODUCTION 1
INSTALLATION 3
STANDALONE MODE 5
CONTROLLER MODE 12
WIEGAND READER MODE 14
ADVANCED APPLICATION 15

INTRODUCTION

The device is an embedded single door multifunction standalone access controller or a Wiegand output reader. It uses Atmel MCU assuring stable performance.
The operation is very user-friendly, and low-power circuit makes it long service life.

The device can be made with WIFI version.

Features

> Capacitive fingerprint sensor, Touch key
> Metal case, anti-vandal
> Waterproof, conforms to IP67
> PIN length: 4~6 digits
> EM card, EM+ Mifare cards optional
> EM card: Wiegand 26~44 bits input & output
Mifare card: Wiegand 26~44bits, 56bits, 58bits input & output
> Can be used as Wiegand reader with LED & buzzer output
> Card block enrollment
> Tri-color LED status display
> Integrated alarm & buzzer output
> Pulse mode, Toggle mode
> User data can be transferred (except fingerprint users)
> 2 devices can be interlocked for 2 doors
> Built-in light dependent resistor (LDR) for anti tamper
> Backlit keypad, can set automatic OFF after 20 seconds

Specifications


User Capacity	**10500**
Common Card/PIN User	9988
Fingerprint User	500
Panic User	2
Visitor User	10
Operating Voltage	**12~18V DC**
Working Current	≤150mA
Idle Current	≤60mA
Proximity Card Reader	**EM / EM + Mifare**
Radio Technology	125KHz / 125KHz + 13.56MHz
Read Range	2~6 cm
PIN Length	**4~6 digits**
Wiring Connections	**Relay Output, Exit Button, Alarm, Door Contact, Wiegand Input, Wiegand Output**
Relay	**One (NO, NC, Common)**
Adjustable Relay Output Time	0~99 Seconds (5 seconds default)
Lock Output Load	2 Amp Maximum
Wiegand Interface	**EM card: Wiegand 26~44 bits input & output,** **Mifare card: Wiegand 26~44bits 56bits, 58bits input & output.** (Factory default: Wiegand 26bits for EM card, Wiegand 34bits for Mifare card)
PIN Output	**4 bits, 8 bits(ASCII), 10 digits Virtual Number** (Factory Default: 4 bits)
Environment	**Meets IP67**
Operating Temperature	-30°C ~ 60°C (-22°F ~ 140°F)
Operating Humidity	0%RH~98%RH
Physical	**Stainless Steel**
Colour	Silver & Black
Dimensions	115*70*25mm
Unit Weight	240g
Shipping Weight	270g

Carton Inventory



INSTALLATION

- Drill 2 holes(A,C) on the wall for the screws and one hole for the device
- Knock the supplied rubber bungs to the screw holes(A,C)
- Thread the cable through the hole(B)
- Attach the unit to the hole(B)
- Fix the unit firmly on the wall with 2 flat head screws
- Cover the screws by Screw Cover Stickers



Wiring (for Slim device)

Wire Color	Function	Notes
Basic Standalone Wiring		
Red	DC+	12V DC Power Input
Black	GND	Negative Pole of DC Power Input
Blue1	Relay NO	Normally Open Relay Output (install diode provided)
Purple	Relay Common	Common Connection for Relay Output
Orange	Relay NC	Normally Closed Relay Output (install diode provided)
Yellow	OPEN	Request to Exit(REX) Input
Pass-Through Wiring (Wiegand Reader or Controller)		
Green	Data 0	Wiegand Output (Pass-through) Data 0
White	Data 1	Wiegand Output (Pass-through) Data 1
Advanced Input and Output Features		
Grey	Alarm Output	Negative contact for Alarm
Brown	Contact Input	Door/Gate Contact Input (Normally Closed)
WIFI Version with Doorbell		
Blue2	Doorbell A	Contact for Doorbell
Blue3	Doorbell B	Contact for Doorbell

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	—
Enter into programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	—	Three beeps
Exit from the Programming mode	Red light bright	One beep
Open lock	Green light bright	One beep
Alarm	Red light Shines quickly	Beeps

Basic Configure

Enter and Exit Program Mode

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code) # (Factory default is 123456)
Exit Program Mode	*

Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6-digits)
3. Exit Program Mode	*

Set the Working Mode

Notes: The device has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use. (Factory default is Standalone Mode / Controller Mode)


Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Standalone/Controller Mode OR 2. Wiegand Reader Mode	7 7 # (Factory default) 7 8 #
3. Exit	*

STANDALONE MODE

The device can work as Standalone Access Control for single door. (Factory default mode) — 7 7 #


Connection Diagram

Common Power Supply



Attention:
Install a 1N4004 or equivalent diode is needed when use a common power supply, or the keypad might be damaged, (1N4004 is included in the packing)

Access Control Power Supply

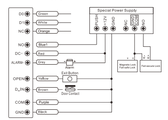

Programming

Programming will be vary depending on access configuration. Follow the instructions according to your access configuration.

Notes:
> User ID number: Assign a user ID to the access fingerprint/ card/ PIN in order to track it.

> User ID number:
The Common Card/PIN User ID: 1~9988
Panic User ID: 9989~9990
Visitor User ID: 9991~10000
Fingerprint User ID: 10001~10500

IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.

> Proximity Card:
Proximity Card: EM card/ EM+ Mifare cards

> PIN: Can be any 4~6 digits.

Add Common Users
(Fingerprint user ID:10001~10499; PIN/ Card user ID:1~9988; PIN length: 4~6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Add Fingerprint User	
2. Using Auto ID (Allows the device to assign Fingerprint to next available User ID number) OR 2. Select Specified ID (Allows Master to define a specific User ID to associate the fingerprint(s))	1 (Fingerprint) (Repeat Fingerprint again) Fingerprints can be added continuously. 1 (User ID) # (Fingerprint) (Repeat Fingerprint again) Fingerprints can be added continuously.
3. Exit Program Mode	*

Add Control User

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Add Control User	
2. Using Auto ID (Allows the device to assign Control User to next available User ID number) OR 2. Select Specified ID (Allows Master to define a specific User ID to associate the Control User)	1 (Control User) / (Input 8/10/17 Digits Card Number) # The cards can be added continuously. 1 (User ID) # (Read Card) / (Input 8/10/17 Digits Card Number) #
3. Exit Program Mode	*

Add PIN User

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)	1 (User ID) # (PIN) #
3. Exit	*

Tips for PIN Security (Only valid for 6 digits PIN):

For higher security we allow you to hide your correct PIN with other numbers up to a max of 10 digits.

Example PIN: 123434
You could use "*(123434) *" or "* (123434)
(*" can be any numbers from 0~9)

Add Master Fingerprint (By Specified ID:10500)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
1. Add Master Fingerprint	1 (10500) # (Fingerprint) (Repeat Fingerprint) (Repeat Fingerprint again)
3. Exit	*

Add Panic Users (Valid for Card/ PIN Users)
(User ID number is 9989/9990 PIN length: 4~6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card OR 2. Add PIN	1 (User ID) # (Read Card / Input 8/10 /17 Digits Card number) # 1 (User ID) # (PIN) #
3. Exit	*

Add Visitor Users (Valid for Card/ PIN Users)
(User ID number is 9991~10000 PIN length: 4~6 digits)
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card become invalid automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card OR 2. Add PIN	1 (User ID) # (0~9) # (Read Card) / (Input 8/10/17 Digits Card Number) # 1 (User ID) # (0~9) # (PIN) # (0~9 means times of usage, 0=10 times)
3. Exit	*

Change PIN Users(PIN length: 4~6 digits)

Programming Step	Keystroke Combination
Note: Below is done outside programming mode, users can undertake this themselves	
Change PIN	* (User ID) # (Old PIN) # (New PIN) # (Repeat New PIN) #

Delete Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Delete User- By Fingerprint/ Card OR 2. Delete User - By ID number OR 2. Delete User - By Card number OR 2. Delete ALL Users	2 (Input Fingerprint)/ (Read Card) # The users can be deleted continuously. 2 (User ID) # 2 (Input 8/10/17 Digits Card Number) # 2 (User Code) #
3. Exit	*

Set Relay Configuration
The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode OR 2. Toggle Mode	3 (1~99) # (factory default) The relay time is 1~99 seconds. Default is 5 seconds) 3 0 # Sets the relay to ON/OFF Toggle mode
3. Exit	*

Set Access Mode
For Multi user access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card Access OR 2. PIN Access OR 2. Fingerprint Access	4 0 # 4 1 # 4 2 #

Simplified Instruction

Function Description	Operation
Enter the Programming Mode	* - Master Code - # then you can do the programming (123456 is the factory default master code)
Change the Master Code	0 - New Code - # - Repeat the New Code - # (code: 6 digits)
Add Card User	1 - Read Card - # (can add cards continuously)
Add Fingerprint User	1 - Fingerprint - Repeat Fingerprint - Repeat Fingerprint Again - #
Add PIN User	1 (User ID) - PIN - # (The PIN is any 4~6 digits)
Delete User	2 - Fingerprint - # 2 - Read Card - # 2 - User ID - #
Exit from the Programming Mode	*
How to release the door	
Fingerprint User	Input Fingerprint
Card User	Read Card
PIN User	Input PIN #
Lock Immediately: Press "0 #"	

20260715_V1

2 Multi User Access	4 3 (2~9) # (Only after 2~9 valid users, the door be opened)
OR 2 Fingerprint or Card or PIN Access	4 3 # (factory default)
3. Exit	*

Set Strike-out Alarm
The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid Fingerprint/ card/ PIN or Master code/ fingerprint/ card.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Strike-Out OFF OR 2. Strike-Out ON OR 2. Strike-Out ON (Alarm) Set Alarm Time	6 0 # (factory default) 6 1 # Access will be denied for 10 minutes (Exit button is still workable) 6 2 # 5 (0 ~ 3) # (factory default is 1 minute) Enter Master Code # or Master Fingerprint / Card or valid user fingerprint / card / PIN to silence
3. Exit	*

Set Door Open Detection
Door Open Too Long (DOTL) Detection
When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door. The beep can be stopped by closing the door, master users or valid users, or else, it will continue to beep the same time with the alarm time set.

Door Forced Open Detection
When use with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened by force, the inside buzzer and external alarm (if there is) will both operate, they can be stopped by master users or valid users, or else, it will continue to sound the same time with the alarm time set.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Door Open Detection OR 2. Enable Door Open Detection Set Alarm Time	6 3 # (factory default) 6 4 # 5 (0 ~ 3) # (factory default is 1 minute)
3. Exit	*

The function of **Set Alarm Time** also apply for anti-tamper alarm

Set Alert Notification (Only apply to Wi-Fi devices)
When turn ON, the APP will receive real-time alerts for:
- Door Open Too Long
- Door Forced Open
- Strike-Out (10 failed entry attempts)
- Panic User Open
- Anti-tamper

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Alert Notification OFF Alert Notification ON	6 5 # 6 6 # (factory default)
3. Exit	*

Set Audible and Visual Response

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Sound OR Enable Sound OR 2. LED Always OFF LED Always ON OR 2. Keypad Backlit Always OFF Keypad Backlit Always ON Keypad Backlit Automatic OFF	7 0 # 7 1 # (factory default) 7 2 # 7 3 # (factory default) 7 4 # 7 5 # 7 6 # (factory default) Automatic OFF after 20 seconds, it will go ON by pressing any key (this key isn't taken into consideration)
3. Exit	*

Master Fingerprint/ Card Usage

Using Master Fingerprint/ Card to add and delete users	
Add Fingerprint/ Card/ PIN Users	1. Input (Master Fingerprint / Card) 2. Input (Fingerprint three times) or (Card) or (User ID#PIN#) Repeat step 2 for additional users 3. Input (Master Fingerprint / Card) again
Delete Fingerprint/ Card/ PIN Users	1. Input (Master Fingerprint/ Card Twice within 5s) 2. Input (Fingerprint) or (Card) or (User ID#) Repeat step 2 for additional users 3. Input (Master Fingerprint/ Card) again

Users Operation & Reset to Factory Default
> Open the door: Read valid user fingerprint or user card or input valid user PIN #
> Lock immediately: Press "0 #"
> Remove Alarm: Enter Master Code # or Master Fingerprint/ Card or valid user fingerprint / card / PIN


> To reset to factory default & Add Master Card: Power off, press the Exit Button, hold it and power on, there will be two Beeps, then release the exit button, the LED light turns into yellow, then read any 125KHz EM card/ 13.56MHz Mifare card, the LED will turn into red, means reset to factory default successfully. Of the card reading, it is the Master Card.

Remarks:
① If no Master Card added, must press the Exit Button for at least 5 seconds before release.(this will make the previous registered Master Card invalid)
② Reset to factory default, the user's information is still retained.

CONTROLLER MODE

The device can work as Controller, connected with the external Wiegand reader. (Factory default mode) — 7 7 #

Connection Diagram

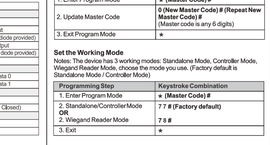

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the reader might be damaged, (1N4004 is included in the packing)

Wiegand Input Formats
The controller will automatically defect the Wiegand format of the external card reader.

Programming
> Basic Programming is the same as Standalone Mode
> There are some exceptions for your attention:
The device Connected with External Card Reader
• If EM/Mifare card reader: users can be added/deleted on either the device or external reader.
• If HID card reader : users can only be added/deleted on external reader.

The device Connected with Fingerprint Reader
For example:
Connect SF1 as the fingerprint reader to the device.
Step 1: Add the Fingerprint (A) on SF1 (Please refer to SF1 manual)
Step 2: Add the same Fingerprint(A) on the device:

1	Enter Program Mode: * (Master Code) #
2	1 (Press Fingerprint A once on SF1) # (ID auto allocated)
OR 2	1 (User ID) # (Press Fingerprint A on SF1) # (Select specific ID)
3	Exit: *

The device Connected with Keypad Reader
The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format.
Choose the below operation according to the PIN output format of your reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. PIN input bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.


> Add PIN Users:
To add PIN users, after enter into programming mode on the device, PIN(s) can be input/ added on either the device or the external Keypad Reader.

> Delete PIN Users: the same way as add users,

WIEGAND READER MODE

The device can work as Standard Wiegand Reader, connected to the third party Controller — 7 8 #

Connection Diagram



Notes:
> When set into Wiegand Reader mode, nearly all settings in Controller Mode will become invalid, and Brown & Yellow wires will be redefined as below:
• Brown wire: Green LED light control
• Yellow wire: Buzzer control

> If you need to connect Brown/Yellow wires:
When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound.

Set Wiegand Output Formats
Please set the Wiegand output formats of Reader according to the Wiegand input formats of the Controller.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Wiegand output bits	For EM Card: 8 (26~ 44) # (factory default is 26bits) For Mifare Card: 8 0 (26~44, 56, 58) # (factory default is 34bits)
PIN output bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Disable Parity Bit Enable Parity Bit	8 0 # 8 1 # (factory default)
4. Exit	*

Note: For connecting Wiegand controller with 32, 40, 56 bits input, need disable parity bits.

ADVANCED APPLICATION

Disable Reading Card
When read EM+MF composite cards, please disable at least one type of card as below.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable EM Card Disable Mifare Card	8 9 9 # 8 9 9 # (After setting the card's output format, the card reading function will be automatically enabled (Factory default: EM card- Wiegand 26bits, Mifare card- Wiegand 34bits))
3. Exit	*


Collection Card Mode
After this mode is turned on, all cards can open the lock. At the same time, the card is added to the device.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #

2. Collection Card Mode OFF	9 2 # (factory default)
OR 2. Collection Card Mode ON	9 3 #
3. Exit	*

User Information Transfer (Valid for Card / PIN Users)
The device supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to another (let's name it Accept Unit).

Connection Diagram:



Remarks:
> The Master units and Accept units must be same series devices.
> The Master Code of the Master Unit and the Accept Unit must be set to the same.
> Program the transfer operation on Master Unit only.
> If the Accept Unit is already with the users enrolled, it will be covered after transferring.
> For full users enrolled, the transfer takes about 30 seconds.

Set Transferring on Master Unit:

Programming Step	Keystroke Combination
1. Enter the programming mode	* (Master Code) #
2. Set transferring	9 8 #

Within 30 seconds, Green LED shines, after one beep, the LED will turn into Red, which means the users' information has been transferred successfully.

3. Exit	*

Interlock
The device supports the Interlock Function. It is of two Devices for two doors, and mainly used for banks, prisons, and other places where a higher level security is required.

Add Panic Users (Valid for Card/ PIN Users)
(User ID number is 9989/9990 PIN length: 4~6 digits)

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card OR 2. Add PIN	1 (User ID) # (Read Card / Input 8/10 /17 Digits Card number) # 1 (User ID) # (PIN) #
3. Exit	*


Add Visitor Users (Valid for Card/ PIN Users)
(User ID number is 9991~10000 PIN length: 4~6 digits)
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card become invalid automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card OR 2. Add PIN	1 (User ID) # (0~9) # (Read Card) / (Input 8/10/17 Digits Card Number) # 1 (User ID) # (0~9) # (PIN) # (0~9 means times of usage, 0=10 times)
3. Exit	*

Change PIN Users(PIN length: 4~6 digits)

Programming Step	Keystroke Combination
Note: Below is done outside programming mode, users can undertake this themselves	
Change PIN	* (User ID) # (Old PIN) # (New PIN) # (Repeat New PIN) #

Connection Diagram:



Remarks: The Door Contact must be installed and connected as the diagram,
Let's name the two Devices as "A "and "B" for two doors "1" and "2"

Step 1:
Enroll the users on Device A, then transfer the users' information to Device B by "User Information Transfer" function.

Step 2:
Set both of the two Devices (A and B) to Interlock function

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Disable Interlock OR 2. Enable Interlock	9 0 # (factory default) 9 1 #
3. Exit	*

If enable interlock, when and only door 2 is closed, the user can read the valid fingerprint/card or input PIN on Reader A, door 1 will open; then when and only door 1 closed,read valid fingerprint/card or input PIN on Reader B, door 2 will open.

Embedded FingerKey Reader

(Big User Capacity: 10000+500)

User Manual