


AI. X



1
2

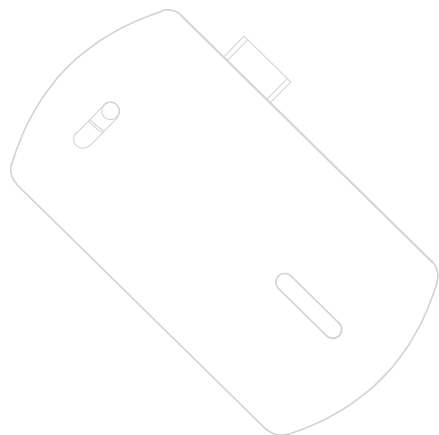

Bluetooth unlock

1.Parameters

Series	AI.X
Applicable place	Wooden cabinets, wooden drawers, etc.
Material	ABS plastic
Functions	Bluetooth/Card
Battery type	AA battery * 3
Color	Black
Power input	4.5V

2.Parts list

Name	Quantity	Image
AI.X	1	
Allen key	1	
Card	3	
User manual	1	
Screw bag	1	

3.Product overview



Bluetooth unlock

4.Install guide



(1).Mark installation area first



(2).Install the lock and fix the screw



(3).Install the locking plate and fix the screw



(4).Load the battery, and fix the battery cover

5.Setting

Card overview:

Up to 20 M1 cards can be registered, ID1—ID3 is the management card, and the rest are user cards. In the initial state, any M1 card can be unlocked.

A.Register first admin card

Press setting key 1 time, wait for 3 s, The M1 card is swiped within 10 seconds, and the first management card is successfully registered. You can register continuously until the capacity is full, then press setting key once to exit.

B.Register other Admin card

Press setting key 1 time, wait for 3 s, then verify the Admin card. After the verification is passed, the M1 card is swiped within 10 seconds, and the management card is successfully registered. Only one Admin card can be registered at a time. Swipe the same card to delete.

C.Register User card

Press setting key 2 time, wait for 3 s, then verify the Admin card. After the verification is passed, the user card can be registered by swiping the M1 card. Can be registered continuously until the capacity is full, or timeout. If you swipe the same card again, then is to delete the card



Bluetooth unlock

D.Delete User card:

Press setting key 3 time, wait for 3 s, then verify the Admin card. After the verification is passed, then delete all the User card.

E.Reset:

Press setting key 4 time, wait for 3 s, then verify the Admin card. After the verification is passed, then delete all the User card and restore to factory state.

F.Open/Close Bluetooth:

Press setting key 5 time, open/close Bluetooth.

G.Channel mode:

Swipe the registered card, after unlock then swipe the same card again to make the lock stay OPEN, swipe again to close channel mode.

H.Low battery alarm:

When the battery lower than 3.3V, will have the low battery alarm, if lower battery alarm for 10 times, the lock will not be locked, please replace the battery ASAP.

I.5 times locked setting:

If swipe the not registered card for 5 consecutive times, the red light flashed 5 times, and the system was locked for 3 minutes. Swipe the registered card will clear the error log.

6.Download App



7.App operation

1)Sign up



2)Log in





3).Bind the device

Click to scan the QR code on the cabinet lock to bind the device



4).Unlock

Click the blue device to connect the Bluetooth, click to unlock (After 1 min Bluetooth will disconnect automatically)



5).Add/delete the Admin/User card

6).Click the blue device to connect the Bluetooth –Add /delete the Admin/User card by scan the QR code on the card



7).Clear ALL USER card

Click the blue device to connect the Bluetooth – Click “Clear cards” to clear all the registered user card



8.FAQ

A.How do we install?

3 M glue and Screw provided,
3 M glue require flat and clean surface, the best strength after standing for two hours after the paste is completed

B.QR code invalid?

Each device can be only bind in one account,after first one who bind,other user can not bind again until the Admin delete the device from his/her account.Other user can unlock by Admin authorization.

C.What if the cabinet no power left?

When the low battery alarm prompts more than 10 times or after no power, the locking tabs will automatically shrink and the lock will stay unlock statues.

D.“User does not exist” when adding permissions?

Please make sure that the authorized account has been downloaded and registered with Cabinet Lock App.

AI. X



APP Download